


Exploded Views and Parts List

EXPLODED VIEW AND PARTS LIST — MAIN UNIT

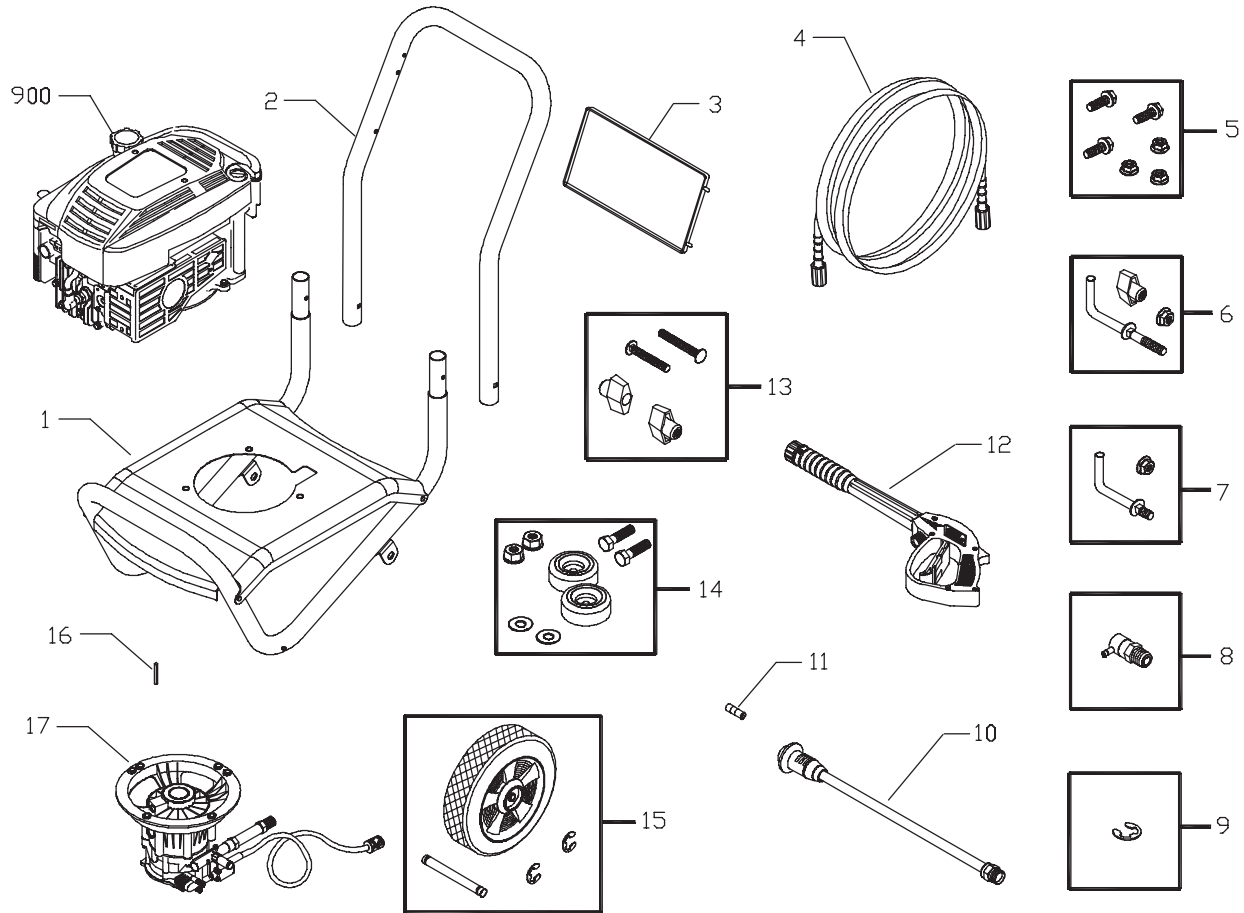


Item	Part #	Description	Item	Part #	Description
1	I92422GS	BASE	10	I88792HGS	WAND, Adjustable Nozzle
2	PI91874GS	HANDLE	11	21760GS	ORIFICE
3	I94613GS	ASSY, Billboard	12	BI862BGS	GUN
4	I90249GS	HOSE	13	B2203GS	KIT, Handle Connector
5	I92645GS	KIT, Pump Mounting Hardware	14	I92310GS	KIT, Vibration Mount
6	I94264GS	KIT, Hook, Handle	15	I94255GS	KIT, Wheel
7	I92309GS	KIT, Hook, Base	16	23139GS	KEY
8	I94298GS	VALVE, Thermal Relief	17	I94258GS	ASSY, Pump (see page 3)
9	I92050GS	KIT, E-Ring	900	NSP	ENGINE

Items Not Illustrated:

Part #	Description
I94620GS	MANUAL, Owner's
MS6847	MANUAL, Engine
I94256GS	KIT, Tag, Warning
BB3061BGS	OIL, Engine

Exploded Views and Parts List

EXPLODED VIEW AND PARTS LIST — PUMP

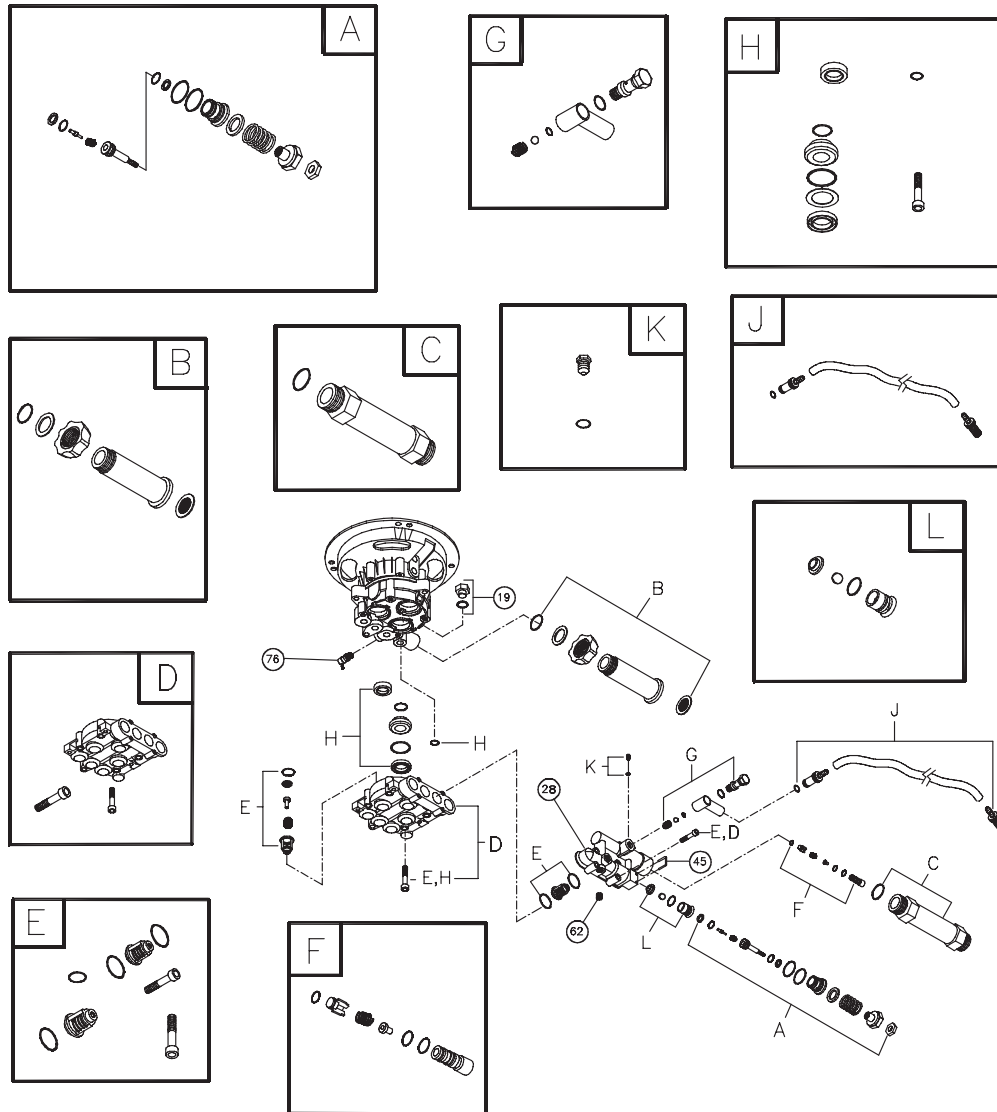

Item	Part #	Description	
	19	190571GS	CAP, Oil, 5.5 - 6.5 NM
	28	190627GS	MANIFOLD
	45	190578GS	PIN
	62	190581GS	CAP, 1/8
	76	194298GS	RELIEF, Thermal
	77	190586GS	OIL BOTTLE (not shown)
	A	190594GS	KIT, UNLOADER STEM
	B	190632GS	KIT, WATER INLET, ALUM
	C	190634GS	KIT, OUTLET, ALUM
	D	193808GS	KIT, HEAD BRASS

Item	Part #	Description	
	E	193806GS	KIT, CHECK VALVES
	F	190592GS	KIT, INLET CHECK
	G	190593GS	KIT, CHEMICAL INJECTION
	H	193807GS	KIT, SEAL SET
	J	189971GS	KIT, CHEMICAL HOSE
	K	193971GS	KIT, PIPE FITTING
	L	193972GS	KIT, UNLOADER SEAT

NOTE: Item letters A - L are service kits and include all parts shown within the box.