

BOLENS

HUSKY
TRACTOR
MODEL 1256-01

ILLUSTRATED PARTS CATALOG



BOLENS

PORT WASHINGTON, WISCONSIN, U.S.A.

PRINTED IN U.S.A.

TRACTOR ASSEMBLY MODEL 1256-01

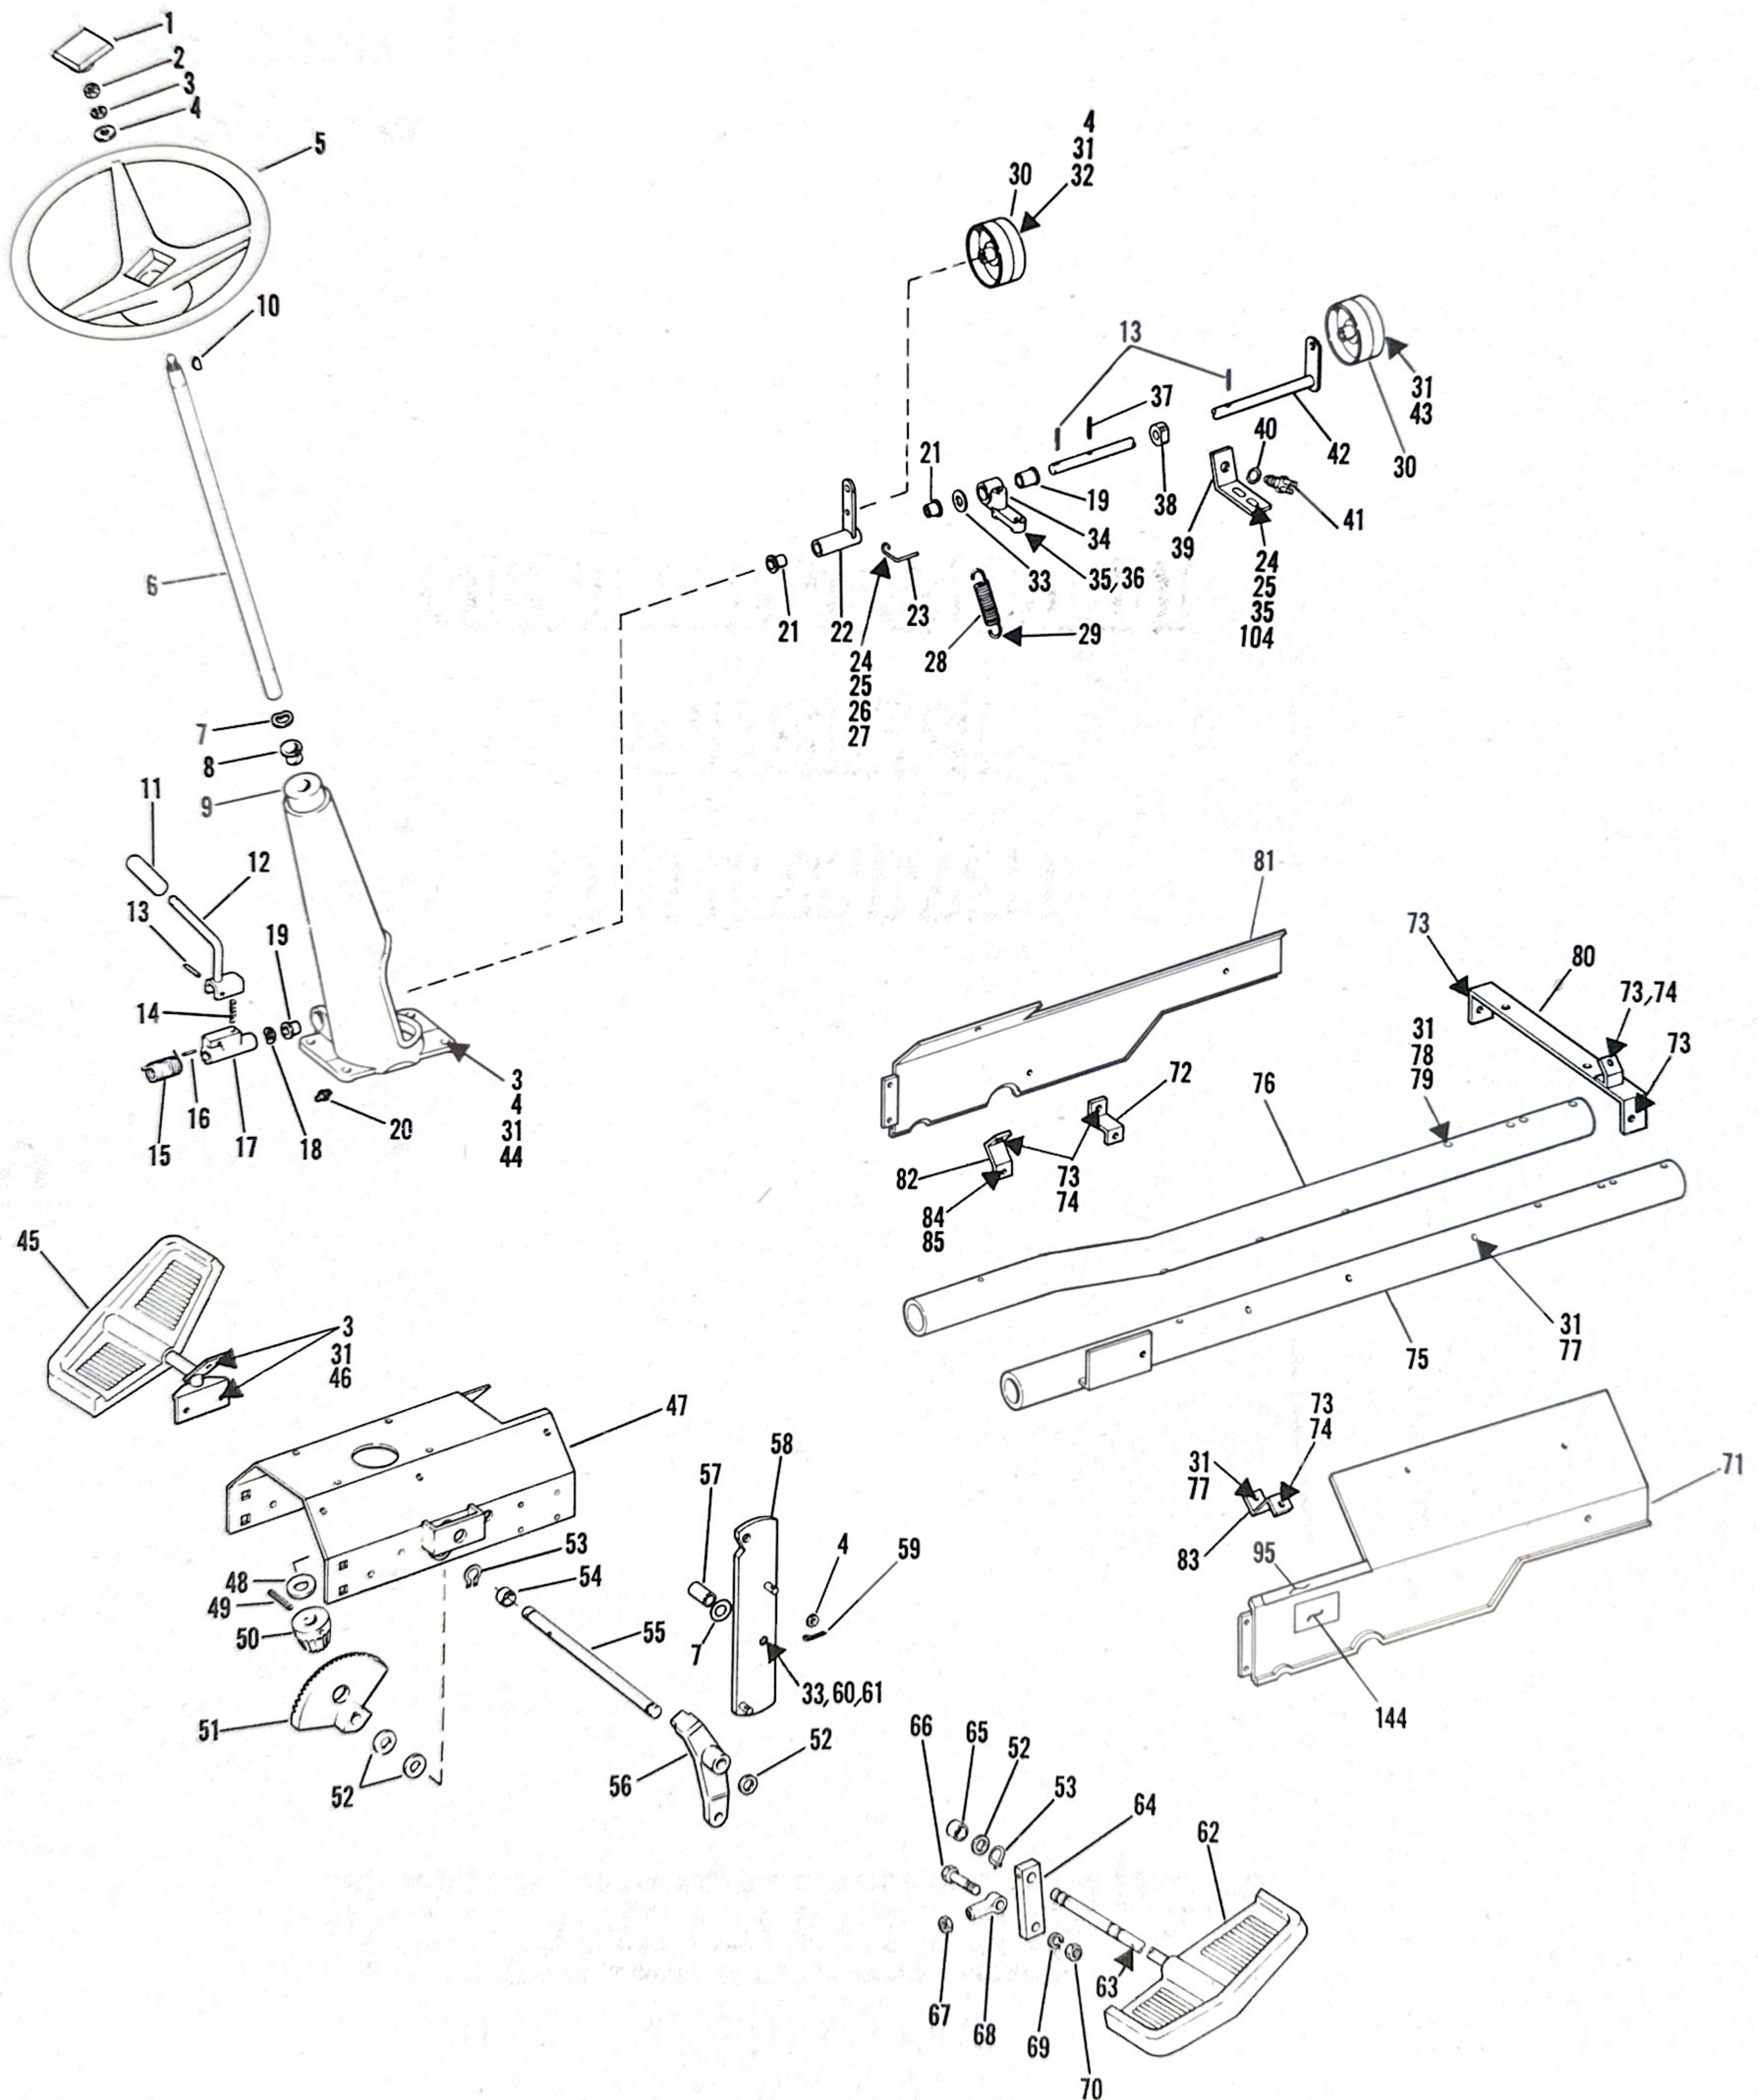


FIGURE 1

TRACTOR ASSEMBLY MODEL 1256-01

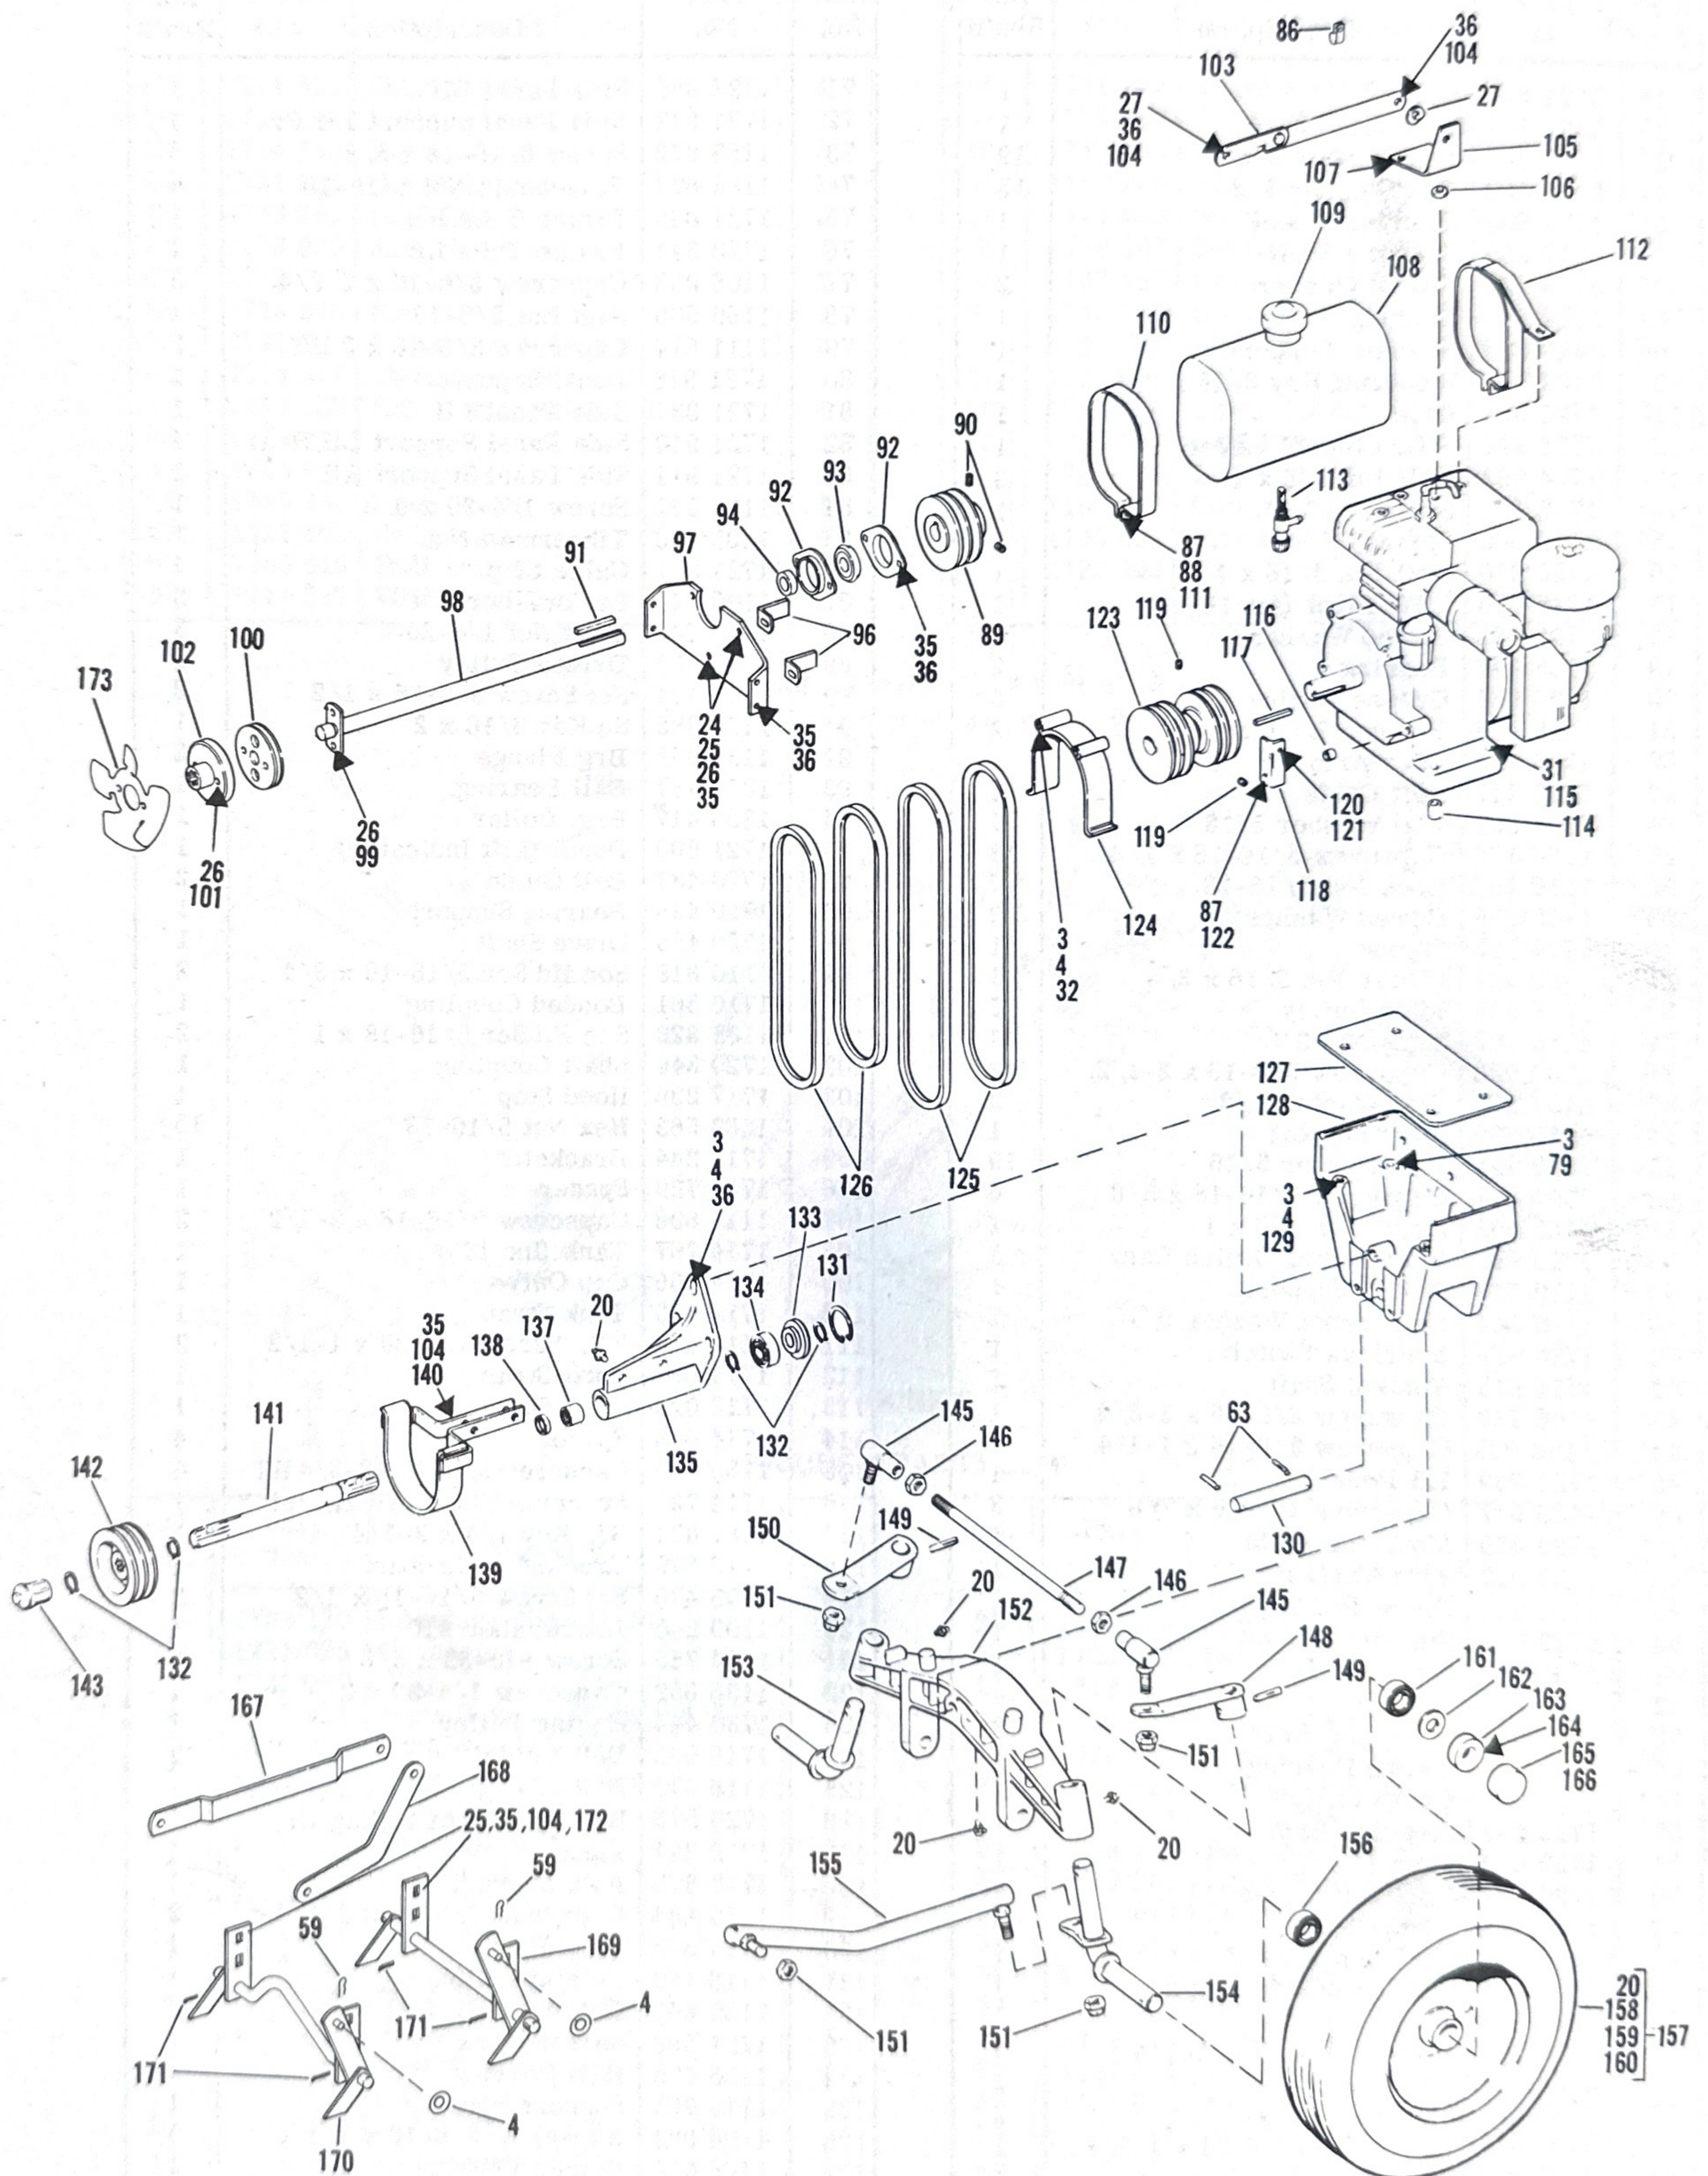


FIGURE 1

TRACTOR ASSEMBLY MODEL 1256-01

FIGURE 1 PARTS LIST

Ref. No.	Part No.	Description	No. Req'd	Ref. No.	Part No.	Description	No. Req'd
1	1721 804	Cap	1	71	1721 935	Side Panel RH	1
2	1121 509	Hex Nut 3/8-16	1	72	1721 912	Side Panel Support LH Fr	1
3	1100 243	Lockwasher 3/8	19	73	1185 872	Screw 5/16-18 x 5/8	6
4	1107 383	Flat Washer 3/8	15	74	1185 873	Tinnerman Nut 5/16-18	4
5	1721 805	Steering Wheel	1	75	1721 895	Frame Tube RH	1
6	1717 269	Steering Shaft	1	76	1720 341	Frame Tube LH	1
7	1713 122	Bowed Washer	2	77	1106 938	Capscrew 3/8-16 x 2-3/4	5
8	1717 263	Bearing	1	78	1185 506	Jam Nut 3/8-16	1
9	1717 258	Steering Support	1	79	1111 614	Capscrew 3/8-16 x 3 HT	3
10	1104 436	Woodruff Key 3/16 x 3/4	1	80	1721 916	Panel Support	1
11	1721 896	Grip	1	81	1721 937	Side Panel LH	1
12	1721 927	PTO Control Lever	1	82	1721 910	Side Panel Support LH Rear	1
13	1704 692	Roll Pin 1/8 x 1	3	83	1721 911	Side Panel Support RH	1
14	1713 391	Spring	1	84	1115 931	Screw 1/4-20 x 5/8	1
15	1715 680	Spring	1	85	1185 456	Tinnerman Nut	1
16	1120 210	Roll Pin 3/16 x 1	1	86	1721 037	Cable Clip	1
17	1715 679	PTO Pivot (Inc 16)	1	87	1100 241	Lockwasher 1/4	3
18	1706 782	Bowed Washer	1	88	1110 106	Lock Nut 1/4-20	3
19	1185 647	Bearing	2	89	1720 365	Driven Pulley	1
20	1104 954	Grease Fitting	6	90	1103 494	Set Screw 3/8-16 x 1/2	2
21	1715 538	Flanged Bushing	2	91	1104 335	Sq Key 3/16 x 2	1
22	1720 436	Idle Arm	1	92	1185 838	Brg Flange	2
23	1720 717	Belt Guide	1	93	1800 757	Ball Bearing	1
24	1107 382	Flat Washer 5/16	5	94	1800 417	Brg. Collar	1
25	1106 876	Capscrew 5/16-18 x 7/8	13	95	1721 890	Decal (Lift Indicator)	1
26	1110 107	Lock Nut 5/16-18	7	96	1720 437	Belt Guide	2
27	1705 905	Bowed Washer	3	97	1720 438	Bearing Support	1
28	1716 728	Spring	1	98	1720 455	Drive Shaft	1
29	1185 584	Cotter Pin 3/16 x 3/4	1	99	1110 818	Soc Hd Scr 5/16-18 x 3/4	2
30	1716 584	Idle Pulley	2	100	1716 561	Bonded Coupling	1
31	1110 108	Lock Nut 3/8	21	101	1185 826	Soc Hd Scr 5/16-18 x 1	2
32	1106 936	Capscrew 3/8-16 x 2-1/2	3	102	1720 348	Shaft Coupling	1
33	1107 385	Flat Washer 1/2	2	103	1717 236	Hood Stop	1
34	1716 590	Shaft Support	1	104	1182 563	Hex Nut 5/16-18	15
35	1100 242	Lockwasher 5/16	19	105	1717 244	Bracket	1
36	1106 872	Capscrew 5/16-18 x 5/8	6	106	1714 720	Spacer	1
37	1185 892	Drive Pin 1/8 x 1	1	107	1111 608	Capscrew 5/16-18 x 2-1/2	2
38	1720 962	Interlocking Switch Cam	1	108	1714 767	Tank (Inc 109)	1
39	1720 533	Switch Support	1	109	1714 766	Cap Only	1
40	1185 844	Shakeproof Washer 9/16	1	110	1714 685	Tank Strap	1
41	1720 963	Interlock Switch	1	111	1114 474	Fil. Screw 1/4-20 x 1-1/2	2
42	1716 615	Control Shaft	1	112	1714 687	Tank Strap	1
43	1106 930	Capscrew 3/8-16 x 1-3/4	1	113	1718 029	Tank Outlet	1
44	1106 923	Capscrew 3/8-16 x 1-1/4	4	114	1714 648	Spacer	4
45	1721 930	LH Pedal	1	115	1185 880	Capscrew 3/8-16 x 3-3/4 HT	4
46	1106 917	Capscrew 3/8-16 x 7/8	3	116	1714 721	Spacer - Throttle Bracket	1
47	1720 439	Mounting Plate	1	117	1187 474	Sq. Key 1/4 x 2-1/4	1
48	1708 012	Flat Washer	1	118	1716 679	Bracket - Throttle	1
49	1185 284	Drive Pin 1/4 x 2	1	119	1103 470	Set Screw 5/16-18 x 1/2	2
50	1713 811	Steering Pinion	1	120	1100 240	Lockwasher #10	1
51	1713 809	Steering Gear	1	121	1114 755	Screw #10-32 x 5/8	1
52	1705 092	Washer	4	122	1106 852	Capscrew 1/4-20 x 2	1
53	1185 668	Retaining Ring	3	123	1720 444	Engine Pulley	1
54	1185 558	Sleeve Bearing	2	124	1716 642	Belt Guide	2
55	1721 932	Cross Shaft	1	125	1716 570	Belt 42-1/2" Set of 2 (PTO)	1
56	1716 563	Steering Arm	1	126	1720 573	Belt 34" Set of 2 (Eng Dr)	1
57	1720 610	Sleeve	1	127	1713 394	Plate	1
58	1720 729	Tool Lift Lever	1	128	1717 270	Axle Support	1
59	1703 011	Cotter Spring	3	129	1110 644	Capscrew 3/8-16 x 3-1/4	2
60	1185 496	Lock Nut 1/2-13	1	130	1713 383	Axle Pivot	1
61	1107 035	Capscrew 1/2-13 x 2	1	131	1118 730	Retaining Ring	1
62	1721 933	RH Pedal	1	132	1185 649	Retaining Ring	4
63	1185 232	Drive Pin 3/16 x 1-1/4	3	133	1721 590	Seal Washer	1
64	1720 565	Control Arm	1	134	1185 605	Ball Bearing	1
65	1714 233	Nylon Bushing	2	135	1715 785	Support Housing	1
66	1107 013	Capscrew 7/16-14 x 1-3/4	1	136	1106 921	Capscrew 3/8-16 x 1-1/8	3
67	1121 710	Jam Nut	1	137	1185 010	Needle Bearing	1
68	1721 612	Rod End	1	138	1185 224	Oil Seal	1
69	1100 244	Lockwasher 7/16	1	139	1716 647	Belt Guide	1
70	1110 109	Lock Nut 7/16-14	1	140	1106 880	Capscrew 5/16-18 x 1-1/8	2

TRACTOR ASSEMBLY MODEL 1256-01

FIGURE 1 PARTS LIST CONTINUED

Ref. No.	Part No.	Description	No. Req'd	Ref. No.	Part No.	Description	No. Req'd
141	1721 597	Shaft and Seal PTO (Inc 133)	1	158	1715 855	Valve Stem Assembly	2
142	1716 594	Pulley PTO	1	159	1715 789	Wheel Only (Inc Ref 20)	2
143	1714 132	Rubber Tip	2	160	1717 441	Tire 16 x 6:50 x 8	2
144	1721 653	Decal (Hydrostatic Drive)	2	161	1185 615	Ball Bearing	2
145	1713 361	Ball Joint	2	162	121 898	Washer	4
146	1103 926	Jam Nut 1/2-20	2	163	1716 197	Set Collar	2
147	1713 385	Tie Rod	1	164	1187 857	Capscrew 1/4-20 x 1	2
148	1713 378	Steering Lever RH	1	165	1715 899	Dust Cap 1-1/2 ID (Some Mod)	2
149	1891 696	Drive Pin 5/16 x 1-1/2	2	166	1721 245	Dust Cap 1-5/8 ID (Some Mod)	2
150	1713 377	Steering Lever LH	1	167	1722 455	Link	1
151	1110 152	Self Locking Nut 1/2-20	4	168	1722 454	Control Link	1
152	1716 697	Axle	1	169	1720 492	Lift Arm (Front)	1
153	1716 953	Spindle LH	1	170	1720 493	Lift Arm (Rear)	1
154	1716 952	Spindle RH	1	171	1100 350	Cotter Pin 1/8 x 1	4
155	1717 462	Drag Link	1	172	1100 255	Flat Washer 5/16	8
156	1185 616	Ball Bearing	2	173	1720 349	Fan	1
157	1717 357	Wheel and Tire (20, 156-161)	2				

ELECTRICAL GROUP AND COMPONENT PARTS
(For wiring diagram see page 12)

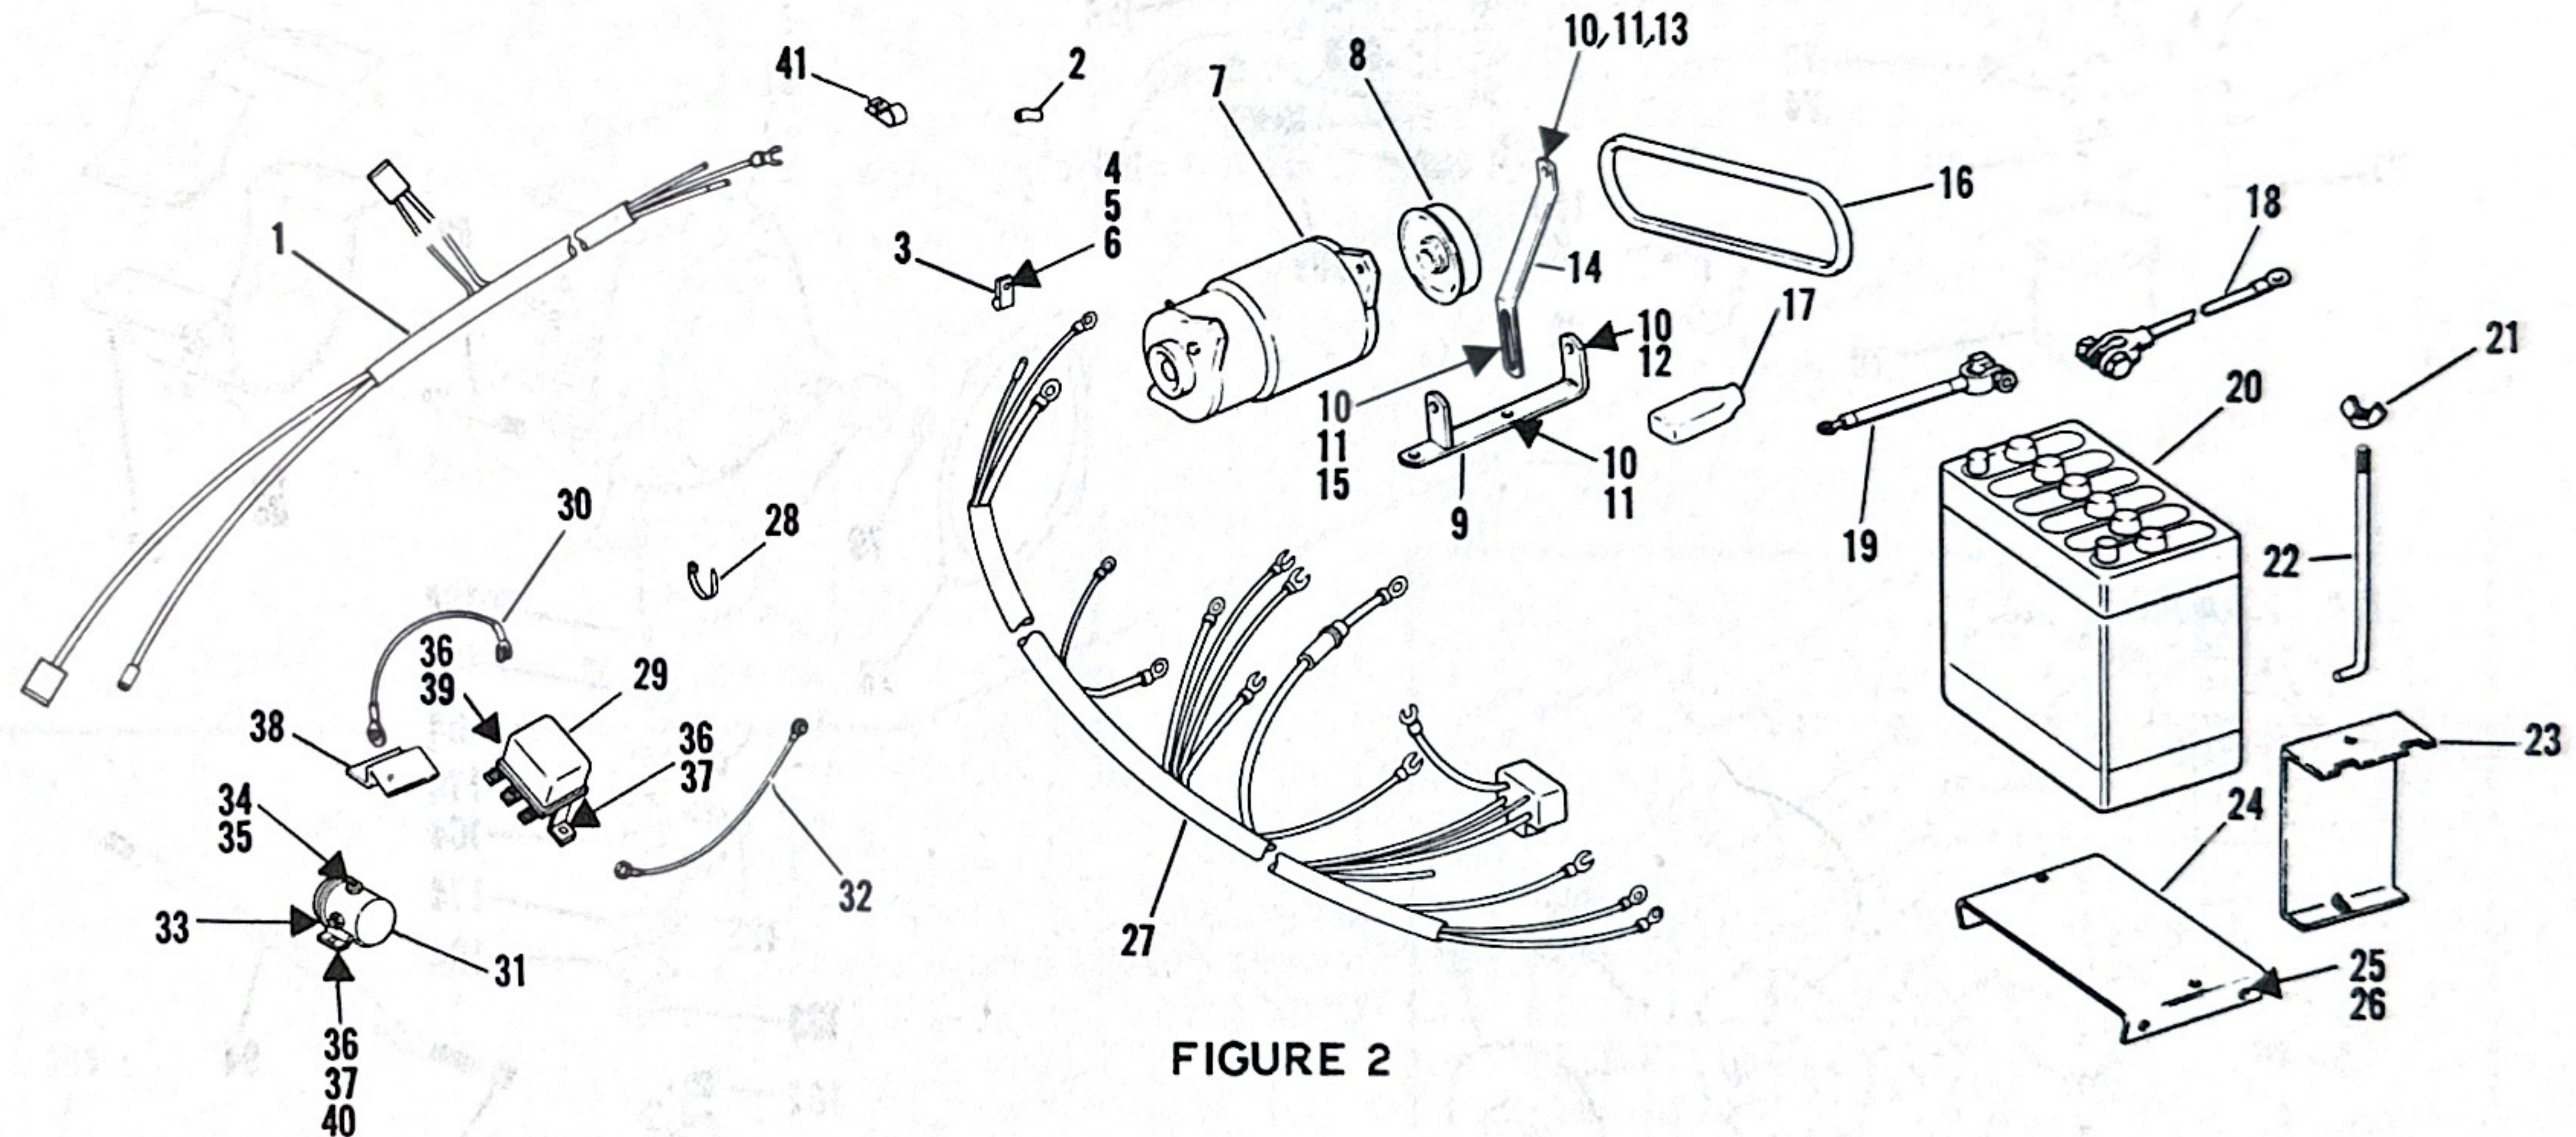


FIGURE 2

FIGURE 2 PARTS LIST

Ref. No.	Part No.	Description	No. Req'd	Ref. No.	Part No.	Description	No. Req'd
1	1722 110	Interlock Wire Harness	1	22	1718 108	Batt Clamp Rod	2
2	1721 038	Connector	1	23	1720 538	Batt Clamp	2
3	1721 037	Clip	1	24	1718 111	Batt Carrier	1
4	1115 931	Mach Screw 1/4-20 x 5/8	1	25	1185 872	Truss Hd Scr 5/16-18 x 5/8	4
5	1110 106	Lock Nut 1/4-20	1	26	1185 873	Tinnerman Nut 5/16-18	4
6	1100 241	Lock Washer 1/4	1	27	1721 411	Wiring Harness	1
7	1716 169	Starter Generator	1	28	1805 345	Cable Tie	1
8	1708 293	Gen Sheave	1	29	1708 287	Regulator	1
9	1716 315	Gen Bracket	1	30	1717 395	Lead Wire (Reg to Sol)	1
10	1100 242	Lock Washer 5/16	6	31	1717 048	Solenoid	1
11	1106 876	Capscrew 5/16-18 x 7/8	4	32	1719 511	Lead Wire (Reg to Grnd)	1
12	1106 878	Capscrew 5/16-18 x 1	2	33	1182 563	Hex Nut 5/16-18	2
13	1110 107	Lock Nut 5/16-18	3	34	1109 845	Hex Nut 10-32	1
14	1714 688	Adjusting Strap	1	35	1722 393	Screw Tip Cover	1
15	1107 382	Flat Washer	1	36	1187 612	Lock Washer 1/4	3
16	1714 690	Gen V Belt	1	37	1185 854	Screw 14 x 1/2	3
17	1721 413	Batt Terminal Boot	1	38	1721 540	Regulator Support	1
18	1719 510	Batt Lead (Positive)	1	39	1100 118	Mach Screw 1/4-20 x 1/2	1
19	1716 636	Batt Lead (Ground)	1	40	1107 381	Flat Washer 1/4	2
20	1718 027	Battery 12V 45 Amp	1	41	1894 291	Cable Clip	1
21	1709 652	Wing Nut 1/4-20	2				

TRACTOR ASSEMBLY MODEL 1256-01


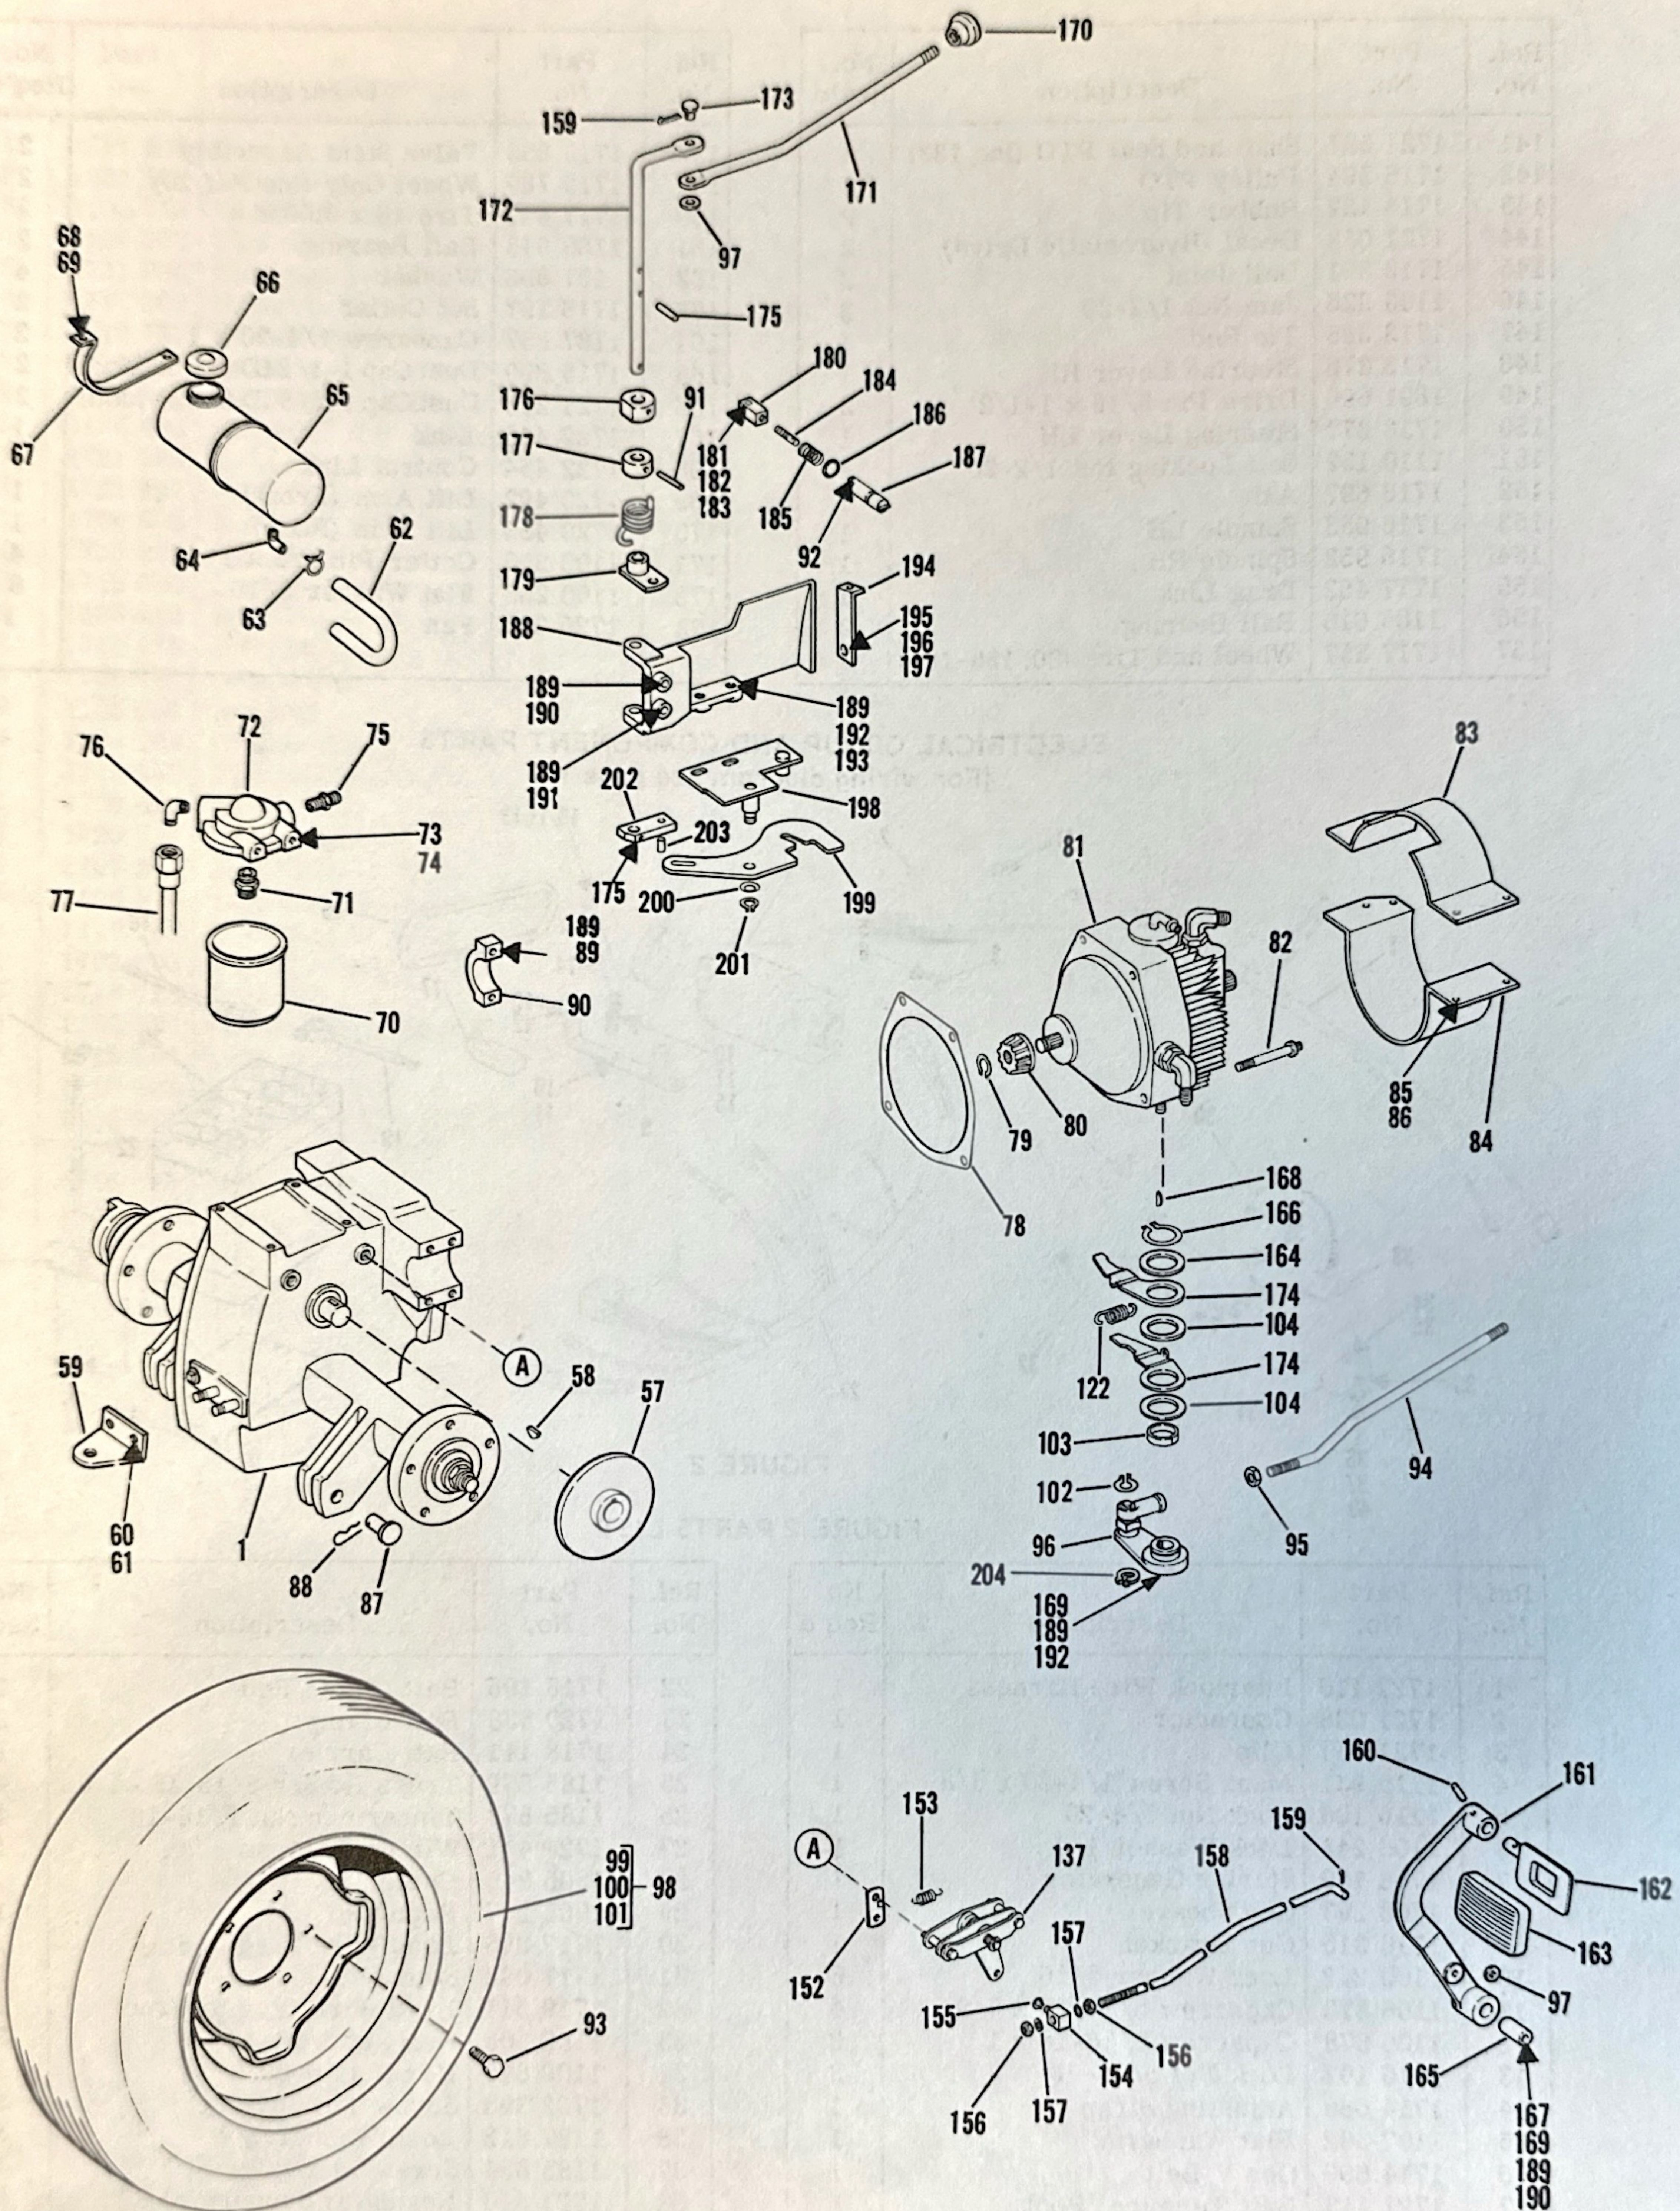


FIGURE 3

TRACTOR ASSEMBLY MODEL 1256-01

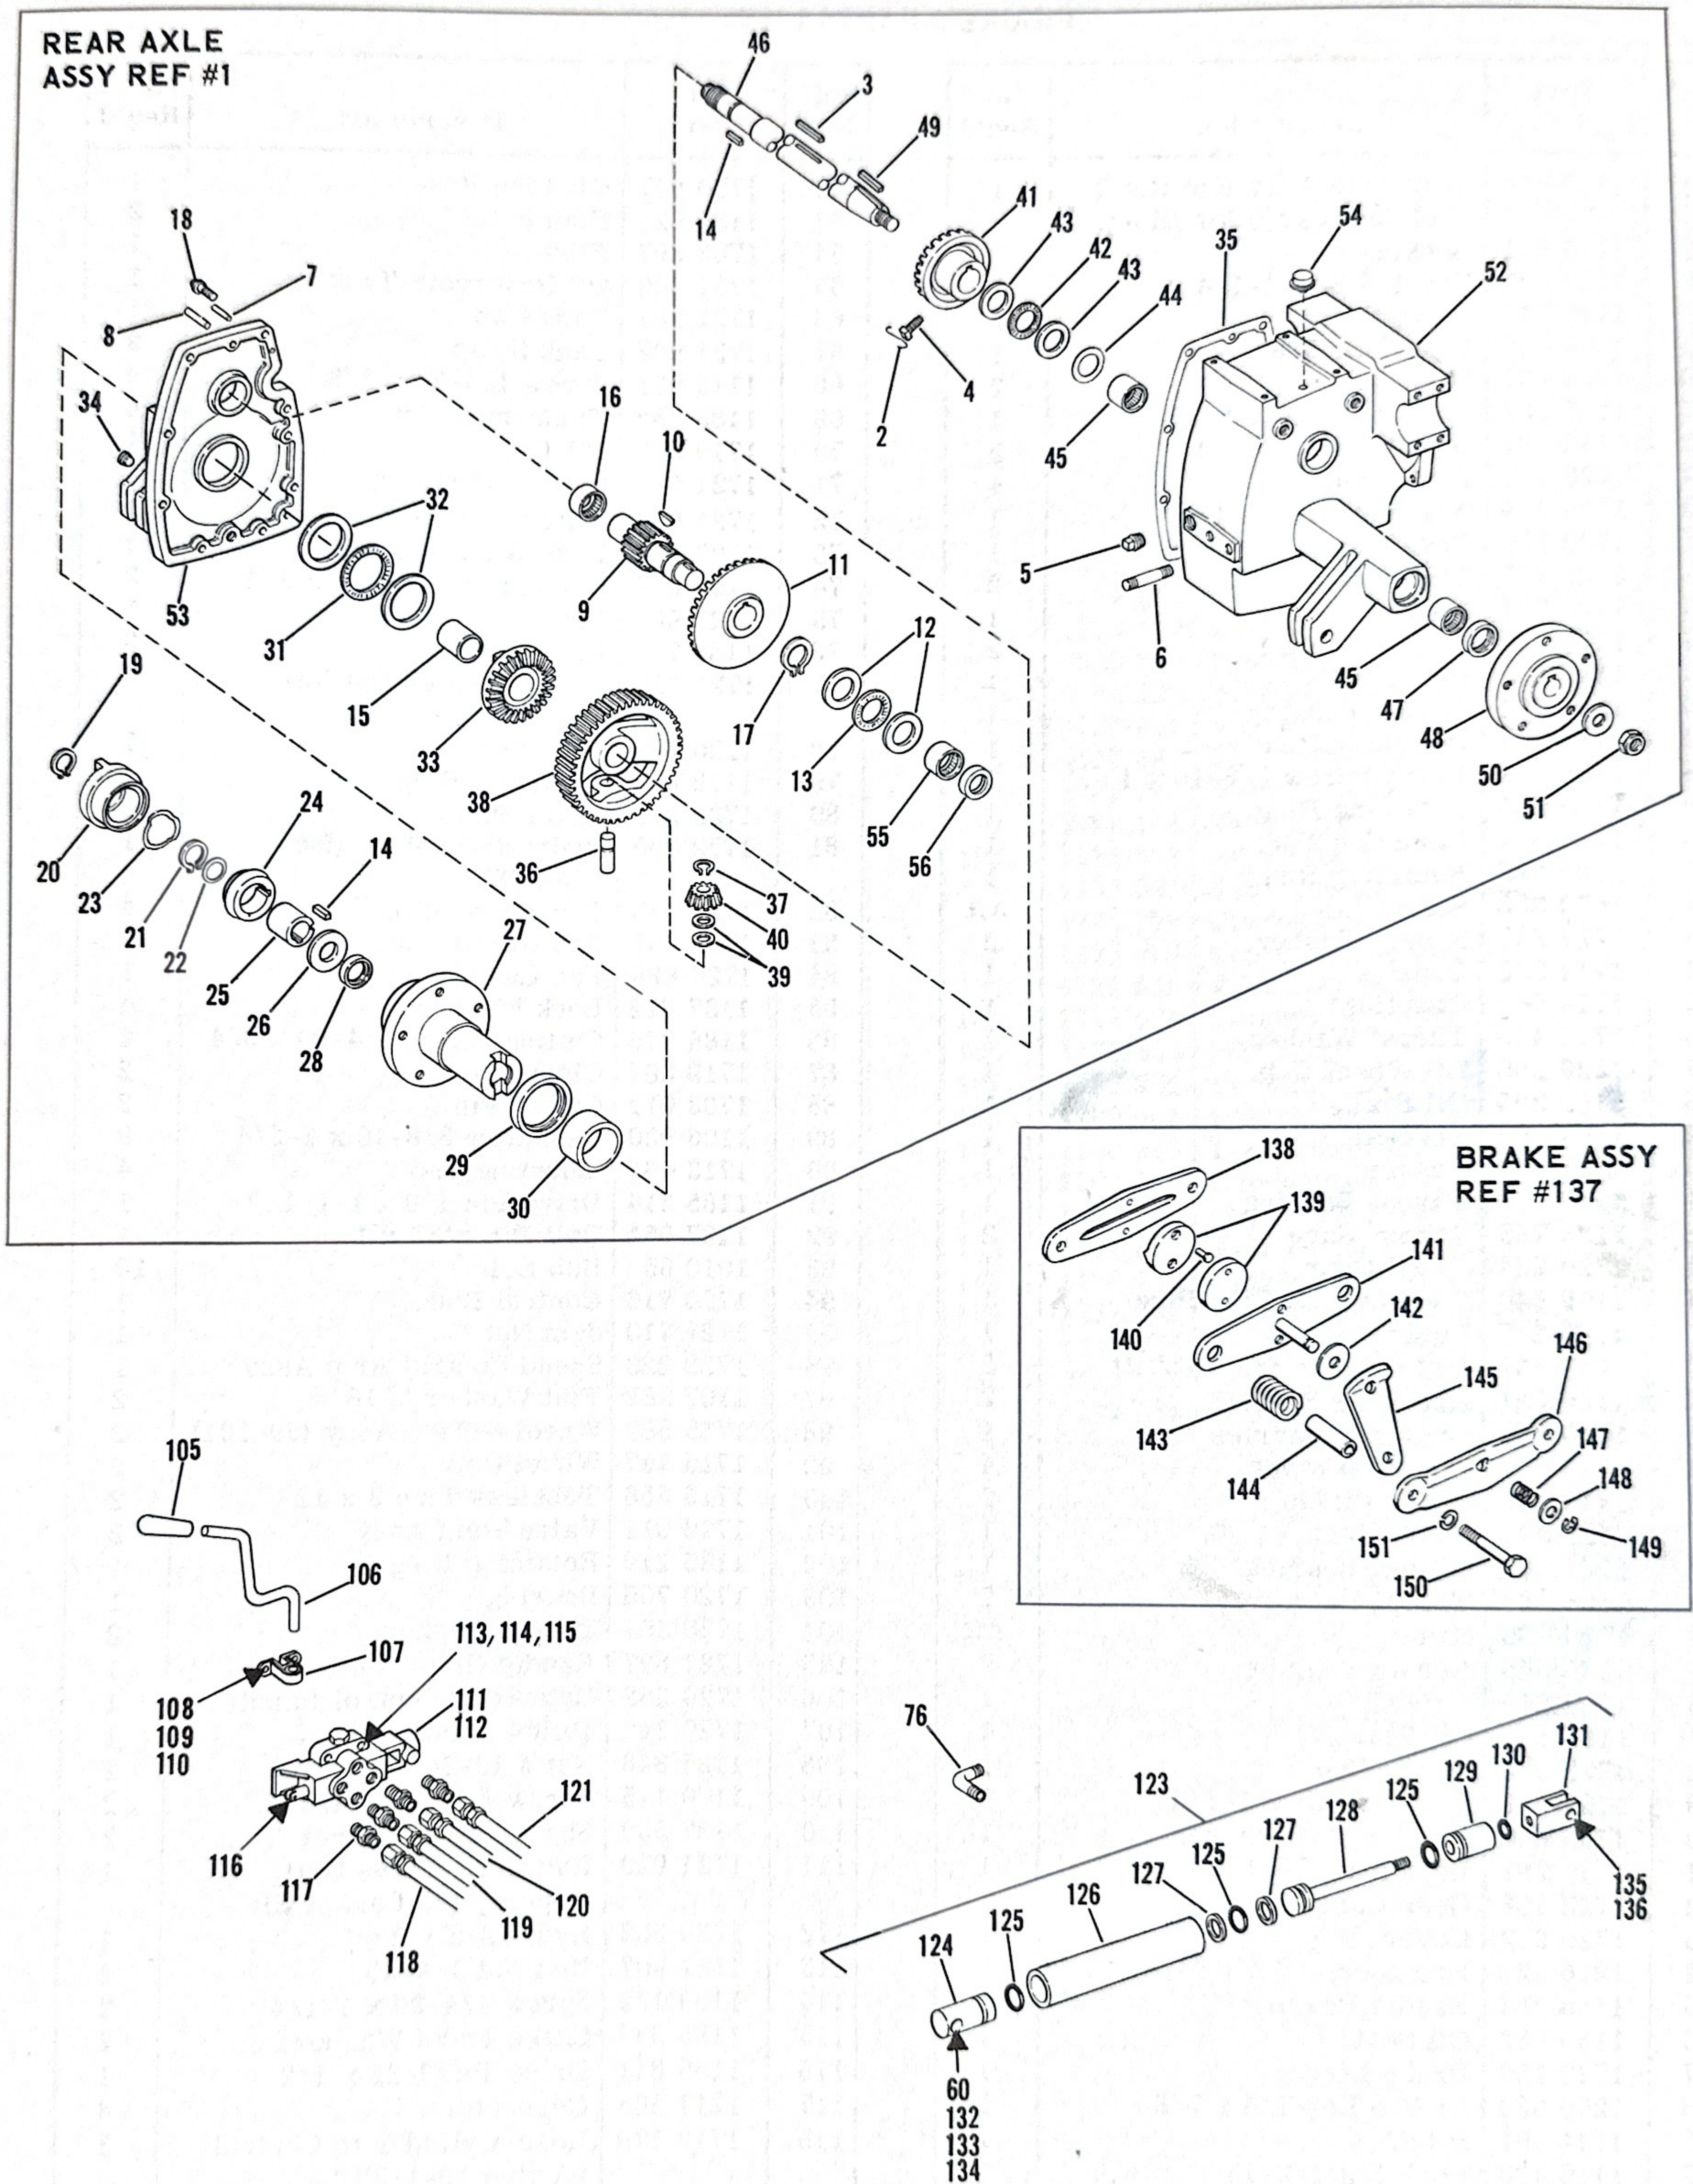

TRACTOR ASSEMBLY MODEL 1256-01

FIGURE 3 PARTS LIST

Ref. No.	Part No.	Description	No. Req'd	Ref. No.	Part No.	Description	No. Req'd
1	1722 476	Rear Axle Assy (Inc Ref 2-56) See page 6 for Illust.	1	62	1720 947	Oil Line Hose	1
2	1716 692	Locking Wire	1	63	1185 820	Clamp	2
3	1721 587	Key 1/4 Sq x 1-1/4	1	64	1703 897	Elbow	1
4	1716 519	Drive Screw	2	65	1721 900	Oil Reservoir Tank	1
5	1105 678	Pipe Plug 3/8	1	66	1721 901	Tank Cap	1
6	1718 067	Stud	2	67	1721 902	Tank Strap	2
7	1185 232	Roll Pin 3/16 x 1-1/4	1	68	1115 931	Screw 1/4-20 x 5/8	4
8	1110 187	Dowel Pin 5/16 x 1	2	69	1185 456	Tinnerman Nut	4
9	1722 137	Pinion Shaft	1	70	1719 859	Oil Filter	1
10	1100 279	Woodruff Key 1/4 x 1	1	71	1721 921	Special Coupling	1
11	1720 259	Bevel Gear	1	72	1721 920	Filter Manifold	1
12	1185 767	Thrust Race	2	73	1100 242	Lock Washer 5/16	11
13	1185 764	Thrust Bearing	1	74	1106 874	Cap Screw 5/16-18 x 3/4	2
14	1104 336	Key 1/4 Sq x 1	2	75	1721 989	Connector	1
15	1185 832	Bearing	1	76	1185 739	Elbow 90°	3
16	1185 774	Needle Bearing	1	77	1721 922	Tube - (Filter Outflow to Hydro.)	1
17	1185 303	Retaining Ring	1	78	1720 282	Motor Gasket	1
18	1185 771	Ferry Screw 3/8-16 x 1	7	79	1118 808	Retaining Ring	1
19	1180 025	Retaining Ring	1	80	1720 285	Bevel Pinion	1
20	1714 564	Adjusting Nut	1	81	1722 180	Hydrostatic Pkg. (Inc Ref 78)	1
21	1185 689	Retaining Ring	1	82	1185 775	Capscrew (Spec)	4
22	1800 338	Shim	AR	83	1720 957	Fan Guard Top	1
23	1721 357	Spring Washer	2	84	1720 688	Fan Guard Bottom	1
24	1714 562	Cone	1	85	1187 612	Lock Washer 1/4	4
25	1714 561	Coupling	1	86	1185 375	Cutting Screw 1/4-20 x 3/4	4
26	1713 468	Thrust Washer	1	87	1719 367	Clevis Pin	2
27	1720 266	LH Wheel Hub	1	88	1703 011	Cotter Pin	2
28	1185 295	Oil Seal	1	89	1106 930	Capscrew 3/8-16 x 1-3/4	8
29	1185 769	Oil Seal	1	90	1713 461	Mounting Cap	4
30	1185 770	Bearing	1	91	1185 314	Drive Pin 1/8 x 1-1/4	1
31	1185 768	Thrust Bearing	1	92	1187 961	Roll Pin 5/32 x 1	1
32	1185 765	Thrust Race	2	93	1010 85	Hub Bolt	10
33	1720 264	Bevel Gear	1	94	1720 716	Control Rod	1
34	1105 640	Countersunk Pipe Plug	1	95	1121 710	Jam Nut	1
35	1720 257	Gasket	1	96	1722 228	Speed Control Arm Assy	1
36	1713 467	Differential Pinion Shaft	2	97	1107 382	Flat Washer 5/16	2
37	1185 561	Retaining Ring	2	98	1715 866	Wheel & Tire Assy (99-101)	2
38	1720 268	Gear and Carrier	1	99	1715 787	Wheel Only	2
39	1712 763	Thrust Washer	4	100	1715 856	Tubeless Tire 8 x 12	2
40	1713 466	Bevel Pinion	2	101	1716 011	Valve Stem Assy	2
41	1720 271	Bevel Gear	1	102	1185 219	Retaining Ring	1
42	1185 763	Thrust Bearing	1	103	1720 706	Bearing	1
43	1185 766	Thrust Race	2	104	1720 361	Thrust Washer	2
44	1720 299	Shim	AR	105	1721 897	Handle Grip	1
45	1185 645	Needle Bearing	2	106	1720 352	Hydraulic Control Handle	1
46	1720 269	Axle	1	107	1720 342	Pillow Block	1
47	1185 642	Oil Seal	1	108	1185 848	Nut # 10-24	2
48	1720 293	Wheel Hub	1	109	1100 115	Screw # 10-24 x 1/2	2
49	1108 848	Key 5/16 Sq x 1-1/4	1	110	1187 559	Shake Proof Washer	2
50	1185 847	Special Flat Washer	1	111	1721 620	Hydraulic Valve Seal, Spring and Gasket Kit	1
51	1110 297	Lock Nut 5/8-18	1	112	1720 302	Hydraulic Valve	1
52	1722 136	Gear Case Housing	1	113	1121 507	Hex Nut 1/4-20	2
53	1720 252	Cover	1	114	1100 123	Screw 1/4-20 x 1-1/4	2
54	1826 82	Breather	1	115	1185 839	Shake Proof Washer	2
55	1185 088	Needle Bearing	1	116	1185 811	Drive Pin 3/32 x 1/2	1
56	1185 882	Oil Seal	1	117	1717 563	Connector	4
57	1722 159	Brake Disc	1	118	1719 179	Hose-Cylinder to Control Valve 19-1/2" Lg	1
58	1200 034	Hi Pro Key 1/4 x 7/8	1	119	1721 899	Hose Control Valve to Filter	1
59	1714 101	Hitch	1				
60	1110 110	Lock Nut 1/2-13	3				
61	1100 245	Lock Washer 1/2	2				

TRACTOR ASSEMBLY MODEL 1256-01

FIGURE 3 PARTS LIST CONTINUED

Ref. No.	Part No.	Description	No. Req'd	Ref. No.	Part No.	Description	No. Req'd
120	1720 296	Hose-Control Valve to Cylinder 13-3/4" Lg	1	159	1100 346	Cotter Pin 3/32 x 3/4	1
121	1720 294	Hose-Hydro. Pkg to Hydraulic Control Valve	1	160	1185 597	Drive Pin 3/16 x 1-1/8	1
122	1720 928	Extension Spring	1	161	1722 397	Brake Arm	1
123	1714 788	Hydraulic Cylinder Assy (Inc 124-131)	1	162	1722 399	Brake Pedal	1
124	1721 625	Cylinder Head	1	163	1719 539	Pedal Pad	1
125	1721 626	"O" Ring	3	164	1720 529	Thrust Washer	1
126	1721 627	Tube	1	165	1720 114	Spacer	1
127	1721 628	Washer	2	166	1185 732	Retaining Ring	1
128	1721 629	Piston Rod	1	167	1893 445	Washer	2
129	1721 630	Guide	1	168	1104 435	Woodruff Key 1/8 x 5/8	1
130	1721 631	"O" Ring	1	169	1110 108	Lock Nut 3/8-16	2
131	1721 632	Clevis	1	170	1721 917	Knob	1
132	1107 041	Capscrew 1/2-13 x 2-3/4	1	171	1721 925	Control Handle	1
133	1714 783	Spacer	1	172	1722 146	Control Shaft	1
134	1107 385	Flat Washer	1	173	1706 743	Clevis Pin 5/16 x 3/4	1
135	1708 125	Clevis Pin 1/2 x 1-1/16	1	174	1720 523	Neutralizer Arm	2
136	1100 349	Cotter Pin 1/8 x 3/4	1	175	1704 692	Roll Pin 1/8 x 1	4
137	1722 156	Brake Caliper Assy (138-151) See page 6 for Illust.	1	176	1720 962	Interlocking Switch Cam	1
138	1719 558	Carrier - Solid Side	1	177	1722 141	Stop Collar	1
139	1719 560	Puck	2	178	1722 154	Torsion Spring	1
140	1719 569	Rivet	4	179	1722 145	Parking Brake Arm	1
141	1719 561	Carrier - Cam Side	1	180	1721 516	Adjusting Nut	1
142	1719 562	Washer	1	181	1107 381	Flat Washer 1/4	1
143	1722 155	Spring	2	182	1721 229	Clevis Pin	1
144	1719 559	Spacer	2	183	1185 850	Cotter Pin 5/64 x 3/4	1
145	1722 066	Actuating Cam	1	184	1721 515	Adjusting Stud	1
146	1719 563	Actuator	1	185	1712 569	Compression Spring	1
147	1719 567	Spring	1	186	1177 509	"O" Ring	1
148	1719 564	Washer	1	187	1720 262	Parking Pawl	1
149	1719 565	Snap Ring	1	188	1720 603	Control Mount	1
150	1111 688	Capscrew 1/4-28 x 2 Fine Thd Late Models	2	189	1100 243	Lock Washer 3/8	14
	1100 807	Capscrew 1/4-20 x 2 Coarse Thd Early Models	2	190	1106 936	Capscrew 3/8-16 x 2-1/2	2
151	1100 241	Lock Washer 1/4	2	191	1106 923	Capscrew 3/8-16 x 1-1/4	1
152	1722 083	Spring Bracket	1	192	1107 383	Flat Washer 3/8	2
153	1892 471	Extension Spring	1	193	1106 919	Capscrew 3/8-16 x 1	2
154	1722 171	Pivot Block	1	194	1721 909	Control Mount Support	1
155	1185 304	Retaining Ring	1	195	1100 241	Lock Washer 1/4	2
156	1182 563	Hex Nut 5/16-18	2	196	1110 106	Lock Nut 1/4-20	2
157	1177 548	Shake Proof Washer 5/16	2	197	1106 832	Capscrew 1/4-20 x 5/8	2
158	1722 169	Brake Rod	1	198	1722 152	Adjusting Bracket	1
				199	1720 604	Locking Arm	1
				200	1700 065	Bowed Washer	1
				201	1185 849	Retaining Ring	1
				202	1720 594	Control Arm	1
				203	1185 469	Drive Pin	1
				204	1118 802	Retaining Ring	1
					1721 599	Hydrostatic Fluid 1 qt	2

TRACTOR ASSEMBLY MODEL 1256-01

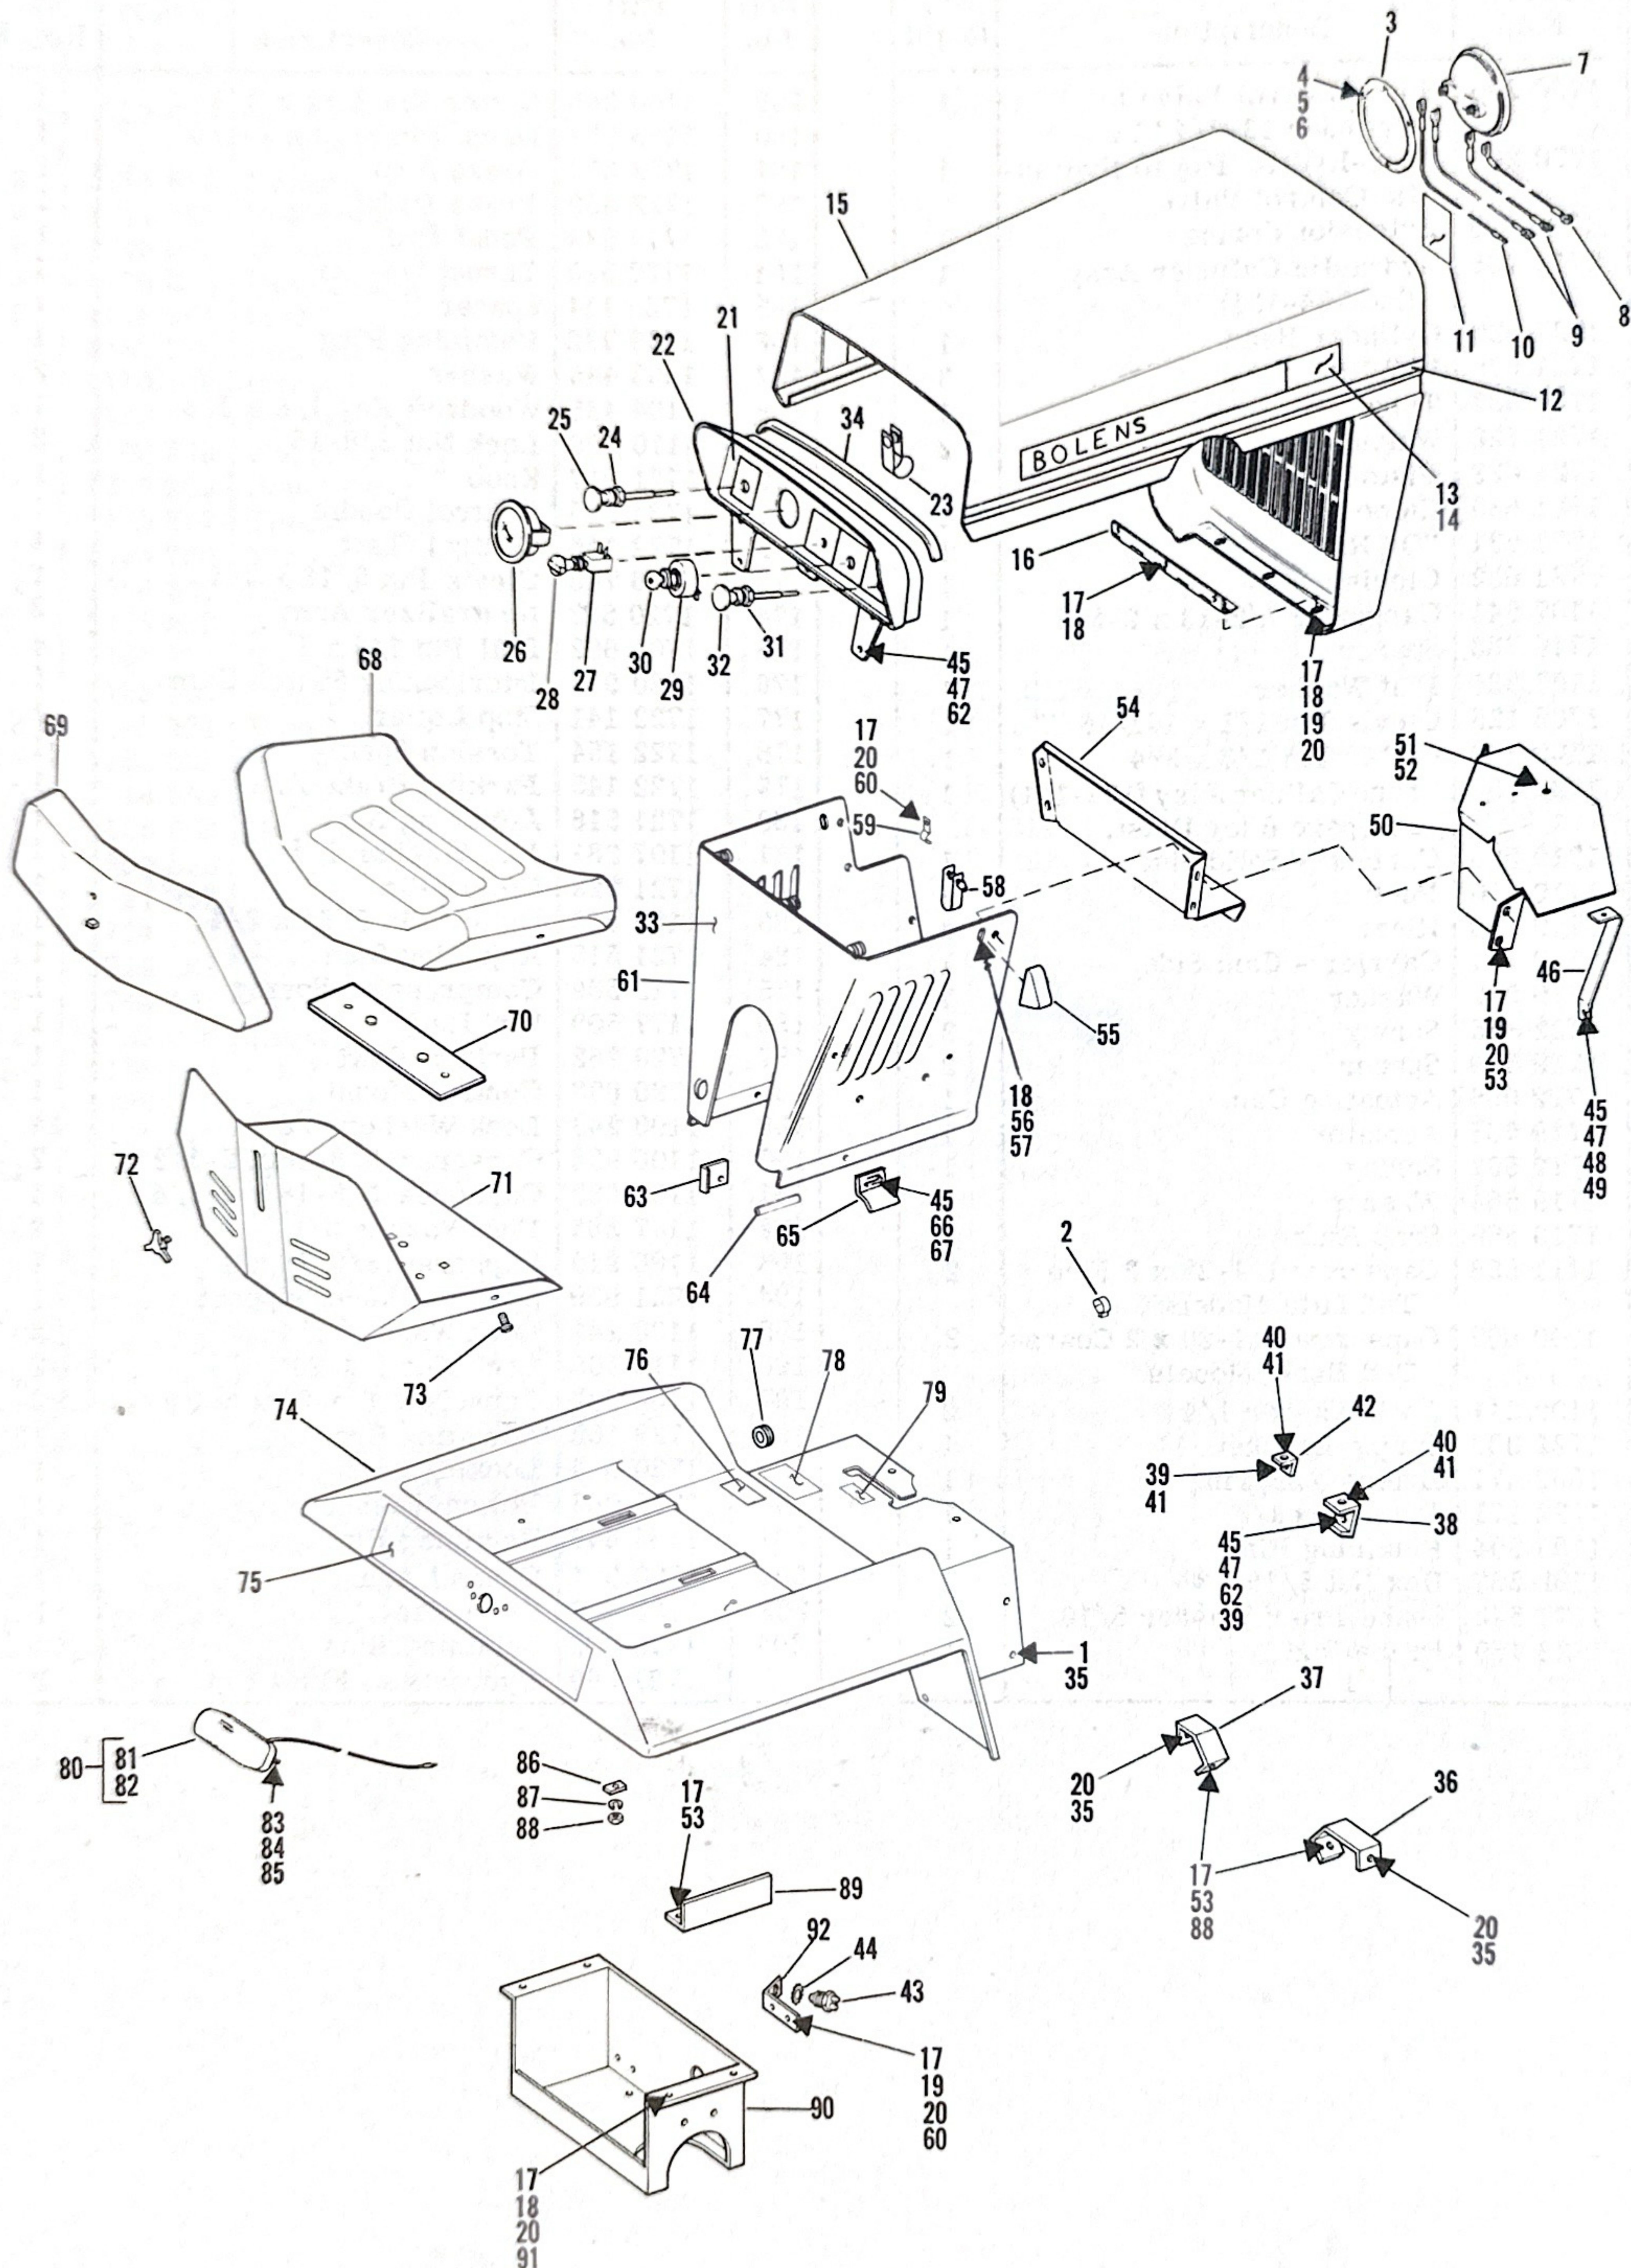


FIGURE 4

TRACTOR ASSEMBLY MODEL 1256-01

FIGURE 4 PARTS LIST

Ref. No.	Part No.	Description	No. Req'd	Ref. No.	Part No.	Description	No. Req'd
1	1185 498	Speed Nut 5/16-18	4	47	1100 241	Lockwasher	8
2	1894 291	Cable Clip	2	48	1100 106	Lock Nut 1/4-20	3
3	1719 708	Retaining Ring	2	49	1106 832	Capscrew 1/4-20 x 5/8	2
4	1185 807	Rivet	6	50	1721 542	Heat Shield	1
5	1185 748	Wave Washer	6	51	1111 609	Capscrew 5/16-18 x 2-3/4	1
6	1185 746	Spring Clip	6	52	1717 596	Spacer	1
7	*	Headlight (GE4406)	2	53	1106 874	Capscrew 5/16-18 x 3/4	7
8	1717 394	Lead Wire - Headlight	1	54	1720 773	Heat Shield	1
9	1717 370	Lead Wire - Headlight	2	55	1717 232	Latch	2
10	1717 369	Lead Wire - Headlight	1	56	1713 233	Flat Washer 5/16 Spec	4
11	1721 386	Husky Grille Decal	1	57	1185 261	Lockwasher 5/16 Dished	2
12	1717 859	Tape Stripe 68" LG	1	58	1719 512	Tie Band	1
13	1721 884	Hood Decal LH	1	59	1721 037	Cable Clip	2
14	1721 885	Hood Decal RH	1	60	1106 876	Capscrew 5/16-18 x 7/8	3
15	1717 220	Hood and Grille Assy w/o Decals	1	61	1721 200	Rear Panel	1
16	1717 246	Hinge	1	62	1121 507	Hex Nut 1/4-20	6
17	1100 242	Lockwasher 5/16-18	23	63	1721 913	Clip	1
18	1106 872	Capscrew 5/16-18 x 5/8	15	64	1177 550	Drive Pin 5/16 x 2-1/2	1
19	1107 382	Flat Washer 5/16	14	65	1714 642	Brace	2
20	1110 107	Lock Nut 5/16-18	16	66	1115 931	Mach Screw 1/4-20 x 5/8	2
21	1721 886	Instrument Panel Decal	1	67	1185 456	Tinnerman Nut 1/4	2
22	1717 249	Instrument Panel	1	68	1721 881	Seat Pad	1
23	1721 037	Cable Clamp	1	69	1721 882	Back Rest	1
24	1717 241	Choke (Inc 25)	1	70	1721 879	Seat Doubler	1
25	1718 232	Choke Knob and Wire Only	1	71	1721 880	Seat Pan	1
26	1714 146	Ammeter	1	72	1721 883	Knob	1
27	1717 256	Light Switch (Inc 28)	1	73	1185 870	Sems Screw 1/4-20 x 1/2	3
28	1718 231	Light Switch Knob Only	1	74	1721 845	Fender	1
29	1721 409	Ignition Switch (Inc 30)	1	75	1721 889	Decal (Reflector)	1
30	1718 266	Key Only	1	76	1721 190	Hydro, Oil Instrument Decal	1
31	1717 242	Throttle Control (Inc 32)	1	77	1185 585	Flip Grommet	1
32	1718 233	Throttle Knob and Wire Only	1	78	1721 888	Park-Lock Decal	1
33	1721 887	Instruction Decal	1	79	1721 072	PTO Drive Decal	1
34	1717 599	Pad	1	80	1805 342	Taillight Assy (Inc 81 and 82)	1
35	1185 872	Screw 5/16-18 x 5/8	6	81	*	Bulb (GE 1895)	1
36	1721 904	Fender Support RH	1	82	1805 110	Lens Only	1
37	1721 903	Fender Support LH	1	83	1116 197	Mach Screw #6-32 x 1/2	2
38	1721 907	Fender Support	1	84	1109 764	Hex Nut #6-32	2
39	1106 830	Capscrew 1/4-20 x 1/2	2	85	1103 989	Lockwasher #6	2
40	1185 894	Phillips Hd Scr 1/4-20 x 1/2	2	86	1721 876	Reinforcing Plate	2
41	1185 893	Tinnerman Nut 1/4-20	3	87	1100 243	Lockwasher 3/8	2
42	1721 908	Fender Support	1	88	1110 108	Lock Nut 3/8-16	4
43	1720 963	Interlock Switch	1	89	1722 107	Divider	1
44	1185 844	Shakeproof Washer 9/16	1	90	1721 892	Fender Support	1
45	1107 381	Flat Washer 1/4	10	91	1704 930	Clamp	1
46	1721 541	Heat Shield Support	1	92	1722 142	Interlock Bracket	1

* Not stocked. Purchase from your local automotive or electrical supplier.

TRACTOR ASSEMBLY MODEL 1256-01

DUAL LIGHT GROUP - WIRING DIAGRAM

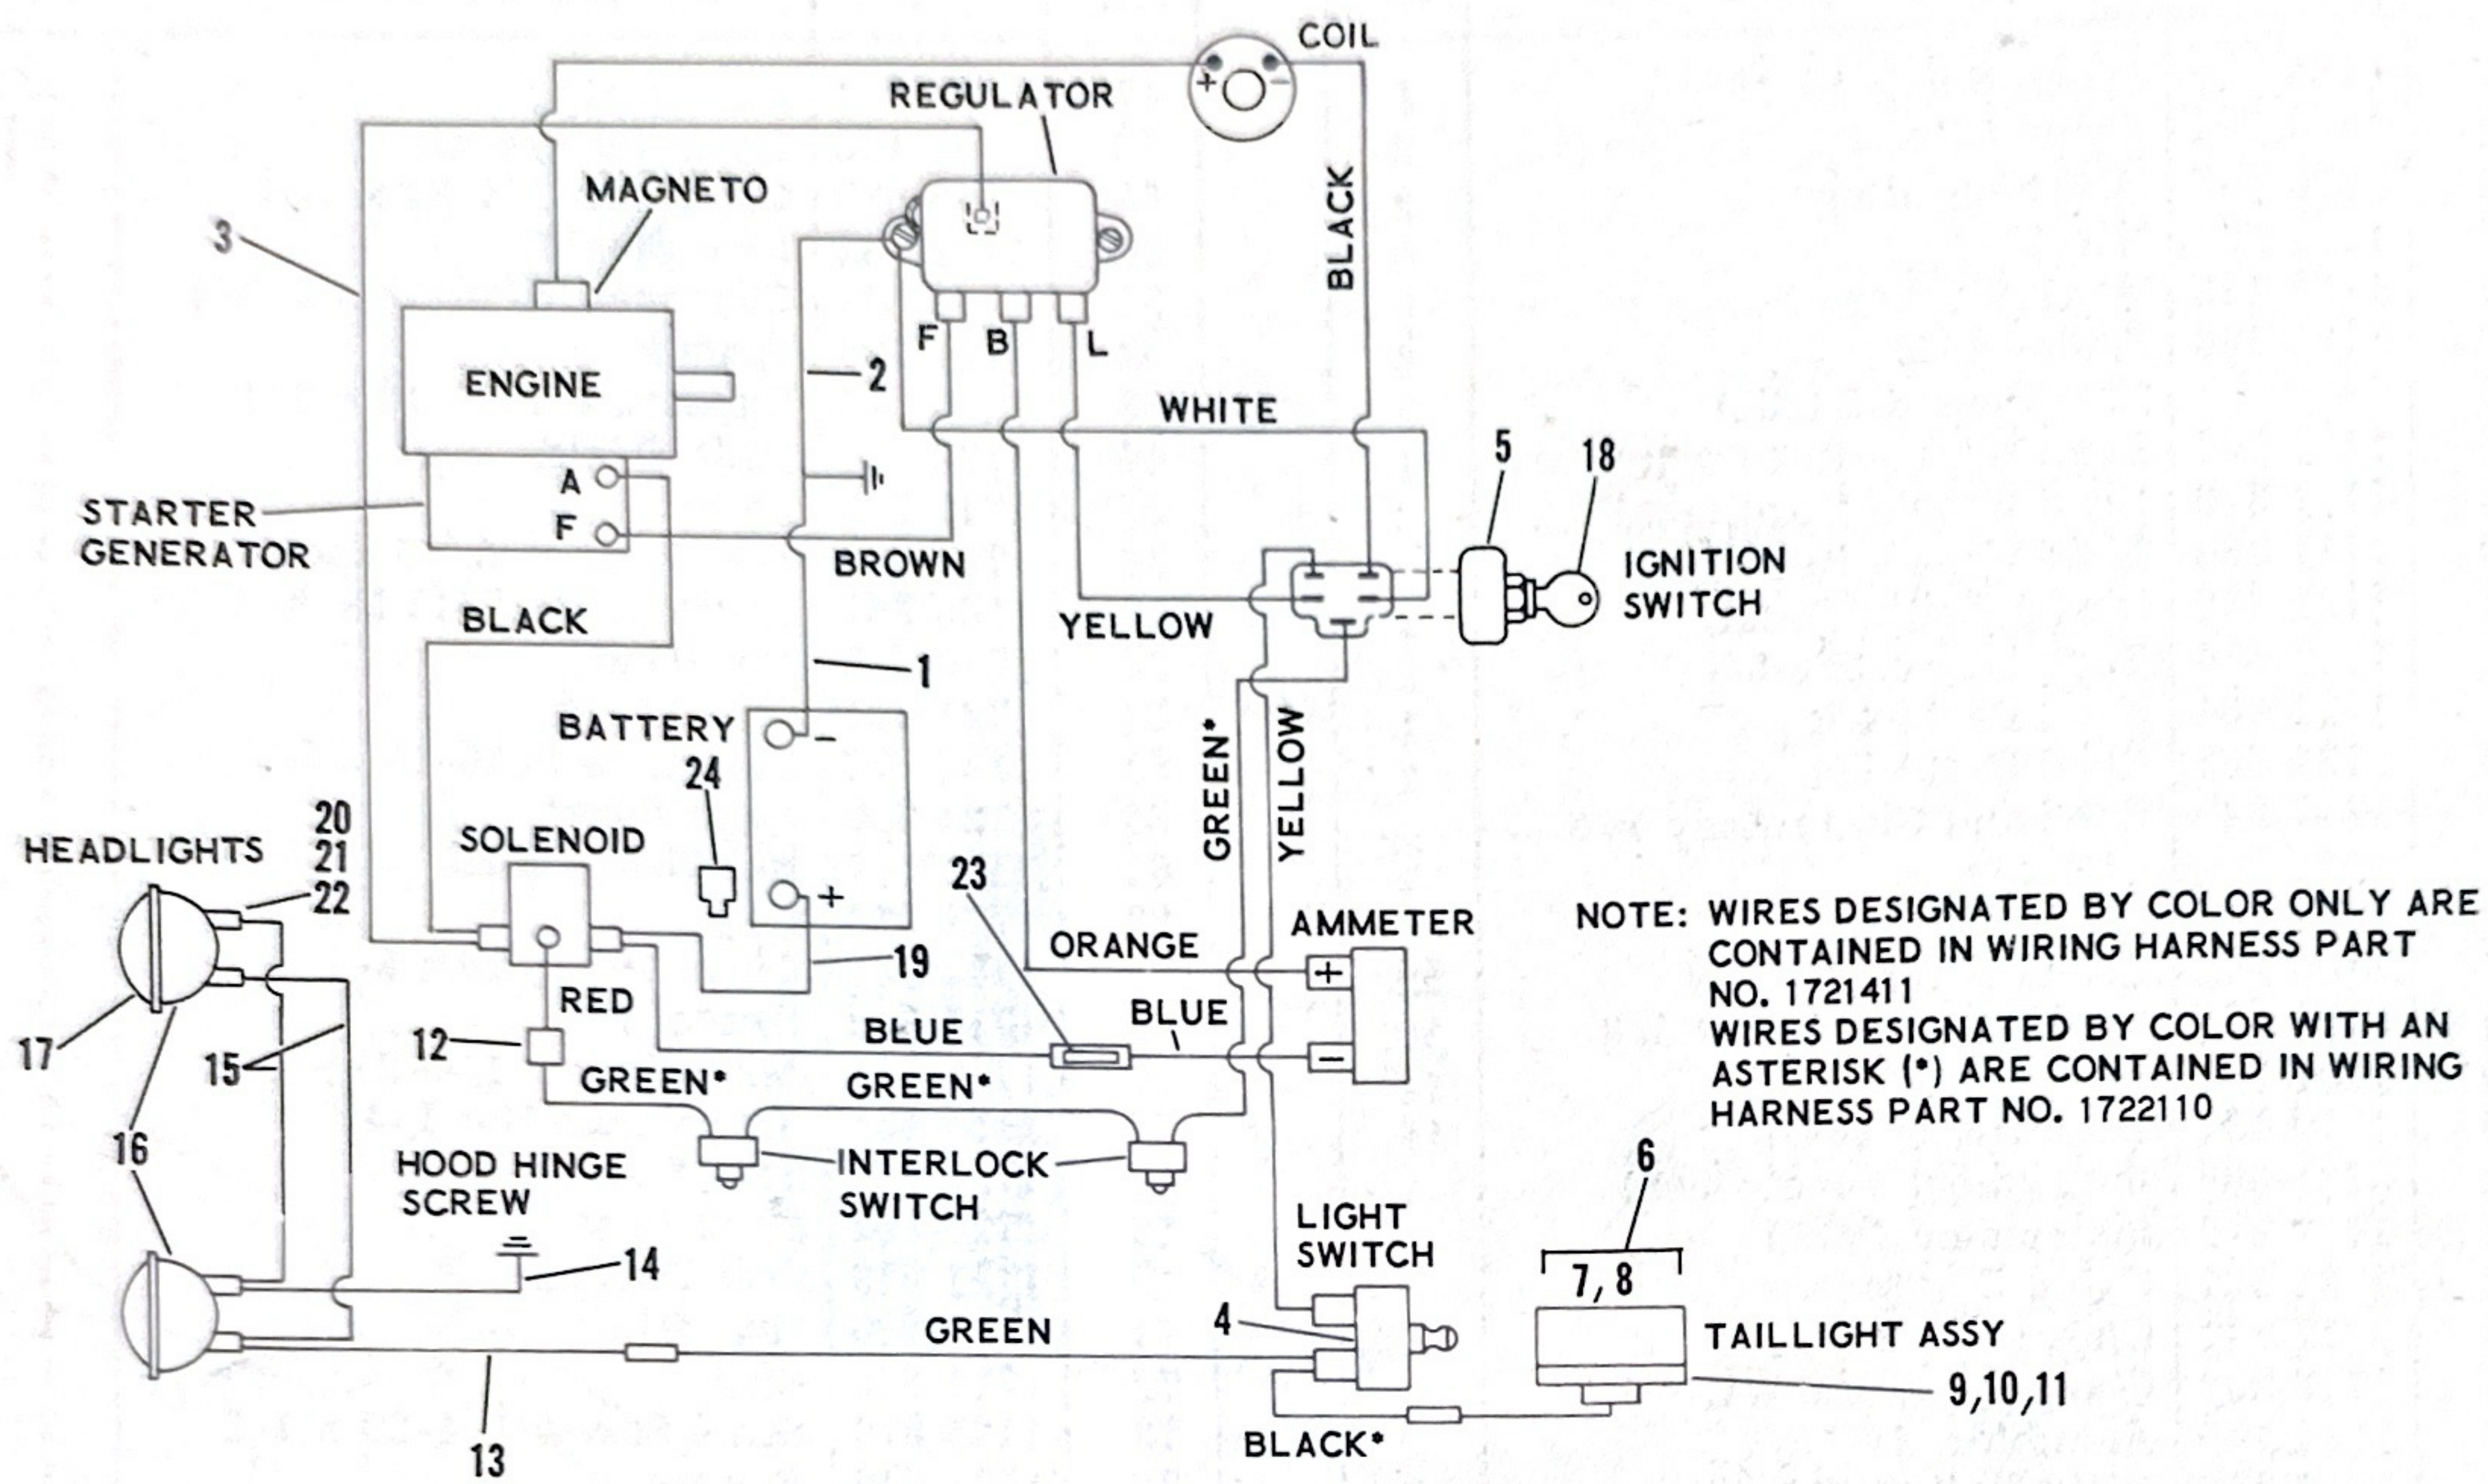


FIGURE 5

FIGURE 5 PARTS LIST

Ref. No.	Part No.	Description	No. Req'd
1	1716 636	Lead Assembly (Ground)	1
2	1719 511	Lead Wire (Ground)	1
3	1717 395	Lead Wire	1
4	1717 256	Light Switch	1
5	1721 409	Ignition Switch (Inc Ref 18)	1
6	1805 342	Taillight Assy (Inc 7 & 8)	1
7	*	Bulb (GE 1895)	1
8	1805 110	Lens Only	1
9	1103 989	Lockwasher #6	2
10	1109 764	Nut #6-32	2
11	1116 197	Screw #6-32 x 1/2	2
12	1721 038	Connector	1

Ref. No.	Part No.	Description	No. Req'd
13	1717 369	Lead Headlight	1
14	1717 394	Lead Headlight	1
15	1717 370	Lead Headlight	2
16	1719 708	Retaining Ring	2
17	*	Headlight Bulb (GE4406)	2
18	1718 266	(Key Only)	1
19	1719 510	Battery Lead	1
20	1185 746	Ratchet Plate	6
21	1185 807	Rivet	6
22	1185 748	Wave Washer	6
23	1720 976	Fuse 20 Amp	1
24	1721 413	Battery Terminal Boot	1

* Not stocked. Purchase from your local automotive or electrical supplier.