

BOLENS



TRACTOR
MODELS 1254-03
1254-04
1254-05 &
1254-06

ILLUSTRATED PARTS CATALOG



BOLENS

PORT WASHINGTON, WISCONSIN, U.S.A.
PRINTED IN U.S.A.

FORM NO. P-552518
PRINTED AT BOLENS

TRACTOR ASSEMBLY MODELS 1254-03, 04, 05 AND 06

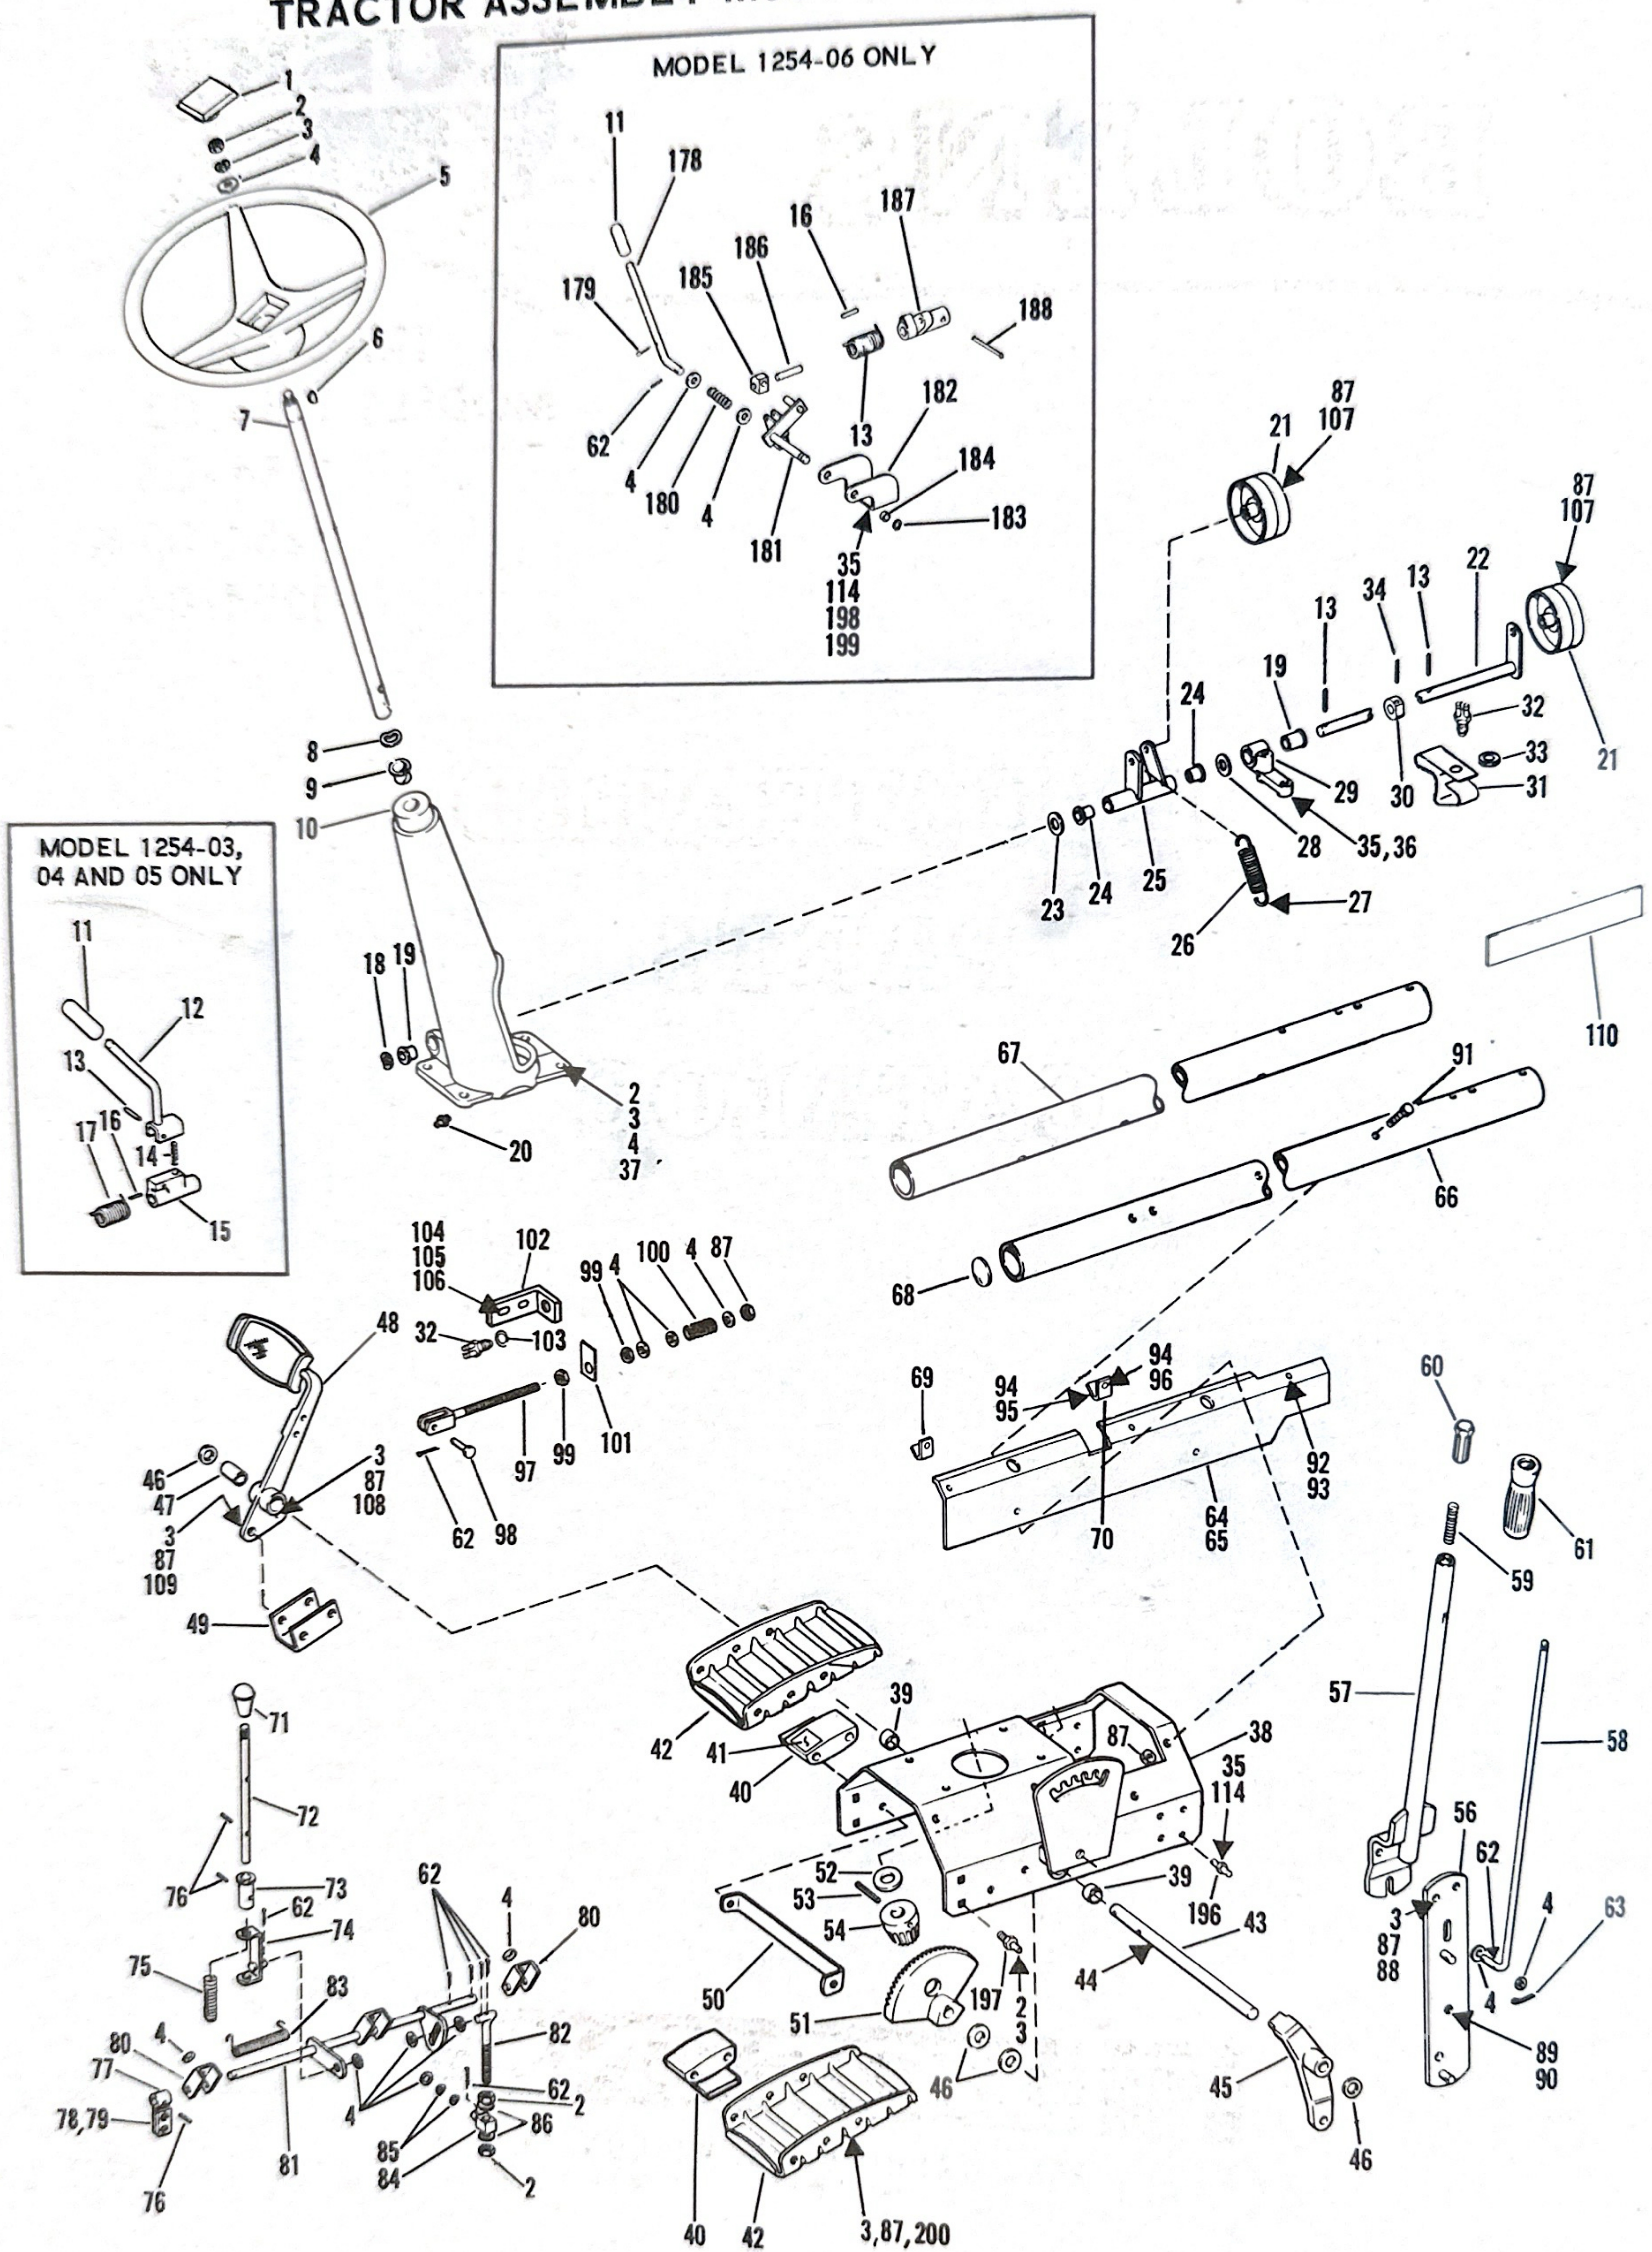


Figure 1

TRACTOR ASSEMBLY MODELS 1254-03, 04, 05 AND 06

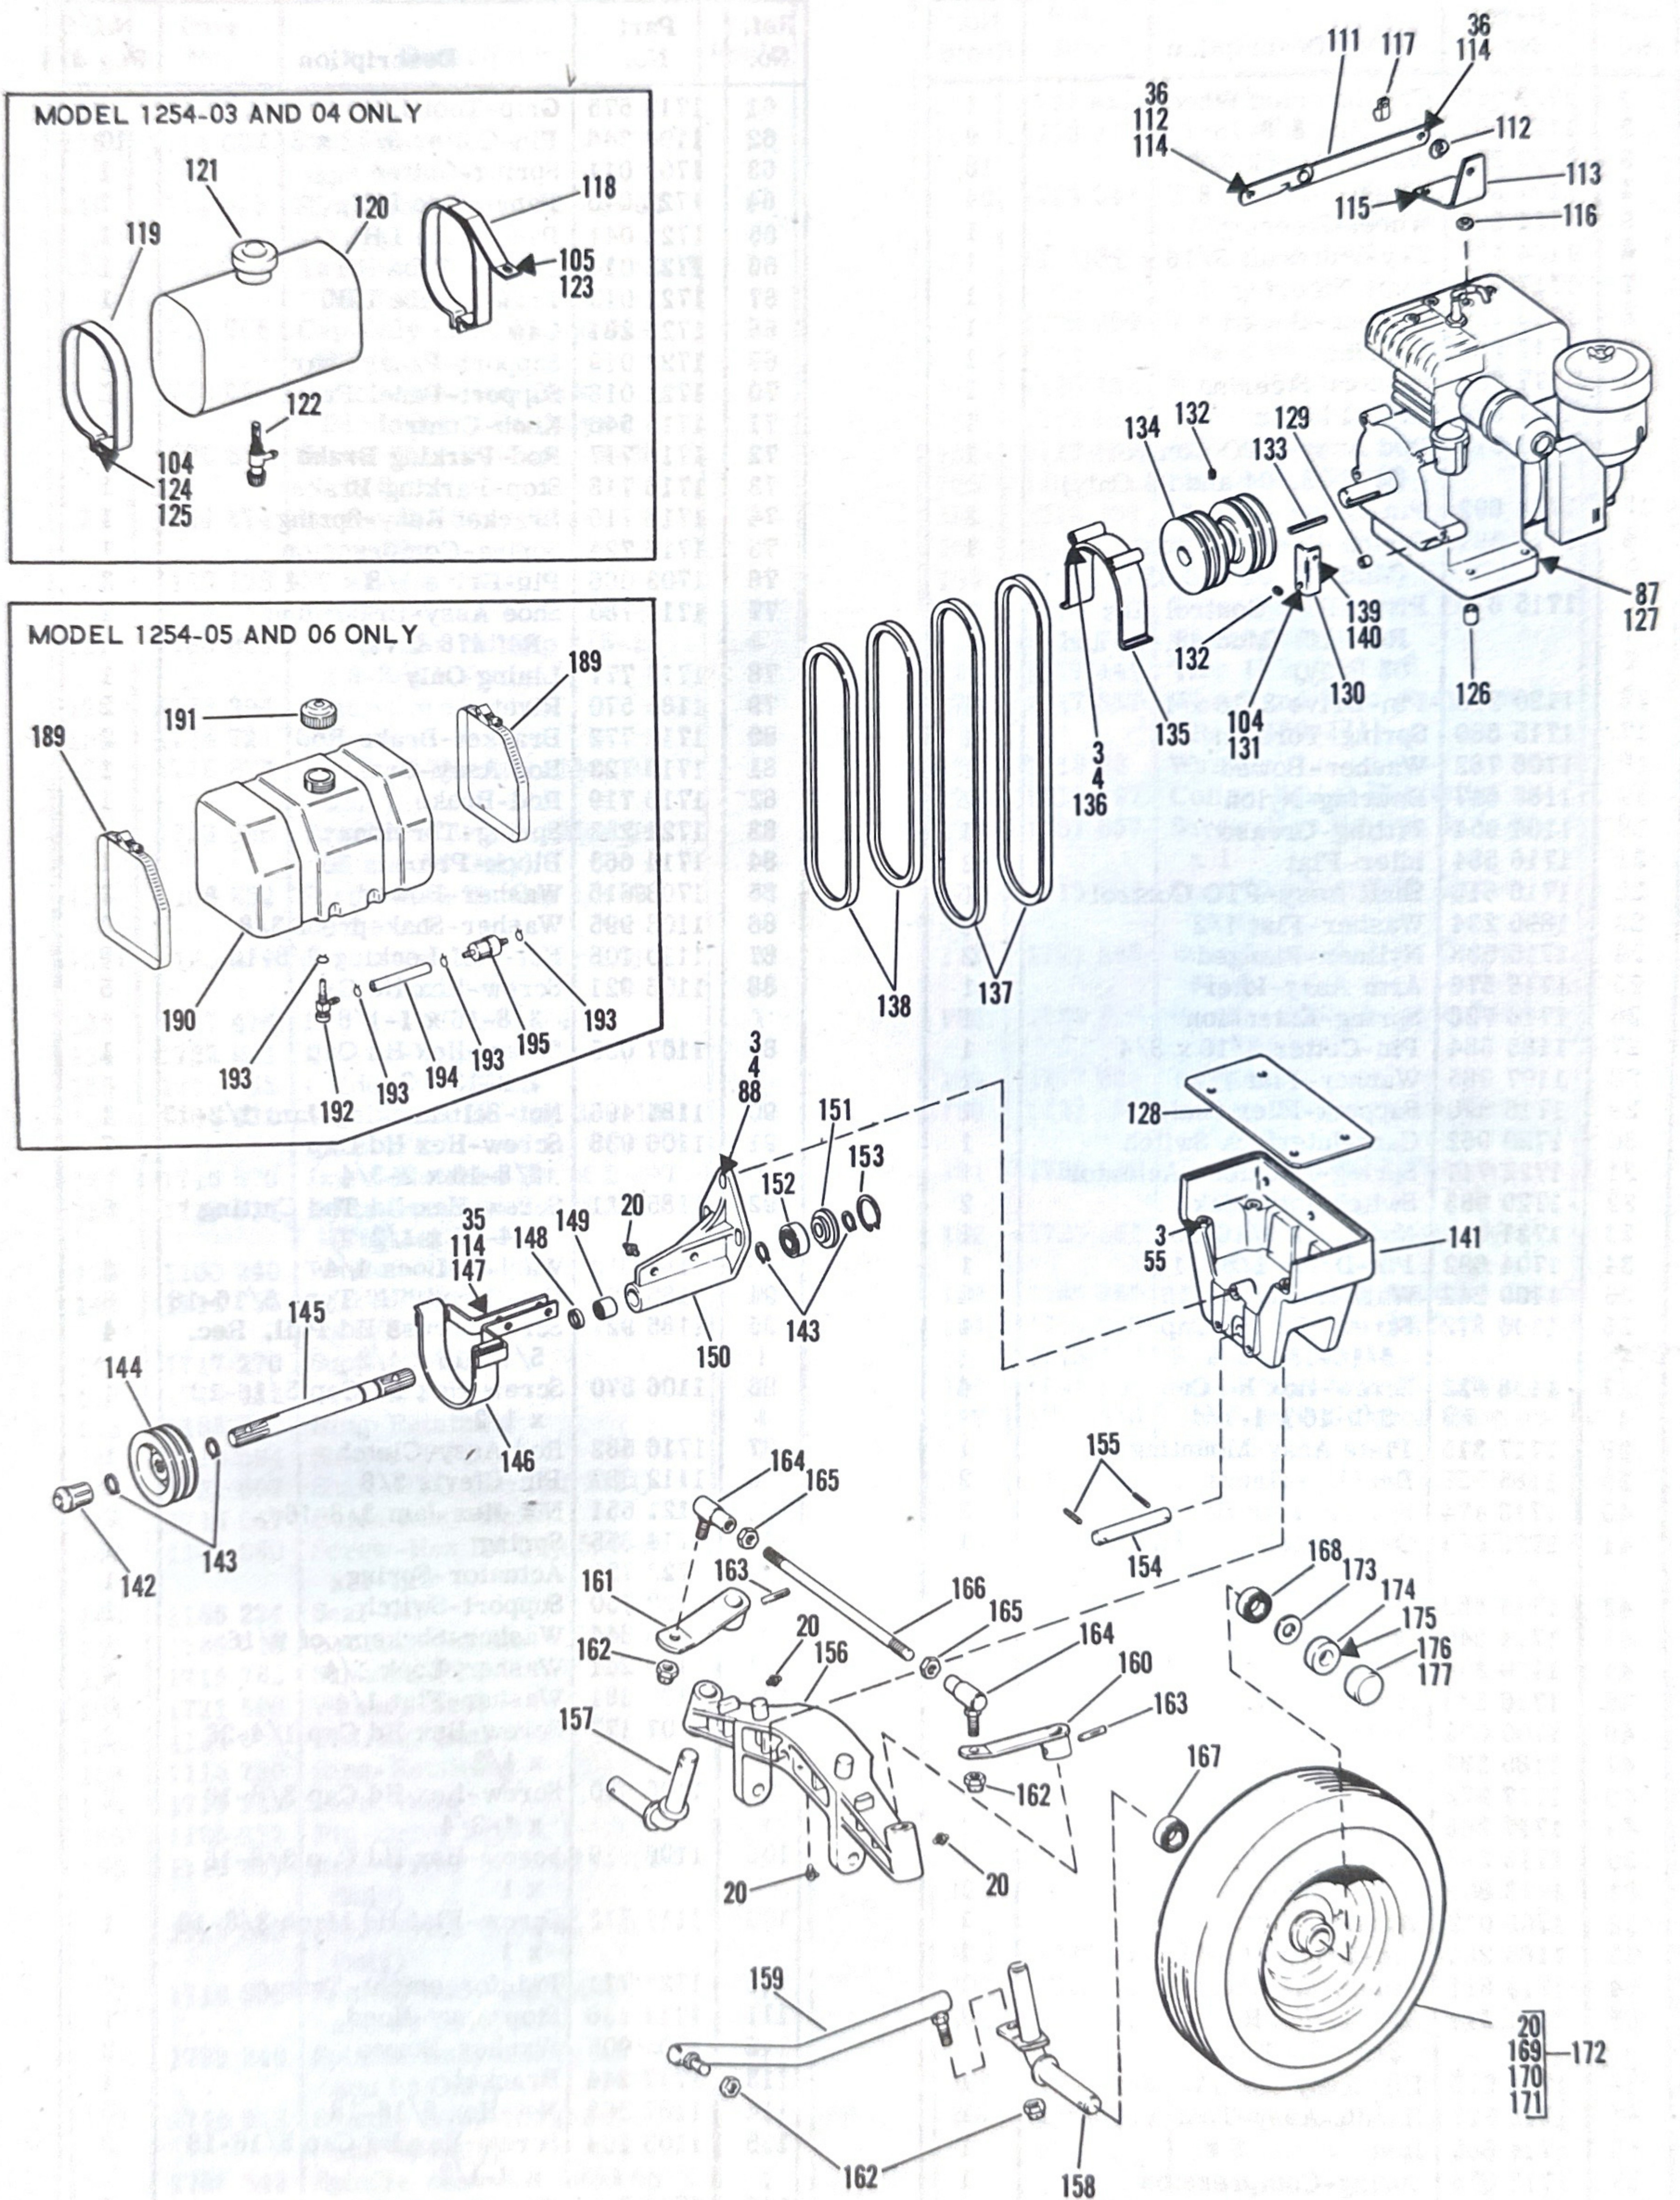


Figure 1

TRACTOR ASSEMBLY MODELS 1254-03, 04, 05 AND 06

FIGURE 1 PARTS LIST

Ref. No.	Part No.	Description	No. Req'd
1	1722 750	Cap-Steering Wheel	1
2	1121 509	Nut-Hex 3/8-16	9
3	1100 243	Washer-Lock 3/8	18
4	1107 383	Washer-Flat 3/8	24
5	1721 805	Wheel-Steering	1
6	1104 436	Key-Woodruff 3/16 x 3/4	1
7	1717 269	Shaft-Steering	1
8	1713 122	Washer-Bowed	1
9	1717 263	Bearing	1
10	1717 258	Support-Steering	1
11	1721 896	Grip-Plastic	1
12	1722 013	Rod Assy-PTO Control (Mod 03, 04 and 05 Only)	1
13	1704 692	Pin-Drive 1/8 x 1	3
14	1713 391	Spring-Compression (Mod 03, 04 and 05 Only)	1
15	1715 679	Pivot-PTO Control (Inc Ref #16) (Mod 03, 04 and 05 Only)	1
16	1120 210	Pin-Drive 3/16 x 1	1
17	1715 680	Spring-Torsion	1
18	1706 782	Washer-Bowed	1
19	1185 647	Bearing-Nylon	2
20	1104 954	Fitting-Grease	4
21	1716 584	Idler-Flat	2
22	1716 615	Shaft Assy-PTO Control	1
23	1890 234	Washer-Flat 1/2	1
24	1715 538	Nyliner-Flanged	2
25	1716 576	Arm Assy-Idler	1
26	1716 728	Spring-Extension	1
27	1185 584	Pin-Cotter 3/16 x 3/4	1
28	1107 385	Washer-Flat 1/2	1
29	1716 590	Support-Idler Shaft	1
30	1720 962	Cam-Interlock Switch	1
31	1722 717	Spring-Interlock Actuator	1
32	1720 963	Switch-Interlock	2
33	1721 070	Nut-Lock 9/16-18	1
34	1704 692	Pin-Drive 1/8 x 1	1
35	1100 242	Washer-Lock 5/16	8
36	1106 872	Screw-Hex Hd Cap 5/16-18 x 5/8	4
37	1106 923	Screw-Hex Hd Cap 3/8-16 x 1-1/4	4
38	1717 315	Plate Assy-Mounting	1
39	1185 558	Bearing-Sleeve	2
40	1713 474	Spacer-Foot Rest	2
41	1723 063	Decal-Clutch Pedal (Mod 03, 04 and 05 Only)	1
42	1713 483	Foot Rest	2
43	1714 840	Shaft-Cross	1
44	1100 350	Pin-Cotter 1/8 x 1	2
45	1716 563	Arm-Steering	1
46	1705 092	Washer-Flat	3
47	1185 582	Bearing-Sleeve	1
48	1717 372	Pedal-Clutch	1
49	1717 268	Lug	1
50	1713 397	Bar-Support	1
51	1713 809	Gear-Steering	1
52	1708 012	Washer-Flat	1
53	1185 284	Pin-Drive 1/4 x 2	1
54	1713 811	Pinion-Steering	1
55	1111 614	Screw-Hex Hd Cap 3/8-16 x 3 HT	4
56	1714 575	Lift Assy-Tool	1
57	1714 577	Handle Assy-Tool	1
58	1714 645	Rod	1
59	1713 075	Spring-Compression	1
60	1714 644	Plunger-Tool Lift	1

Ref. No.	Part No.	Description	No. Req'd
61	1715 575	Grip-Tool Lift	1
62	1100 346	Pin-Cotter 3/32 x 3/4	10
63	1703 011	Spring-Cotter	1
64	1722 040	Panel-Side RH	1
65	1722 041	Panel-Side LH	1
66	1722 014	Frame-Tube RH	1
67	1722 015	Frame-Tube LH	1
68	1723 281	Cap	2
69	1722 019	Support-Panel Rear	2
70	1722 018	Support-Panel Front	2
71	1715 546	Knob-Control	1
72	1716 717	Rod-Parking Brake	1
73	1716 718	Stop-Parking Brake	1
74	1716 716	Bracket Assy-Spring	1
75	1716 724	Spring-Compression	1
76	1703 066	Pin-Drive 1/8 x 3/4	3
77	1713 780	Shoe Assy-Brake (Inc Ref #78 & 79)	1
78	1713 777	Lining Only	1
79	1185 570	Rivet	2
80	1713 772	Bracket-Brake Rod	2
81	1716 723	Rod Assy-Brake	1
82	1716 719	Rod-Brake	1
83	1721 253	Spring-Torsion	1
84	1714 663	Block-Pivot	1
85	1703 616	Washer-Bowed	2
86	1103 995	Washer-Shakeproof 3/8	2
87	1110 108	Nut-Self Locking 3/8-16	18
88	1106 921	Screw-Hex Hd Cap 3/8-16 x 1-1/8	5
89	1107 035	Screw-Hex Hd Cap 1/2-13 x 2	1
90	1185 496	Nut-Self Locking Jam 1/2-13	1
91	1106 938	Screw-Hex Hd Cap 3/8-16 x 2-3/4	7
92	1185 211	Screw-Hex Hd Thd Cutting 1/4-20 x 1/2	6
93	1187 612	Washer-Lock 1/4	6
94	1185 498	Nut-Speed "U" Type 5/16-18	8
95	1185 927	Screw-Truss Hd Pail. Rec. 5/16-18 x 1/2	4
96	1106 870	Screw-Hex Hd Cap 5/16-18 x 1/2	4
97	1716 582	Rod Assy-Clutch	1
98	1112 587	Pin-Clevis 3/8	1
99	1121 551	Nut-Hex Jam 3/8-16	2
100	1714 655	Spring	1
101	1722 729	Actuator-Spring	1
102	1722 730	Support-Switch	1
103	1185 844	Washer-Shakeproof 9/16	1
104	1100 241	Washer-Lock 1/4	4
105	1107 381	Washer-Flat 1/4	3
106	1107 177	Screw-Hex Hd Cap 1/4-28 x 1/2	2
107	1106 930	Screw-Hex Hd Cap 3/8-16 x 1-3/4	2
108	1106 919	Screw-Hex Hd Cap 3/8-16 x 1	1
109	1117 713	Screw-Flat Hd Mach 3/8-16 x 1	1
110	1723 711	Reinforcement-Frame	2
111	1717 236	Stop Assy-Hood	1
112	1705 905	Washer-Bowed	2
113	1717 244	Bracket	1
114	1182 563	Nut-Hex 5/16-18	8
115	1103 204	Screw-Hex Hd Cap 5/16-18 x 2-1/2	2
116	1714 720	Spacer	1

TRACTOR ASSEMBLY MODELS 1254-03, 04, 05 AND 06

FIGURE 1 PARTS LIST (CONT)

Ref. No.	Part No.	Description	No. Req'd
117	1721 037	Clip	1
118	1714 687	Strap Assy-Tank (Mod 03, and 04 Only)	1
119	1714 685	Strap-Tank (Mod 03 and 04 Only)	1
120	1714 767	Tank-Gasoline (Inc Ref #121) (Mod 03 and 04 Only)	1
121	1714 766	Cap Only (Mod 03 and 04 Only)	1
122	1718 029	Outlet-Gasoline Tank (Mod 03 and 04 Only)	1
123	1106 832	Screw-Hex Hd Cap 1/4-20 x 5/8	1
124	1114 474	Screw-Fillister Head 1/4-20 x 1-1/2	2
125	1110 106	Nut-Lock 1/4-20	2
126	1714 648	Spacer	4
127	1185 880	Screw-Hex Hd Cap 3/8-16 x 3-3/4 HT	4
128	1713 394	Plate-Cover	1
129	1714 721	Spacer	1
130	1716 679	Bracket-Throttle (Mod 03 Only)	1
	1723 356	Bracket-Throttle (Mod 04, 05 and 06 Only)	1
131	1106 852	Screw-Hex Hd Cap 1/4-20 x 2	1
132	1185 919	Screw-Set 5/16-18 x 3/8 (w Point)	2
133	1187 474	Key 1/4 SP x 2-1/4	1
134	1722 941	Sheave-Engine	1
135	1716 642	Guide Assy-Belt	1
136	1106 936	Screw-Hex Hd Cap 3/8-16 x 2-1/2	2
137	1716 570	Belts-Matched Set of 2 (PTO)	1
138	1716 571	Belts-Matched Set of 2 (Engine)	1
139	1100 240	Washer-Lock #10	1
140	1114 755	Screw-Rd Hd Mach #10-32 x 5/8	1
141	1717 270	Support-Axle	1
142	1714 132	Crutch Tip	1
143	1185 649	Ring-Retaining	4
144	1716 594	Sheave-PTO	1
145	1721 597	Shaft-PTO (Inc Ref #151)	1
146	1716 647	Guide Assy-Belt	1
147	1106 880	Screw-Hex Hd Cap 5/8-16 x 1-1/8	2
148	1185 224	Seal-Oil	1
149	1185 010	Bearing-Needle	1
150	1715 785	Support-PTO	1
151	1721 590	Washer-Seal	1
152	1185 605	Bearing-Ball	1
153	1118 730	Ring-Retaining	1
154	1713 383	Pivot-Axle	1
155	1185 232	Pin-Drive 3/16 x 1-1/4	2
156	1716 697	Axle-Front (Mod 03 and 04 Only)	1
	1723 343	Axle-Front (Mod 05 and 06 Only)	1
157	1716 953	Spindle Assy-LH (Mod 03 and 04 Only)	1
	1723 346	Spindle Assy-LH (Mod 05 and 06 Only)	1
158	1716 952	Spindle Assy-RH (Mod 03 and 04 Only)	1
	1723 345	Spindle Assy-RH (Mod 05 and 06 Only)	1

Ref. No.	Part No.	Description	No. Req'd
159	1717 462	Link-Drag	1
160	1713 378	Tie Rod Arm Assy-RH (Mod 03 and 04 Only)	1
	1723 355	Tie Rod Arm Assy-RH (Mod 05 and 06 Only)	1
161	1713 377	Tie Rod Arm Assy-LH (Mod 03 and 04 Only)	1
	1723 354	Tie Rod Arm Assy-LH (Mod 05 and 06 Only)	1
162	1110 152	Nut-Self Locking 1/2-20	4
163	1891 696	Pin-Drive 5/16 x 1-1/2	2
164	1713 361	Ball Joint	2
165	1103 926	Nut-Jam 1/2-20	2
166	1713 385	Rod-Tie	1
167	1185 616	Bearing-Ball	2
168	1185 615	Bearing-Ball	2
169	1715 855	Valve Stem Assy	2
170	1715 789	Wheel Only	2
171	1717 441	Tire 16 x 6:50 x 8	2
172	1717 357	Wheel and Tire Assy (Inc Ref #169-171)	2
173	1218 98	Washer	2
174	1716 197	Collar-Wheel Retaining	2
175	1187 857	Screw-Hex Hd Cap 1/4-20 x 1	2
176	1715 899	Dust Cap 1-1/2 ID (Some Mod)	2
177	1721 245	Dust Cap 1-5/8 ID (Some Mod)	2
178	1723 379	Handle-PTO Control (Mod 06 Only)	1
179	1177 625	Pin-Drive	1
180	1723 367	Spring-Compression (Mod 06 Only)	1
181	1723 380	Pivot Assy-PTO Control (Mod 06 Only)	1
182	1723 381	Support-PTO Control (Mod 06 Only)	1
183	1185 257	Ring-Retaining (Mod 06 Only)	2
184	1714 243	Bushing-Nylon (Mod 06 Only)	2
185	1723 368	Block-Pivot (Mod 06 Only)	1
186	1891 696	Pin-Drive (Mod 06 Only)	1
187	1723 370	Pivot-PTO Control (Mod 06 Only)	1
188	1185 892	Pin-Drive 1/8 x 1 (Mod 06 Only)	1
189	1723 413	Strap-Gas Tank (Mod 05 and 06 Only)	2
190	1721 597	Tank-Gasoline (Mod 05 and 06 Only)	1
191	1723 473	Cap-Gas Tank (Mod 05 and 06 Only)	1
192	1723 518	Outlet-Gas Tank (Mod 05 and 06 Only)	1
193	1718 185	Clamp Hose	5
194	1723 519	Line-Fuel (Mod 05 and 06 Only)	1
195	1723 521	Filter-Fuel (Mod 05 and 06 Only)	1
196	1722 848	Pin-Front	2
197	1722 849	Pin-Rear	2
198	1106 874	Screw-Hex Hd Cap 5/16-18 x 3/4	2
199	1107 382	Washer-Flat 5/16	2
200	1106 940	Screw-Hex Hd Cap 3/8-16 x 3	4

TRACTOR ASSEMBLY MODELS 1254-03, 04, 05 AND 06

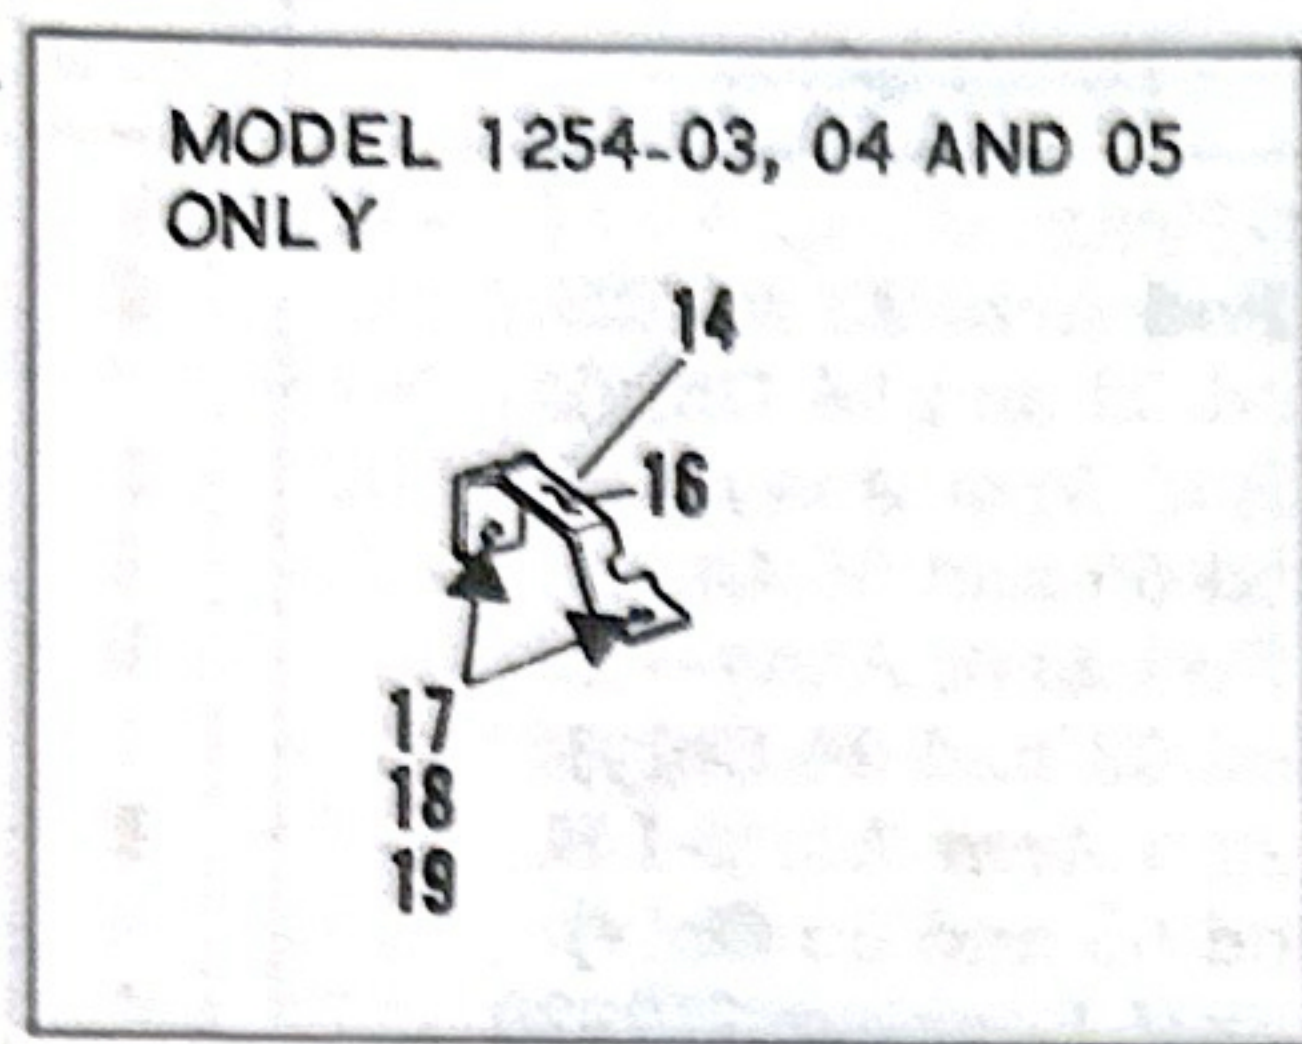
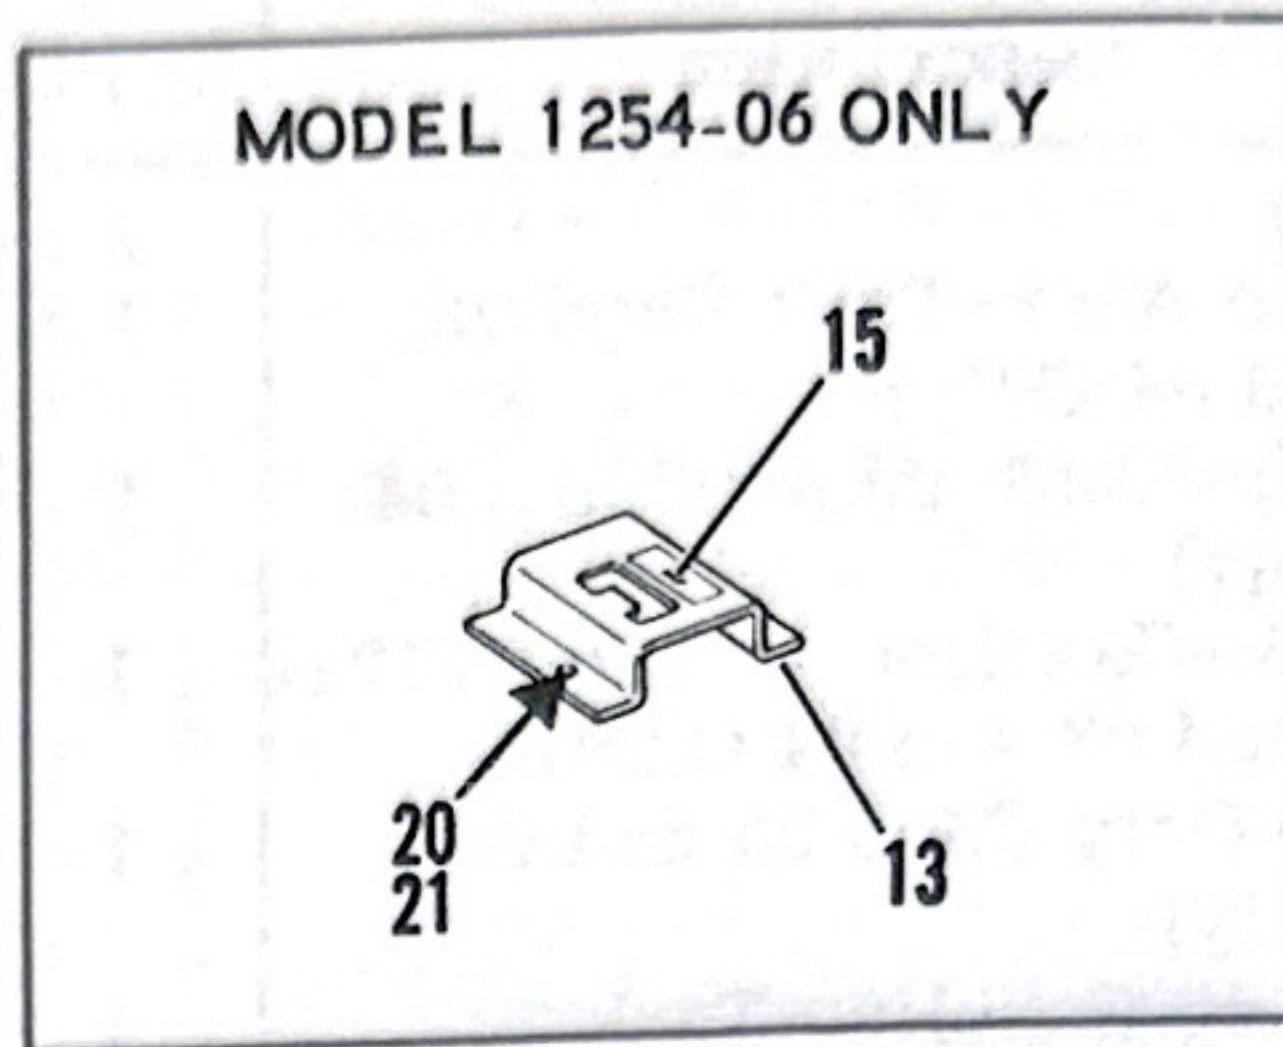
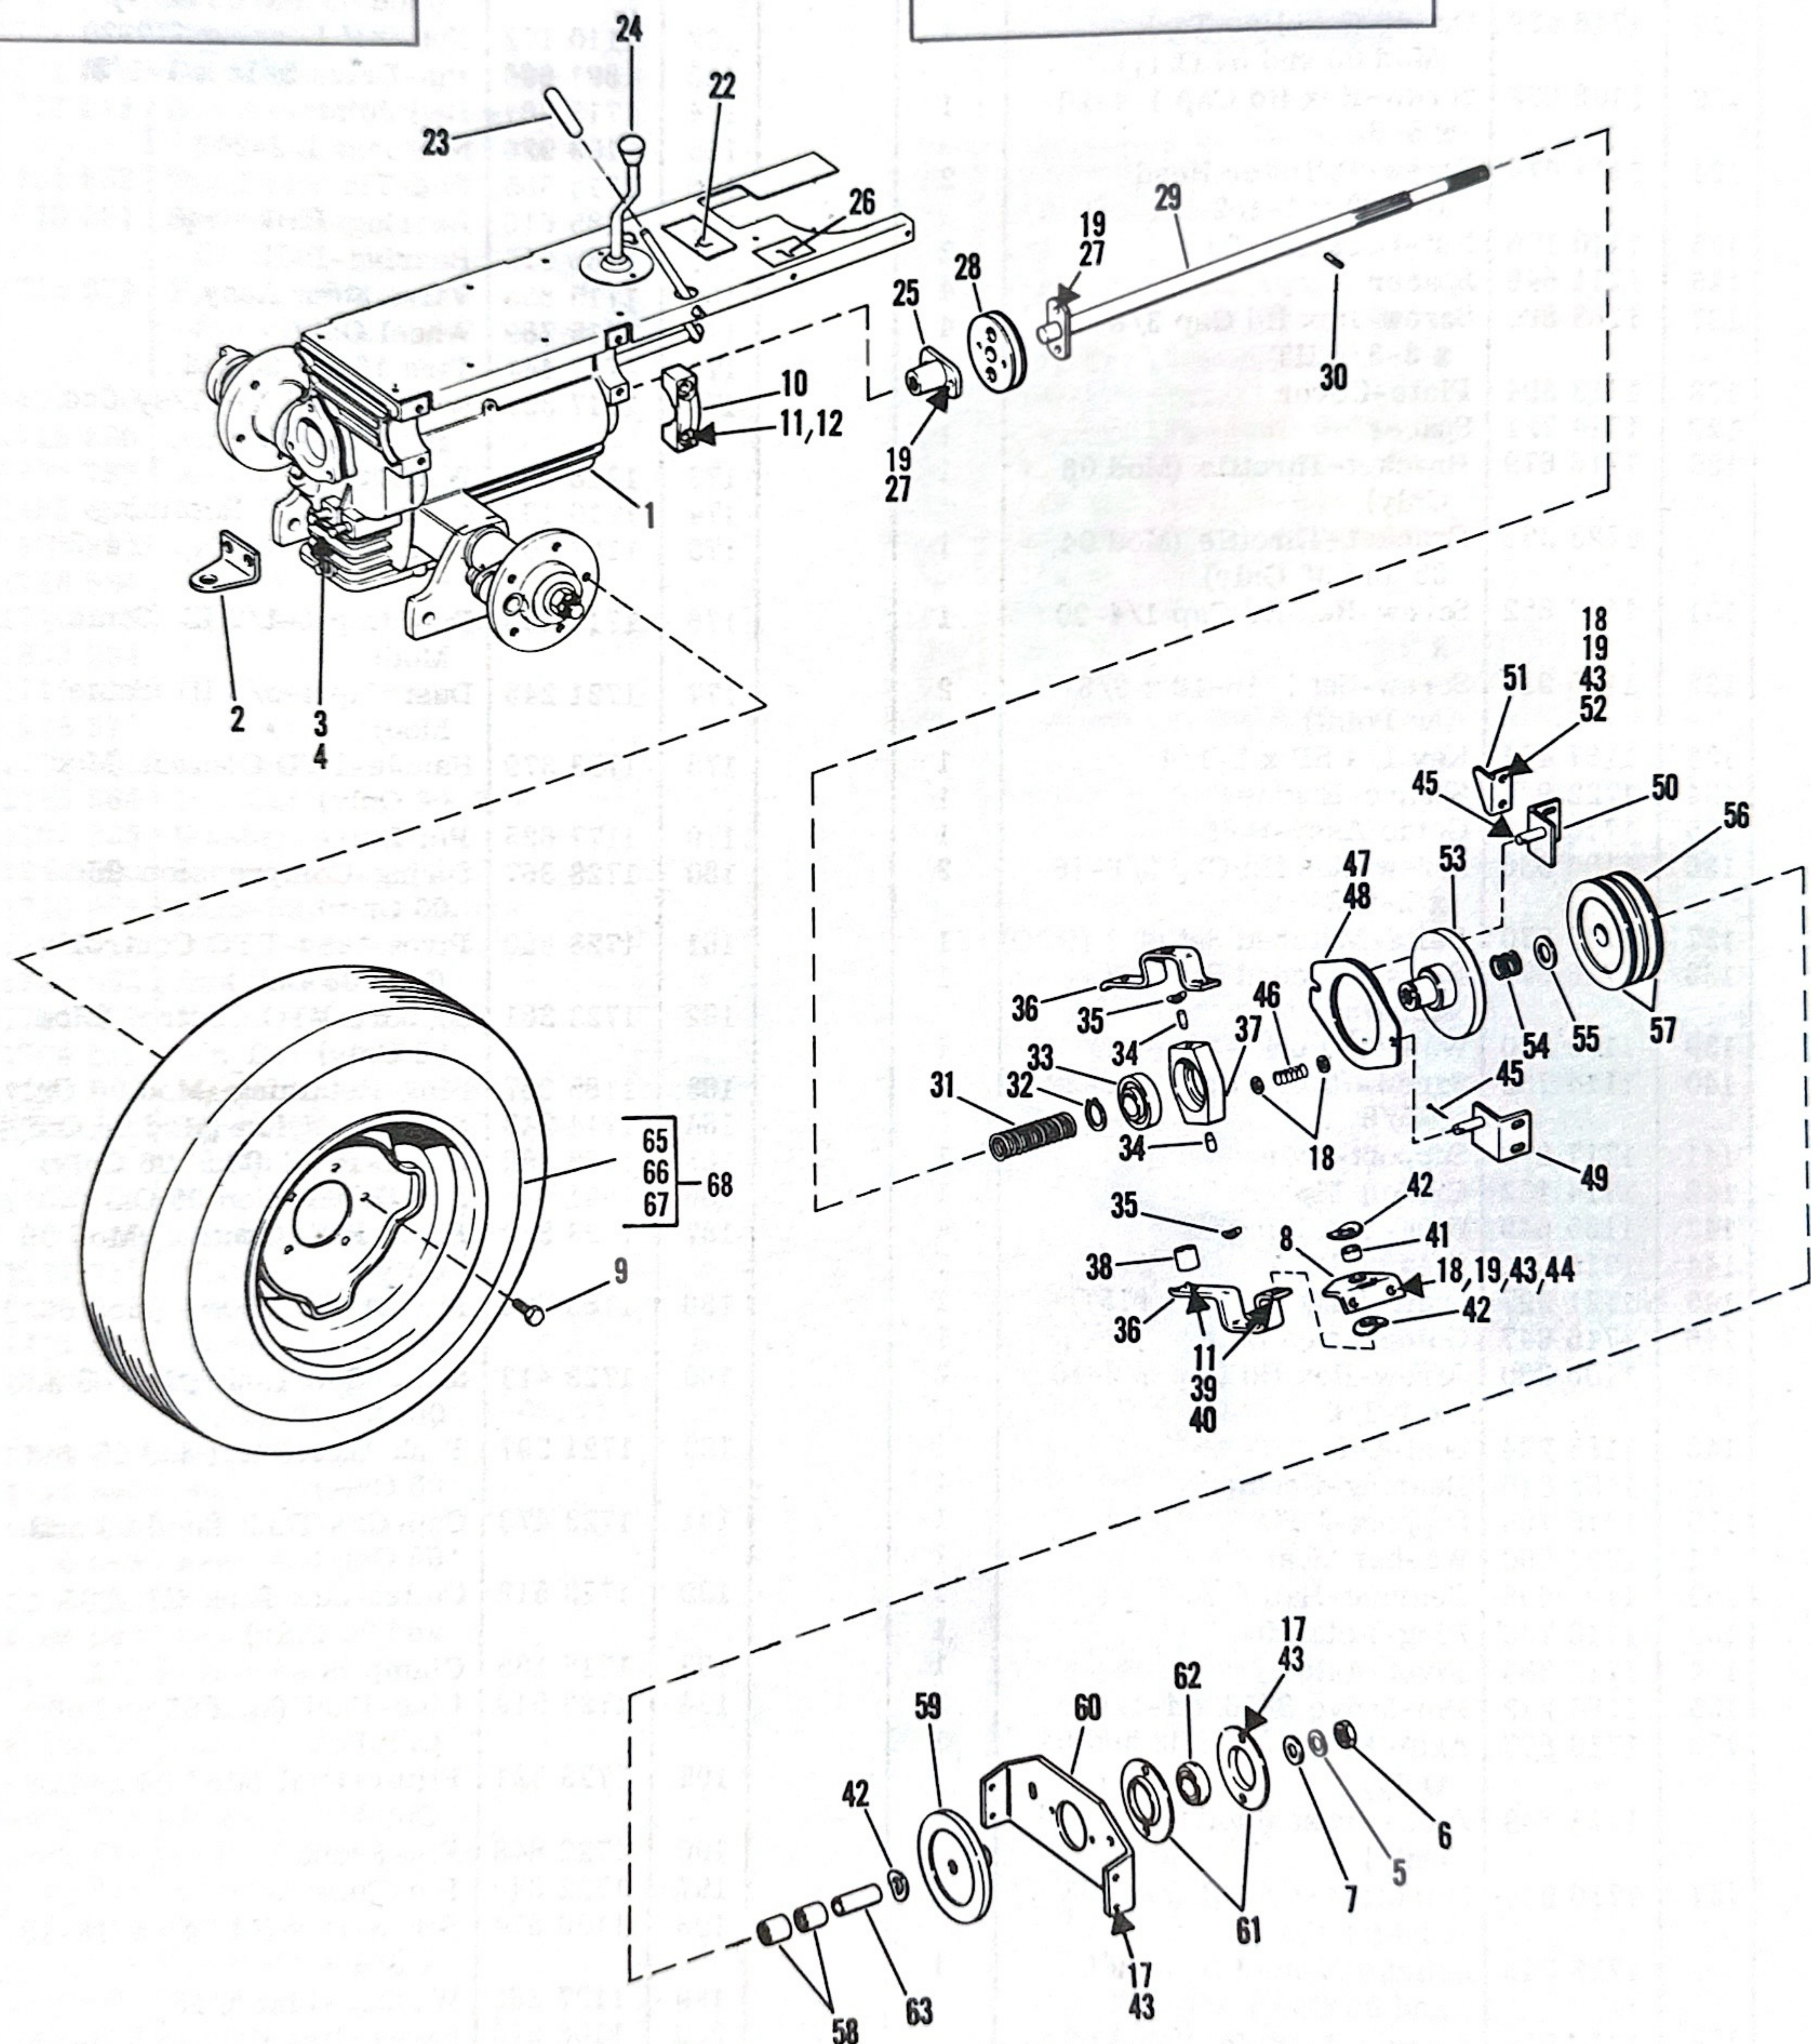


FIGURE 2

TRACTOR ASSEMBLY MODELS 1254-03, 04, 05 AND 06

FIGURE 2 PARTS LIST

Ref. No.	Part No.	Description	No. Req'd	Ref. No.	Part No.	Description	No. Req'd
1	1716 736	Transmission Assy (See Fig 3 for Breakdown)	1	35	1219 00	Washer-Bowed	2
2	1714 101	Hitch	1	36	1714 666	Yoke-Clutch	2
3	1100 245	Washer-Lock 1/2	2	37	1714 639	Retainer-Bearing	1
4	1121 511	Nut-Hex 1/2-13	2	38	1714 665	Spacer	1
5	1100 246	Washer-Lock 9/16	1	39	1106 927	Screw-Hex Hd Cap 3/8-16 x 1-1/2	2
6	1110 153	Nut-Self Locking 9/16-18	1	40	1110 108	Nut-Self Locking 3/8-14	2
7	1185 023	Washer-Flat 9/16	1	41	1714 664	Spacer	1
8	1714 656	Support-Yoke	1	42	1713 122	Washer-Bowed	3
9	1010 85	Bolt-Hub	10	43	1100 242	Washer-Lock 5/16	12
10	1713 461	Cap-Mounting	4	44	1106 874	Screw-Hex Hd Cap 5/16-18 x 3/4	2
11	1100 243	Washer-Lock 3/8	10	45	1100 346	Pin-Cotter 3/32 x 3/4	2
12	1106 930	Screw-Hex Hd Cap 3/8-16 x 1-3/4	8	46	1713 167	Spring-Compression	2
13	1723 382	Quadrant-PTO Lever (Mod 06 Only)	1	47	1716 618	Plate Assy-Brake (Inc Ref #48)	1
14	1713 472	Quadrant-PTO Lever (Mod 03, 04 and 05 Only)	1	48	1716 599	Friction Disc Only	1
15	1723 542	Decal-PTO (Mod 06 Only)	1	49	1716 637	Bracket Assy-RH	1
16	1721 072	Decal-PTO (Mod 03, 04 and 05 Only)	1	50	1716 638	Bracket Assy-LH	1
17	1106 872	Screw-Hex Hd Cap 5/16-18 x 5/8	8	51	1716 586	Stop-Clutch Pedal	1
18	1107 382	Washer-Flat 5/16	12	52	1106 878	Screw-Hex Hd Cap 5/16-18 x 1	4
19	1110 107	Nut-Self Locking 5/16-18	8	53	1716 596	Flange-Clutch	1
20	1185 211	Screw-Hex Hd Thd Cutting 1/4-20 x 1/2	2	54	1716 583	String-Compression	1
21	1187 612	Washer-Lock 1/4	2	55	1185 432	Pace-Thrust	1
22	1723 550	Decal-Instruction (Mod 06 Only)	1	56	1717 240	Sheave and Facing Assy (Inc Ref #57)	1
	1721 069	Decal-Instruction (Mod 03, 04 and 05 Only)	1	57	1716 599	Friction Disc	2
23	1721 896	Grip-Plastic	1	58	1185 471	Bearing-Needle	2
24	1723 559	Grip-Handle (Mod 06 Only)	1	59	1716 598	Flange-Clutch	1
	1715 546	Grip-Handle (Mod 03, 04 and 05 Only)	1	60	1717 293	Support-Bearing	1
25	1716 585	Coupling-Shaft	1	61	1185 588	Bearing-Flange	2
26	1722 928	Decal-Lift Lever (Mod 03, 04 and 05 Only)	1	62	1185 587	Bearing-Self Aligning	1
27	1110 818	Screw - Knl Soc Hd Cap 5/16-18 x 3/4	4	63	1717 238	Spacer-Special	1
28	1716 561	Coupling-Bonded	1	64	1722 521	Wheel and Tire Assy-Rear (Inc Ref #65-67)	2
29	1717 243	Shaft Assy-Drive	1	65	1715 787	Wheel Only	2
30	1713 432	Pin-Drive 3/16 x 1-1/4	1	66	1722 522	Tubeless Tire 23 x 10.50 x 12	2
31	1714 649	Spring	1	67	1716 011	Valve Stem Assy	2
32	1113 526	Ring-Retaining	1	MODEL 18834 AGRI. TIRE KIT			
33	1704 479	Bearing	1	68	1723 196	Wheel and Tire Assy RH	1
34	1110 202	Pin-Dowel	2		1715 787	Wheel Assy	2
					1716 011	Valve Stem Assy	2
					1723 199	Tire 23 x 10.50 x 12	2
					1724 884	Wheel and Tire Assy LH	1

TRACTOR ASSEMBLY MODELS 1254-03, 04, 05 AND 06

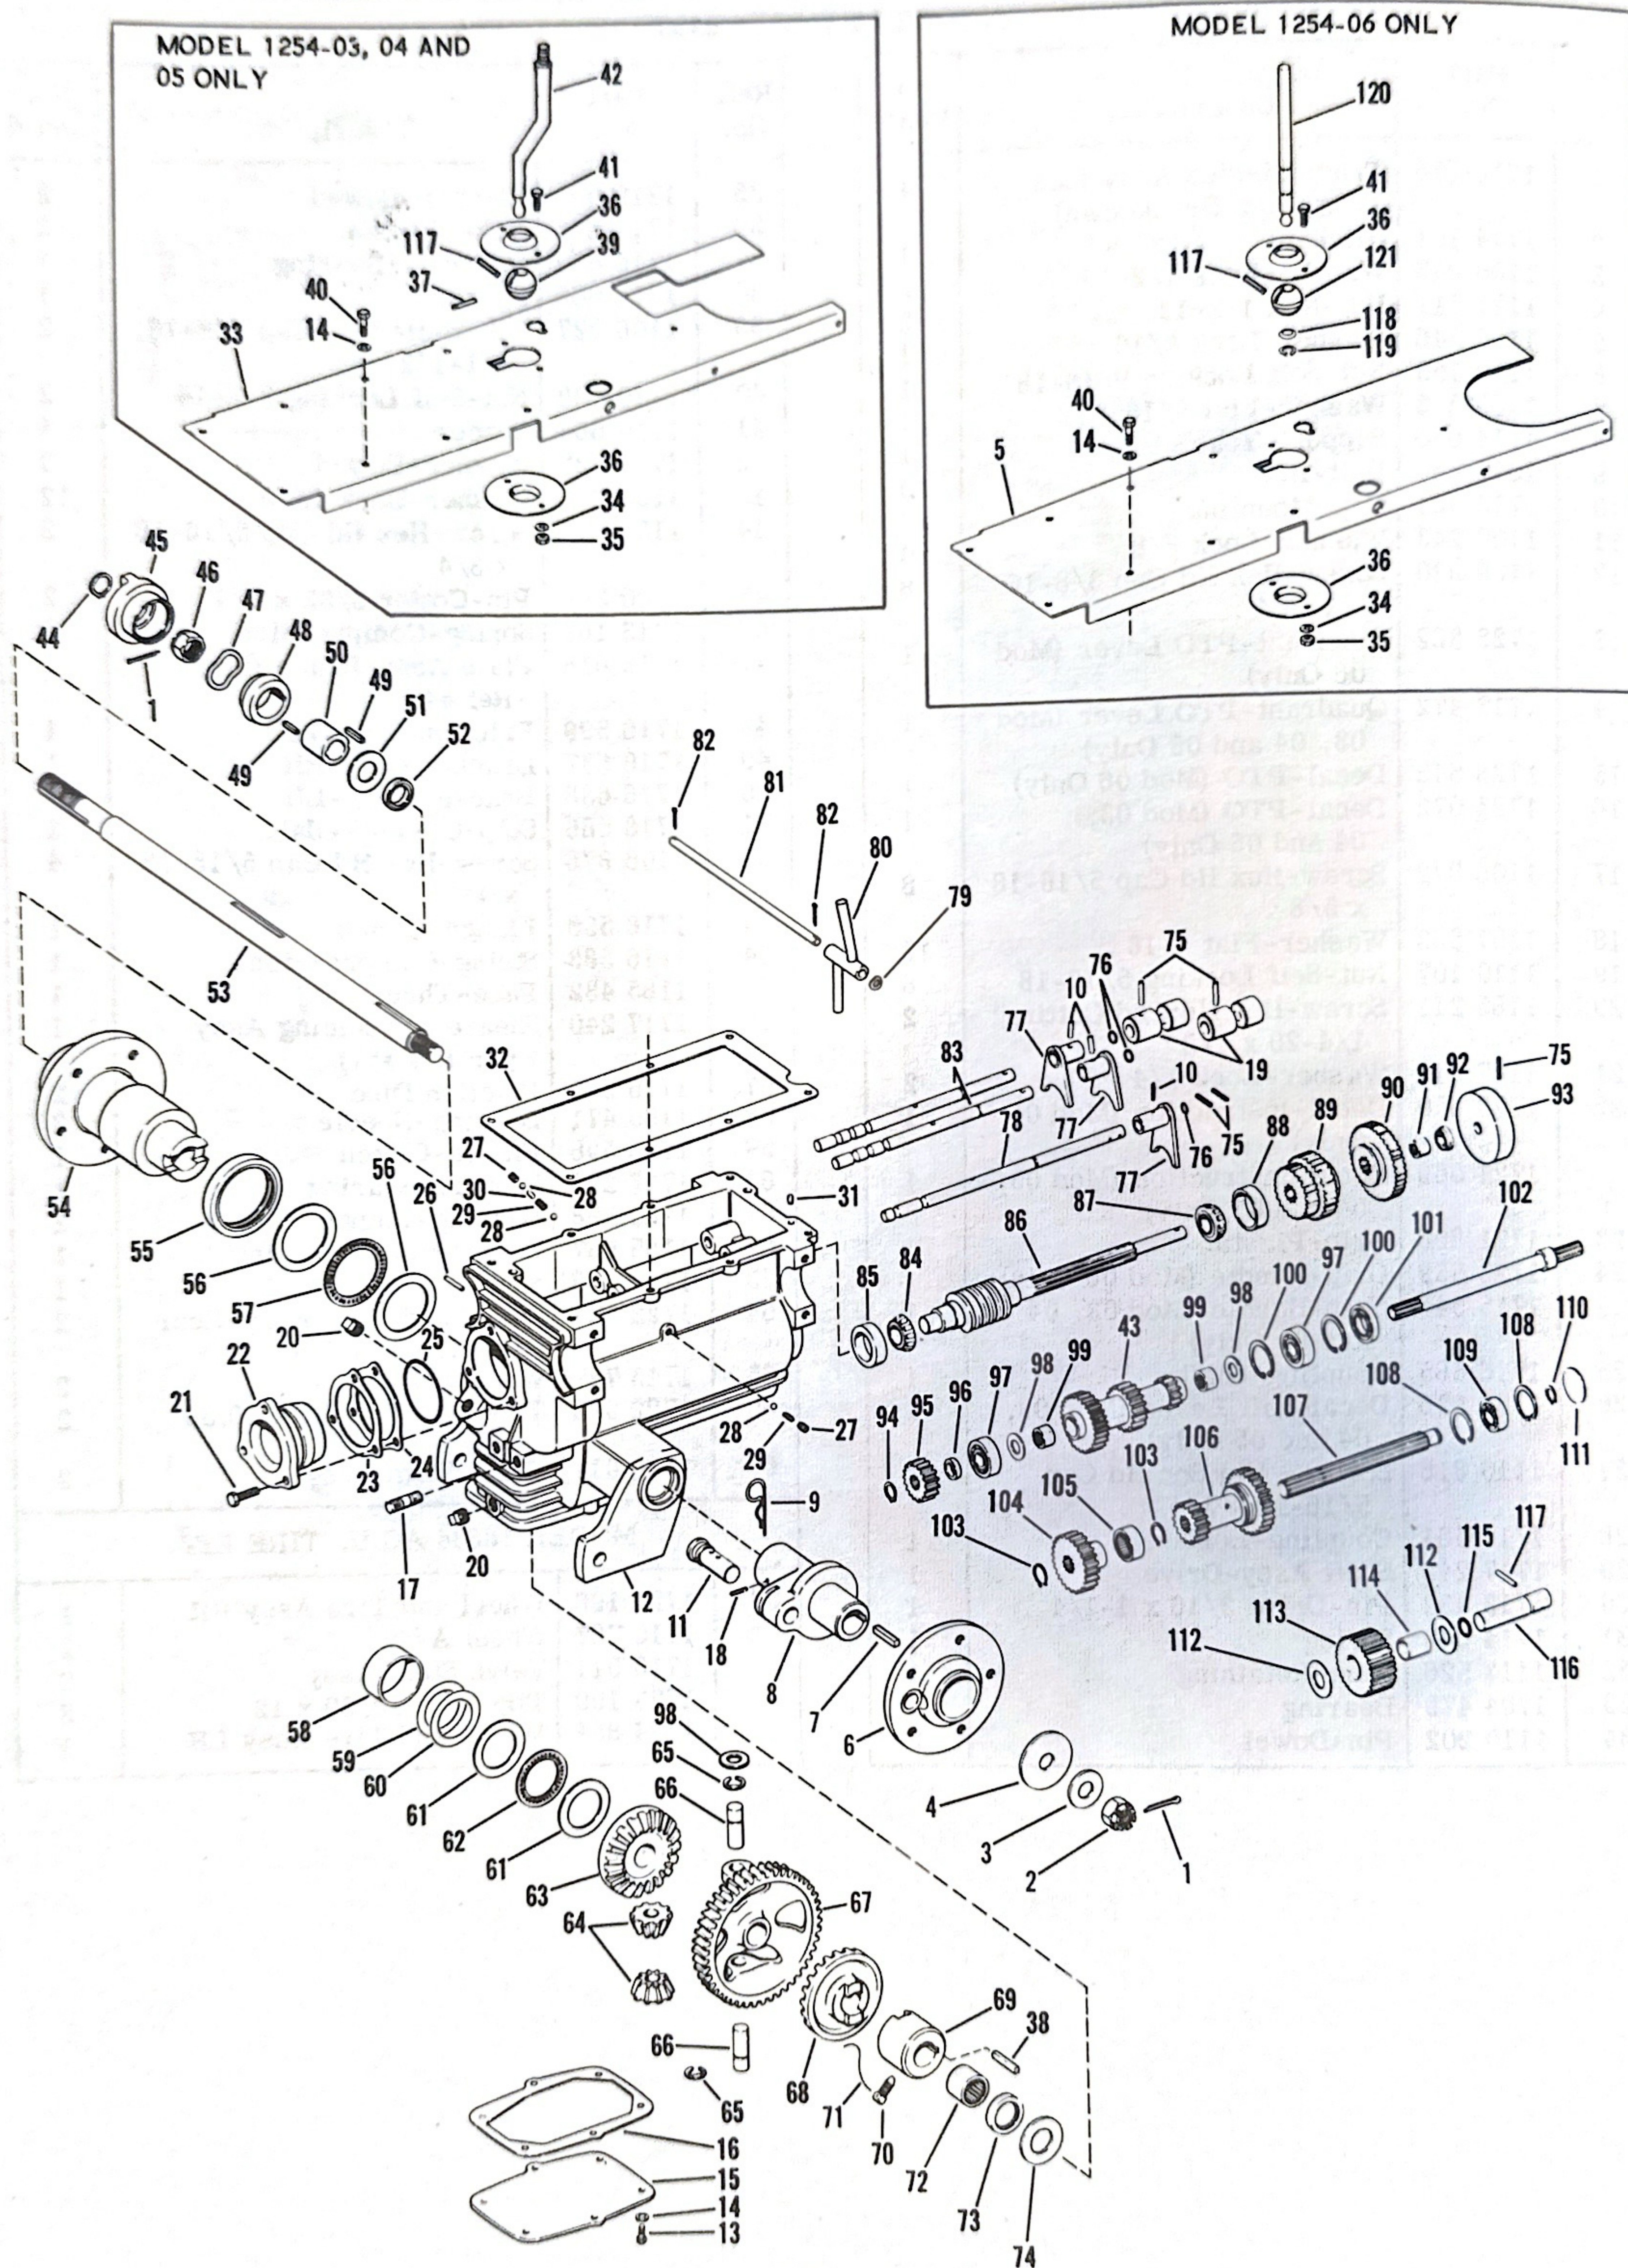


Figure 3

TRACTOR ASSEMBLY MODELS 1254-03, 04, 05 AND 06

Parts List For Figure 3

Ref. No.	Part No.	Description	No. Req'd	Ref. No.	Part No.	Description	No. Req'd
1	1100 352	Cotter Pin 1/8 x 1-1/2	2	62	1185 639	Thrust Bearing	1
2	1109 653	Castle Nut 3/4-16 UNF	1	63	1716 501	Bevel Gear 22T	1
3	1707 410	Washer	1	64	1713 466	Bevel Pinion 10T	2
4	1716 502	Washer	1	65	1177 567	Retaining Ring	2
* 5	1723 436	Cover Plate	1	66	1713 467	Pinion Shaft	2
6	1723 583	Free Wheeling Hub	1	67	1716 513	Worm Wheel	1
7	1104 337	Sq. Key 1/4 x 1/4 x 1-1/2	1	68	1716 689	Bevel Gear 22T (Mod 03, 04 and 05 Only)	1
8	1716 506	Drive Collar	1		1716 501	Bevel Gear 22T (Mod 06 Only)	1
9	1185 590	Hitch Pin	1	69	1716 503	Drive Hub	1
10	1177 625	Roll Pin 1/8 x 3/4	3	70	1716 519	Drive Screw	2
11	1713 426	Lock Pin	1	71	1716 692	Locking Wire	1
12	1716 517	Gear Case	1	72	1185 645	Needle Bearing	1
13	1106 872	Cap Screw 5/16-18 x 5/8	6	73	1185 642	Oil Seal	1
14	1100 242	Lock Washer 5/16	14	74	1716 504	Thrust Washer	1
15	1713 428	Bottom Cover	1	75	1704 692	Roll Pin 1/8 x 1	5
16	1713 427	Bottom Gasket	1	76	1177 388	O-Ring	3
17	1718 067	Stud	2	77	1716 489	Shifter Arm	3
18	1185 409	Drive Pin 1/4 x 5/8	1	78	1716 514	Shifter Shaft	1
19	1713 422	Connector	2	* 79	1703 616	Bowed Washer	1
20	1105 678	Plug 3/8 N.P.T.	2	* 80	1722 003	Shift Lever	1
21	1185 637	Special Cap Screw	3	* 81	1716 530	Shaft	1
22	1716 497	Bearing Cap	1	* 82	1100 346	Cotter Pin 3/32 x 3/4	2
23	1716 493	Shim .0125	AR	83	1713 424	Shifter Shaft	2
24	1716 494	Shim .005	AR	84	1185 201	Bearing Cone	1
25	1185 636	O-Ring	1	85	1185 202	Bearing Cup	1
26	1120 209	Roll Pin 3/16 x 3/4	1	86	1713 408	Worm Shaft	1
27	1185 342	Set Screw 5/16-18 x 3/8	2	87	1185 275	Bearing Cone	1
28	1713 416	Ball	3	88	1185 276	Bearing Cup	1
29	1713 417	Compression Spring	2	89	1713 439	Sliding Gear	1
30	1713 421	Pin	1	90	1713 409	Gear 38T	1
31	1826 82	Breather	1	91	1185 165	Needle Bearing	1
32	1713 429	Top Gasket	1	92	1891 820	Oil Seal	1
* 33	1722 002	Cover Plate	1	93	1713 597	Brake Drum	1
* 34	1100 241	Lock Washer 1/4	2	94	1185 668	Retaining Ring	1
* 35	1121 507	Hex Nut 1/4-20	2	95	1716 490	Gear 19T	1
* 36	1713 455	Bearing Retainer	2	96	1716 495	Spacer	1
* 37	1110 181	Dowel Pin	1	97	1185 634	Ball Bearing	2
38	1703 053	Square Key 1/4	1	98	1712 763	Washer	6
* 39	1722 004	Pivot Ball	1	99	1185 074	Needle Bearing	2
* 40	1106 876	Cap Screw 5/16-18 x 7/8	8	100	1700 012	Retaining Ring	2
* 41	1106 832	Cap Screw 1/4-20 x 5/8	2	101	1185 633	Oil Seal	1
* 42	1722 005	Shift Lever	1	102	1717 125	Input Shaft	1
43	1716 477	Gear & Shaft	1	103	1113 527	Retaining Ring	2
44	1180 025	Retaining Ring	1	104	1716 491	Gear 28T	1
45	1714 564	Adjusting Nut	1	105	1185 635	Needle Bearing	1
46	1120 129	Hex Nut 1-14 UNF	1	106	1716 480	Gear & Shaft	1
47	1721 357	Spring Washer (Mod 03, 04 and 05 Only)	4	107	1716 492	Splined Shaft	1
	1714 572	Spring Washer (Mod 06 Only)	4	108	1118 723	Retaining Ring	2
48	1714 562	Drive Cone	1	109	1104 439	Ball Bearing	1
49	1104 336	Sq. Key 1/4 x 1/4 x 1	2	110	1118 807	Retaining Ring	1
50	1714 561	Coupling	1	111	1200 029	Expansion Plug	1
51	1713 468	Thrust Washer	1	112	1707 546	Flat Washer	2
52	1185 295	Oil Seal	1	113	1713 412	Gear 28T	1
53	1716 507	Axle	1	114	1185 113	Bronze Bearing	1
54	1716 511	Wheel Hub	1	115	1185 360	O-Ring	1
55	1185 643	Oil Seal	1	116	1713 419	Idler Shaft	1
56	1185 640	Thrust Race	2	117	1185 232	Roll Pin 3/16 x 1-1/4	1
57	1185 641	Thrust Bearing	1	118	1706 782	Bowed Washer	1
58	1185 644	Bronze Bearing	1	119	1118 804	Retaining Ring	2
59	1716 498	Shim .0125"	AR	* 120	1723 557	Shift Lever	1
60	1716 499	Shim .005"	AR	* 121	1713 423	Pivot Ball	1
61	1185 638	Thrust Race	2				

* Indicates Parts Not Included With Gear Case Assembly Part No. 1716736.

TRACTOR ASSEMBLY MODELS 1254-03, 04, 05 AND 06

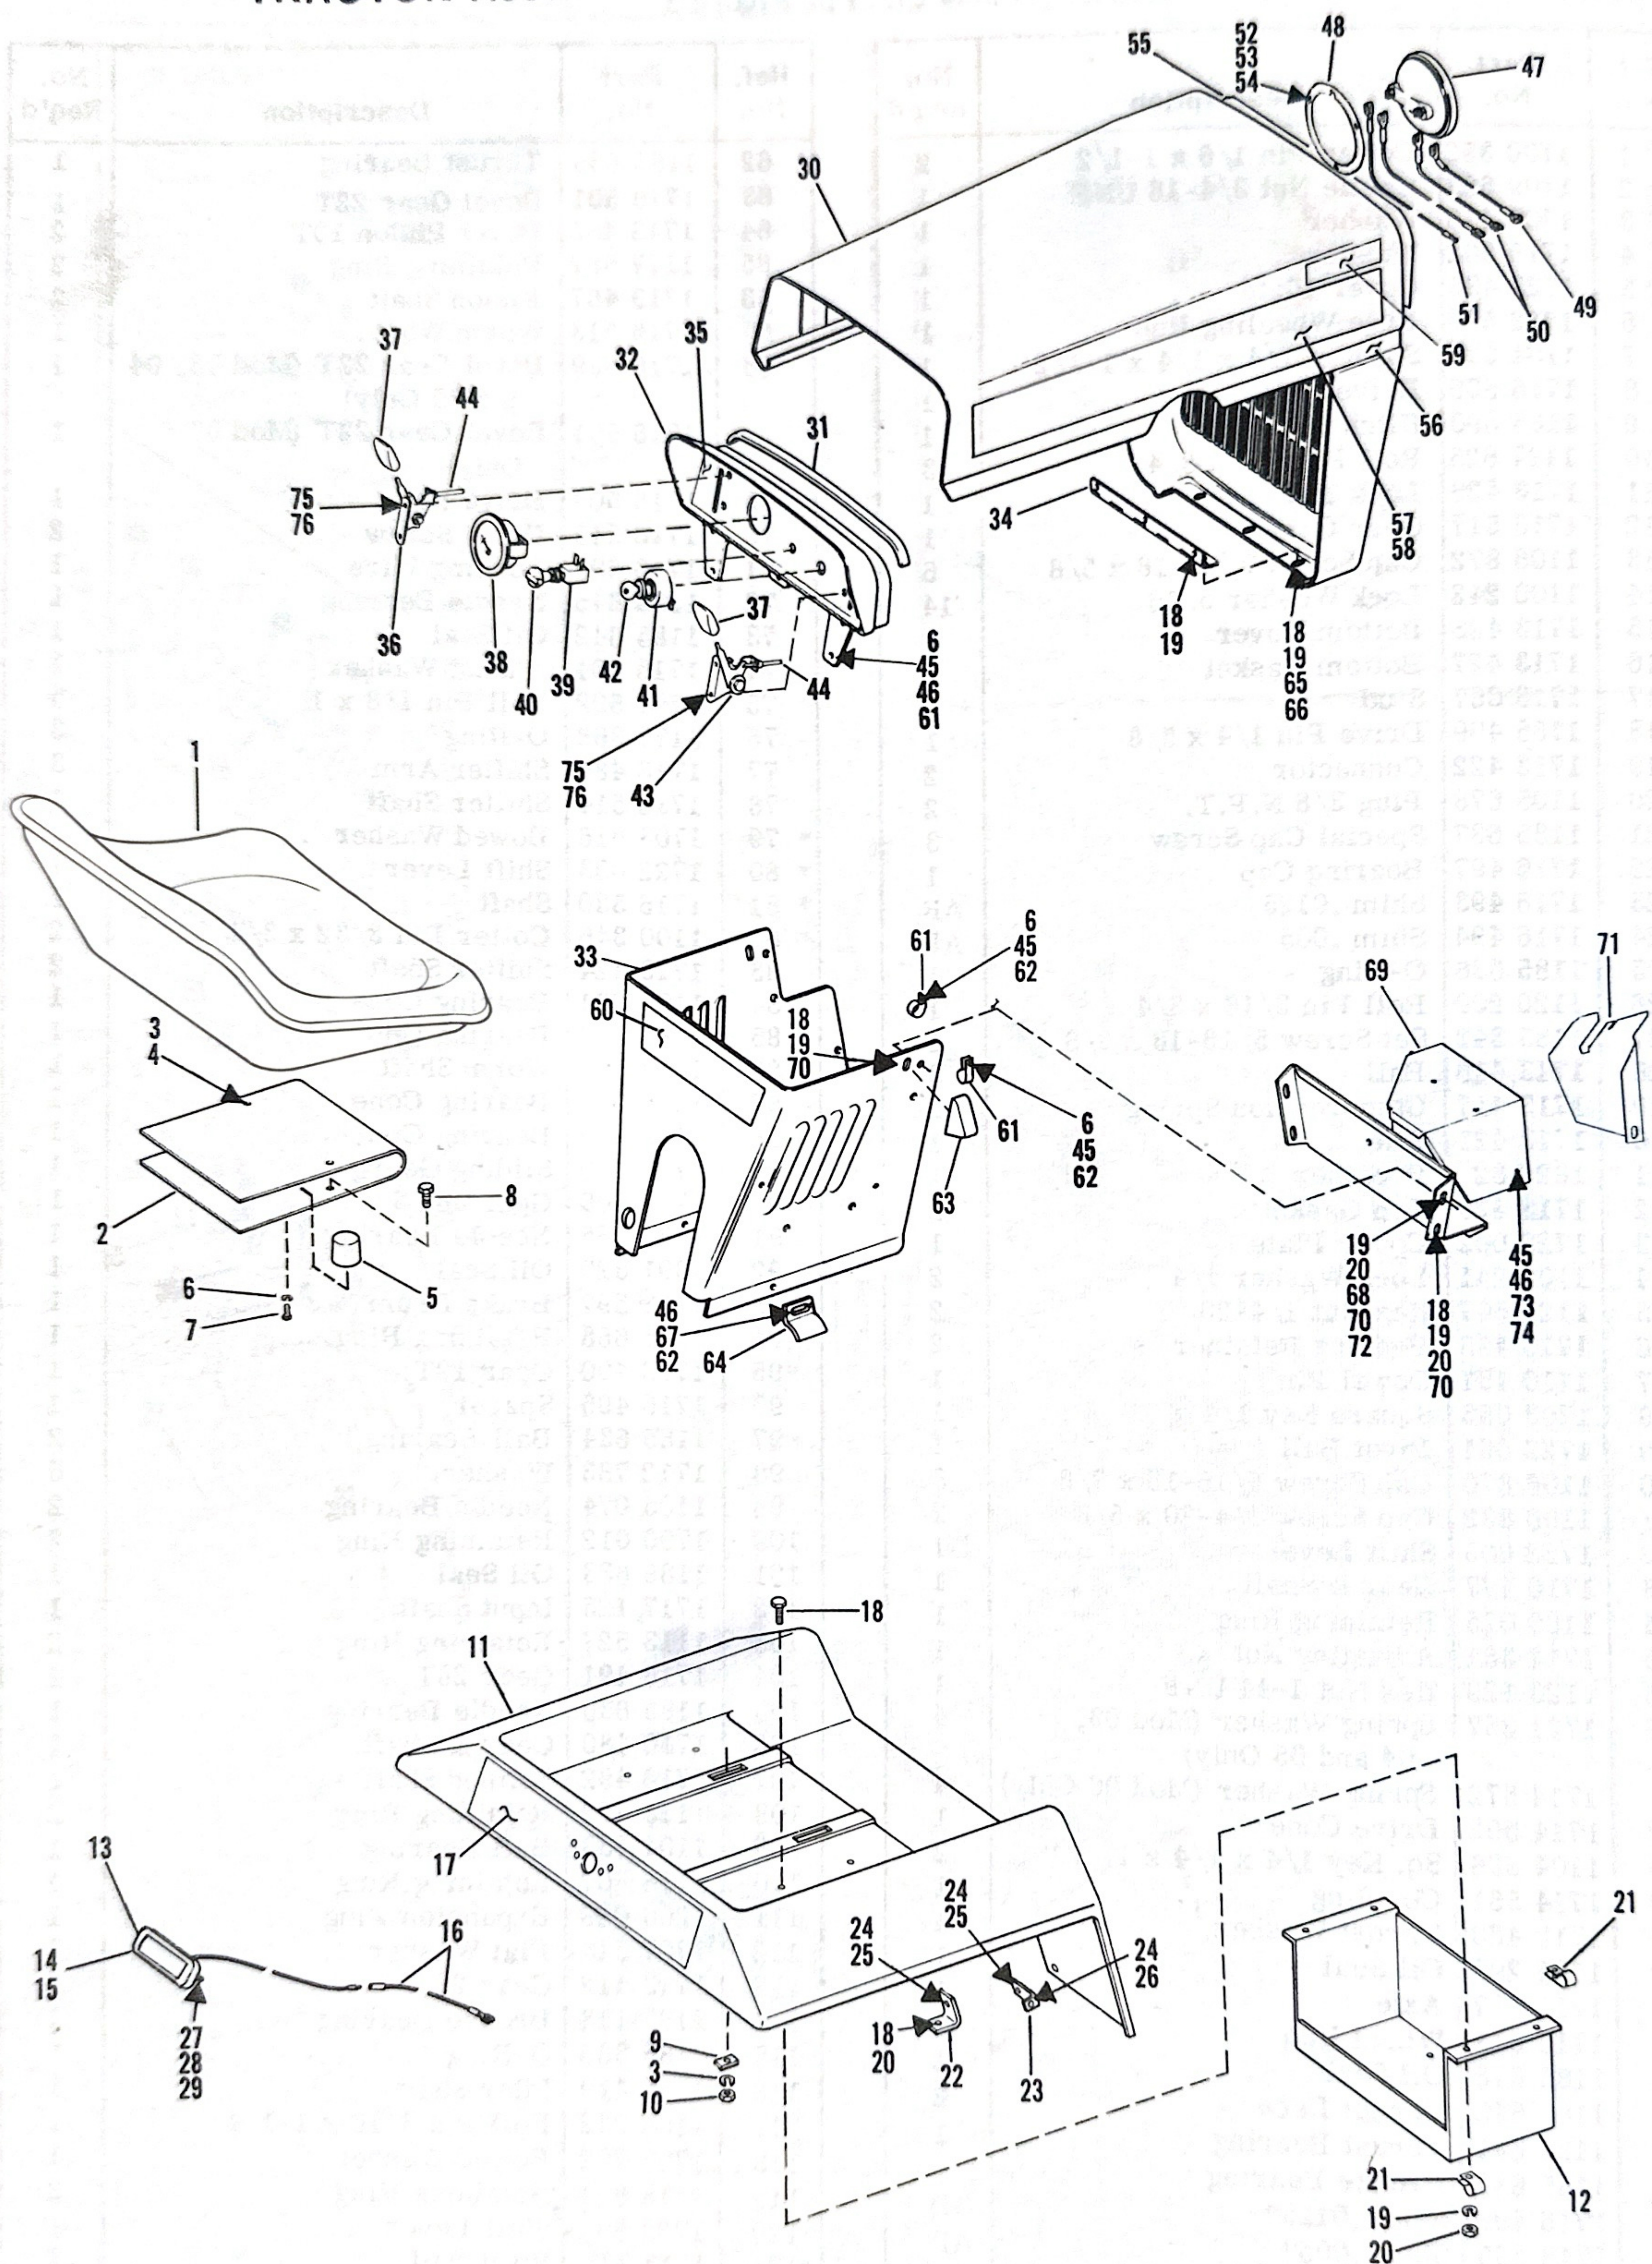


Figure 4

TRACTOR ASSEMBLY MODELS 1254-03, 04, 05 AND 06

FIGURE 4 PARTS LIST

Ref. No.	Part No.	Description	No. Req'd	Ref. No.	Part No.	Description	No. Req'd
1	1723 525	Seat	1	39	1717 256	Switch-Light (Inc Ref #40)	1
2	1722 930	Spring-Seat	1	40	1718 231	Light Switch Knob Only (Fine Thread)	1
3	1100 243	Washer-Lock 3/8	4		1724 857	Light Switch Knob (Course Thread)	1
4	1106 915	Screw-Hex Hd Cap 3/8-16 x 3/4	2	41	1721 409	Switch-Ignition (Inc Ref #42)	1
5	1722 929	Bumper-Spring	1	42	1718 266	Key Only	1
6	1100 241	Washer-Lock 1/4	8	43	1723 311	Control-Throttle (Inc Ref #37 and 43)	1
7	1106 830	Screw-Hex Hd Cap 1/4-20 x 1/2	1	44	1712 051	Control Wire Only	2
8	1106 917	Screw-Hex Hd Cap 3/8-16 x 7/8	2	45	1121 507	Nut-Hex 1/4-20	8
9	1721 876	Plate-Reinforcing	2	46	1107 381	Washer-Flat 1/4	7
10	1121 509	Nut-Hex 3/8-16	2	47	*	Headlight (GE4406)	2
11	1721 846	Fender	1	48	1719 708	Ring-Retaining	2
12	1721 893	Support-Fender	1	49	1717 394	Lead-Headlight	1
13	1805 342	Tail Light (Inc Ref #14 and 15)	1	50	1717 370	Lead-Headlight	2
14	*	Bulb (GE1895)	1	51	1717 369	Lead-Headlight	1
15	1805 110	Lens Only	1	52	1185 911	Rivet-Seal Tubular 3/16 x 7/8	6
16	1718 020	Lead Assy	1	53	1185 748	Wave-Washer	6
17	1721 889	Decal-Rear Reflecting	1	54	1185 746	Ratchet-Plate	6
18	1106 872	Screw-Hex Hd Cap 5/16-18 x 5/8	17	55	1722 752	Decal-Trade Mark	1
19	1100 242	Washer-Lock 5/16	16	56	1717 859	Tape-Strip 68" LG	1
20	1110 107	Nut-Self Locking 5/16-18	10	57	1722 820	Decal-Husky 1254 RH	1
21	1704 930	Clamp	2	58	1722 821	Decal-Husky 1254 LH	1
22	1722 016	Bracket-Fender Support	2	59	1722 764	Decal-Bolens	2
23	1722 017	Support-Fender	2	60	1723 508	Decal-Instruction (Mod 06 Only)	1
24	1185 927	Screw-Truss Hd Phil Rec 3/16-18 x 1/2	4		1722 939	Decal-Instruction (Mod 03, 04 and 05 Only)	1
25	1185 873	Nut-Speed "U" Type 5/16-18	4	61	1721 252	Clip-"J"	3
26	1185 498	Nut-Speed "U" Type 5/16-18	2	62	1115 931	Screw-Phil Hd Mach 1/4-20 x 5/8	4
27	1116 197	Screw-Rd Hd Mach #6-32 x 1/2	2	63	1717 232	Latch	2
28	1103 989	Lock Washer-Shakeproof 3/8	2	64	1714 642	Brace	2
29	1109 764	Nut-Hex #6-32	2	65	1107 382	Washer-Flat 5/16	3
30	1717 220	Hood and Grille Assy (w/o Decals)	1	66	1182 563	Nut-Hex 5/16-18	3
31	1717 599	Pad-Rubber	1	67	1185 456	Nut-Tinnerman	2
32	1723 391	Panel-Instrument	1	68	1106 874	Screw-Hex Hd Cap 5/16-18 x 3/4	1
33	1723 397	Panel Assy-Rear (Mod 04, 05 and 06 Only)	1	69	1722 927	Deflector Assy-Heat	1
	1722 082	Panel Assy-Rear (Mod 03 Only)	1	70	1107 382	Washer-Flat 5/16	13
34	1717 246	Hinge	1	71	1723 201	Shield-Heat	1
35	1723 506	Decal-Instrument Panel	1	72	1177 548	Washer-Shakeproof 5/16	1
36	1723 310	Control-Choke (Inc Ref #37 and 43)	1	73	1106 832	Screw-Hex Hd Cap 1/4-20 x 5/8	1
37	1715 312	Knob-Control Assy	2	74	1187 612	Washer-Lock 1/4	1
38	1714 146	Ammeter	1	75	1116 287	Screw-Oval Hd Phil Rec #10-24 x 5/8	4
				76	1185 985	Nut-W/Lockwasher #10-24	4

* Not Stocked. Purchase from your local automotive or electrical supplier.

TRACTOR ASSEMBLY MODELS 1254-03, 04, 05 AND 06

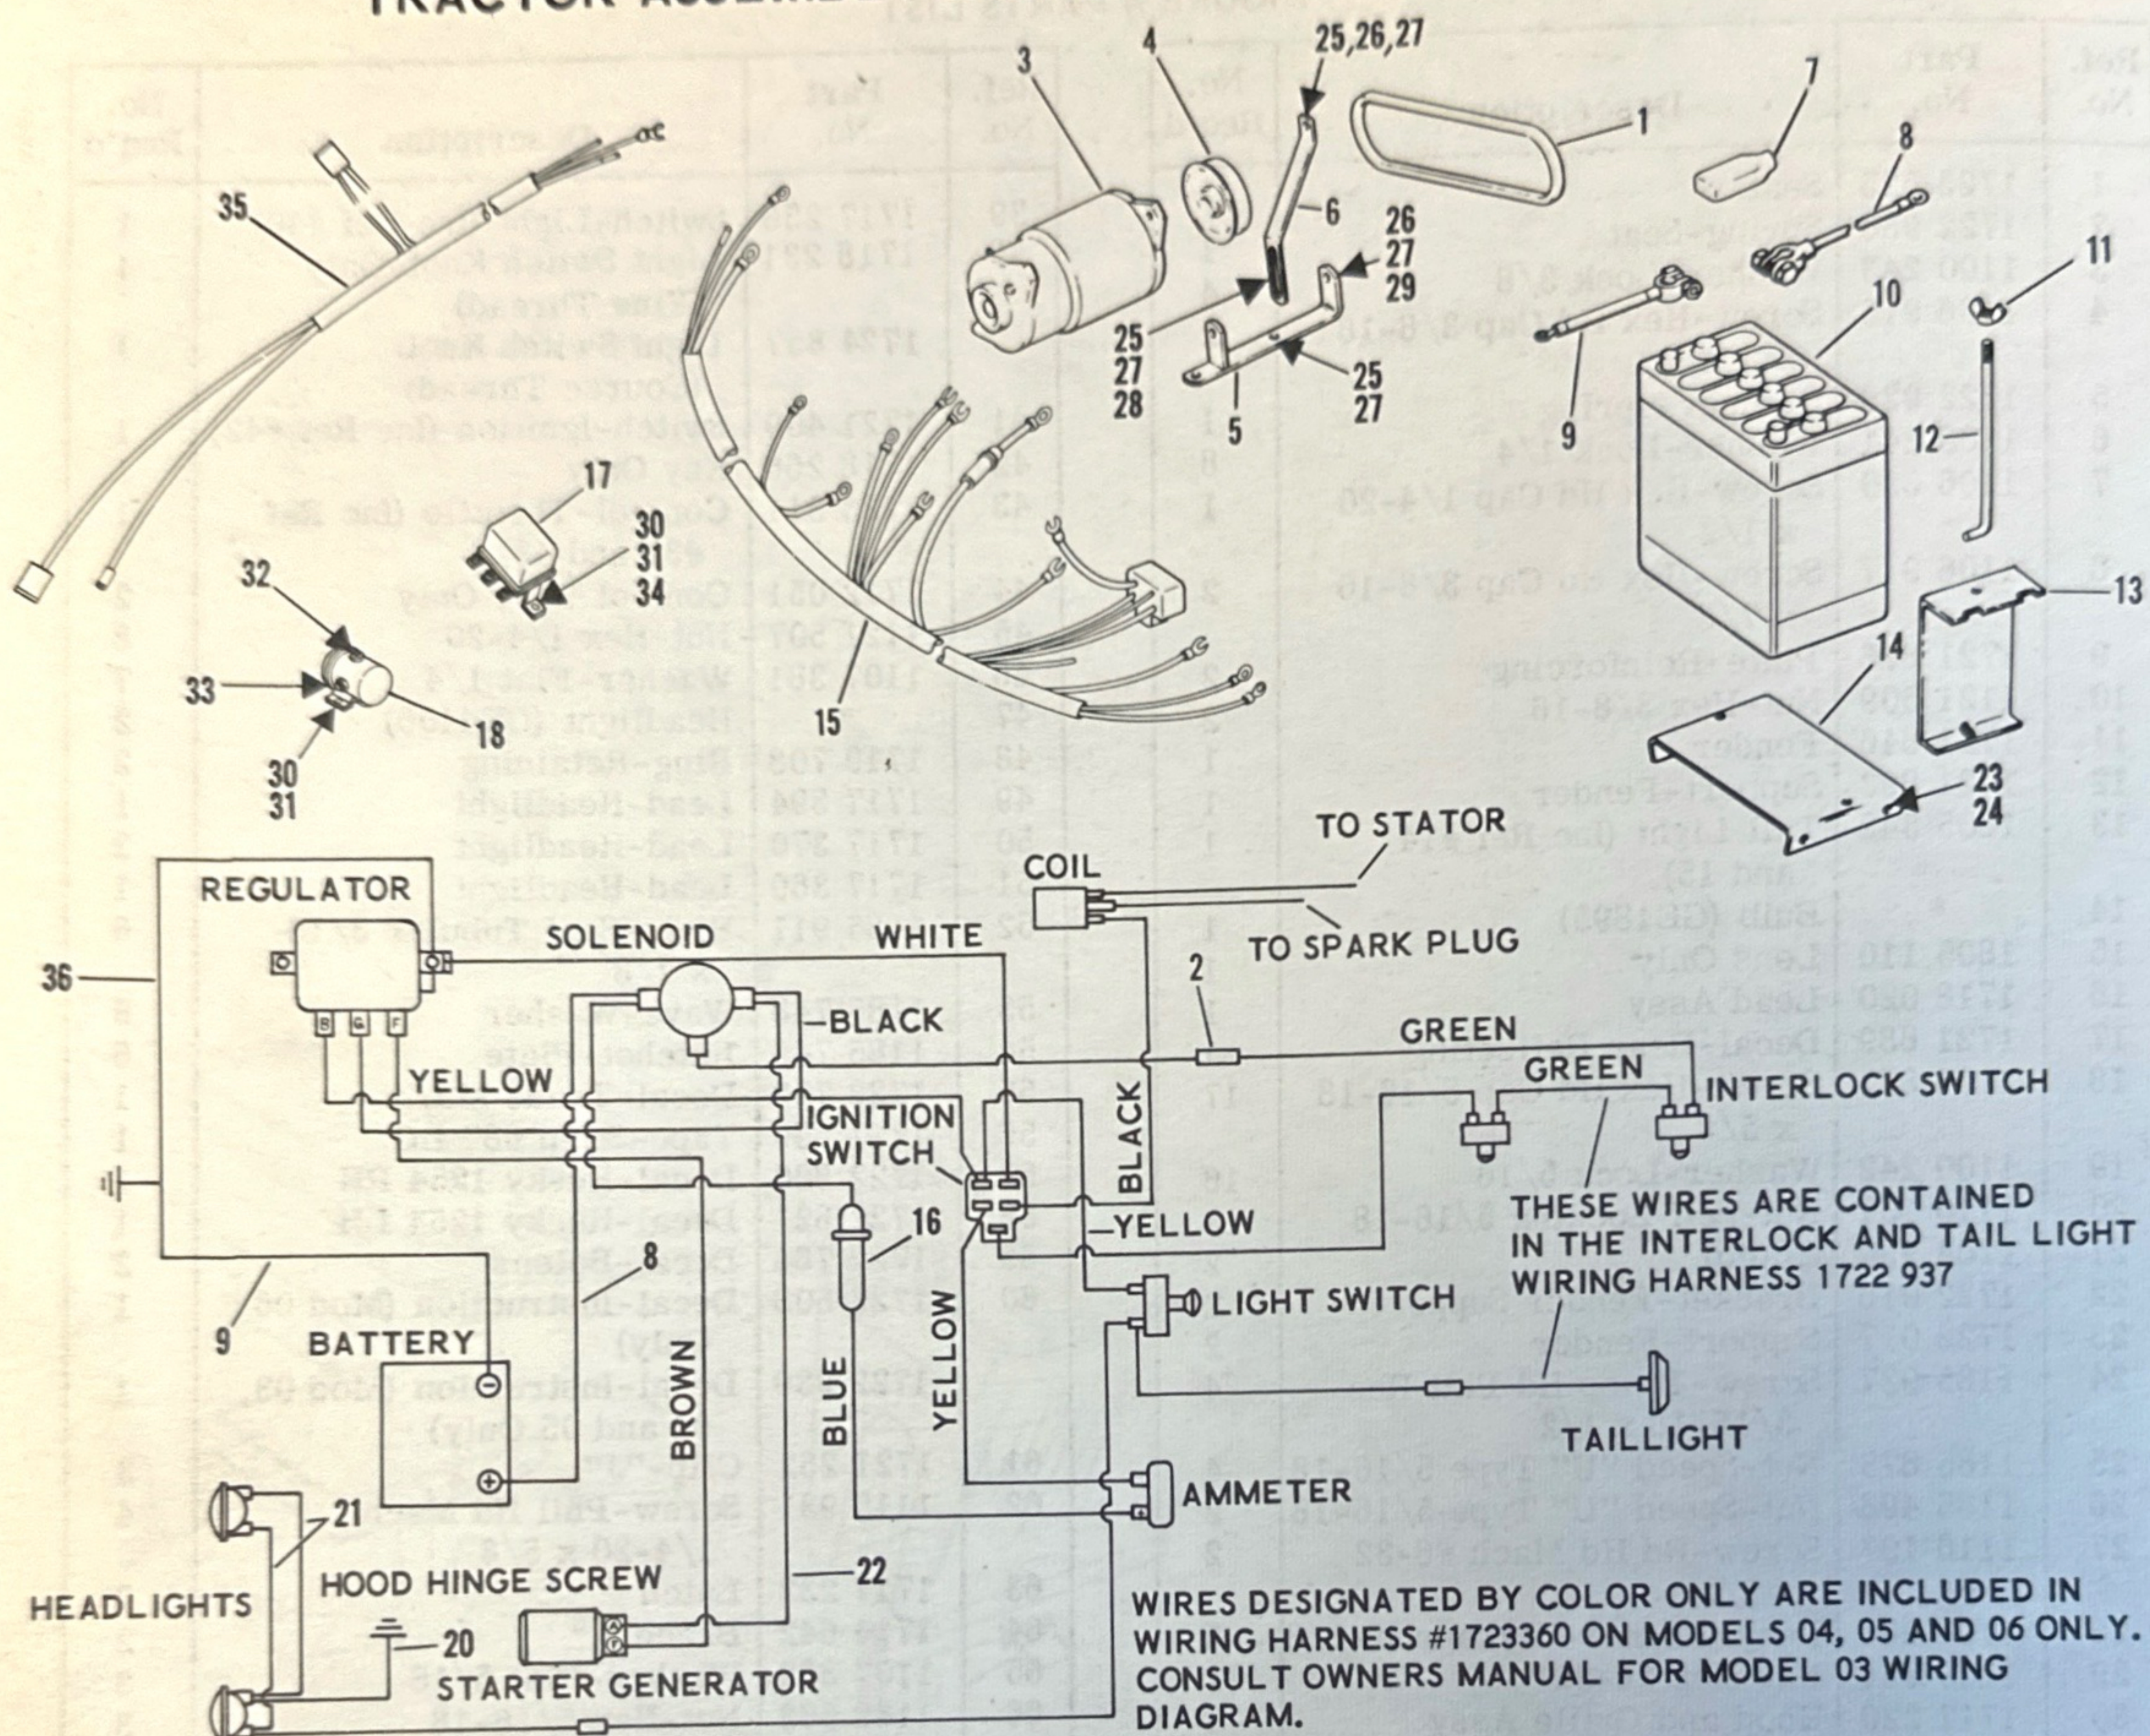


FIGURE 5
FIGURE 5 PARTS LIST

Ref. No.	Part No.	Description	No. Req'd	Ref. No.	Part No.	Description	No. Req'd
1	1714 690	Belt	1	19	1717 369	Lead-Headlight	1
2	1721 038	Connector	1	20	1717 394	Lead-Headlight	1
3	1716 169	Starter Generator	1	21	1717 370	Lead-Headlight	2
4	1708 293	Sheave	1	22	1722 976	Wire-Lead	1
5	1716 315	Support-Generator	1	23	1118 378	Screw-Rd Sl Ad Mach 5/16-18 x 1/2	4
6	1714 688	Strap-Belt Adj	1	24	1185 873	Nut-Tinnerman "U" Type 5/16-18	4
7	1721 413	Boot-Battery Terminal	1	25	1100 078	Screw-Hex Hd Cap 5/16-18 x 7/8	4
8	1719 510	Wire-Positive	1	26	1110 107	Nut-Self Locking 5/16-18	3
9	1716 636	Lead-Ground	1	27	1100 242	Washer-Lock 5/16	6
10	1718 027	Battery 12V - 45 Amp	1	28	1107 382	Washer-Flat 5/16	1
11	1709 652	Nut-Locking Wing	2	29	1100 808	Screw-Hex Hd Cap 5/16-18 x 1-1/4	2
12	1718 108	Clamp Rod-Battery	2	30	1185 986	Nut-Speed	5
13	1720 538	Clamp-Battery	2	31	1185 987	Screw-RH Hd	5
14	1718 111	Carrier-Battery	1	32	1109 845	Nut-Hex #10-32	1
15	1722 936	Wiring Harness (Mod 03 Only)	1	33	1182 563	Nut-Hex 5/16-18	2
	1723 360	Wiring Harness (Mod 04, 05 and 06 Only)	1	34	1723 357	Bracket-Ground	1
16	1720 976	Fuse-20 Amp	1	35	1722 937	Interlock and Tail Light Wire	1
17	1708 287	Regulator (Mod 03 Only)	1	36	1723 358	Wire-Lead	1
	1723 480	Regulator (Mod 04, 05 and 06 Only)	1				
18	1717 048	Solenoid	1				