

BOLENS

HUSKY
850
TRACTOR
MODEL 191-01

ILLUSTRATED PARTS CATALOG



BOLENS

PORT WASHINGTON, WISCONSIN, U.S.A.

PRINTED IN U.S.A.

FORM NO. P551647 1-66
REISSUED 5-68

TRANSMISSION ASSEMBLY MODEL 191-01

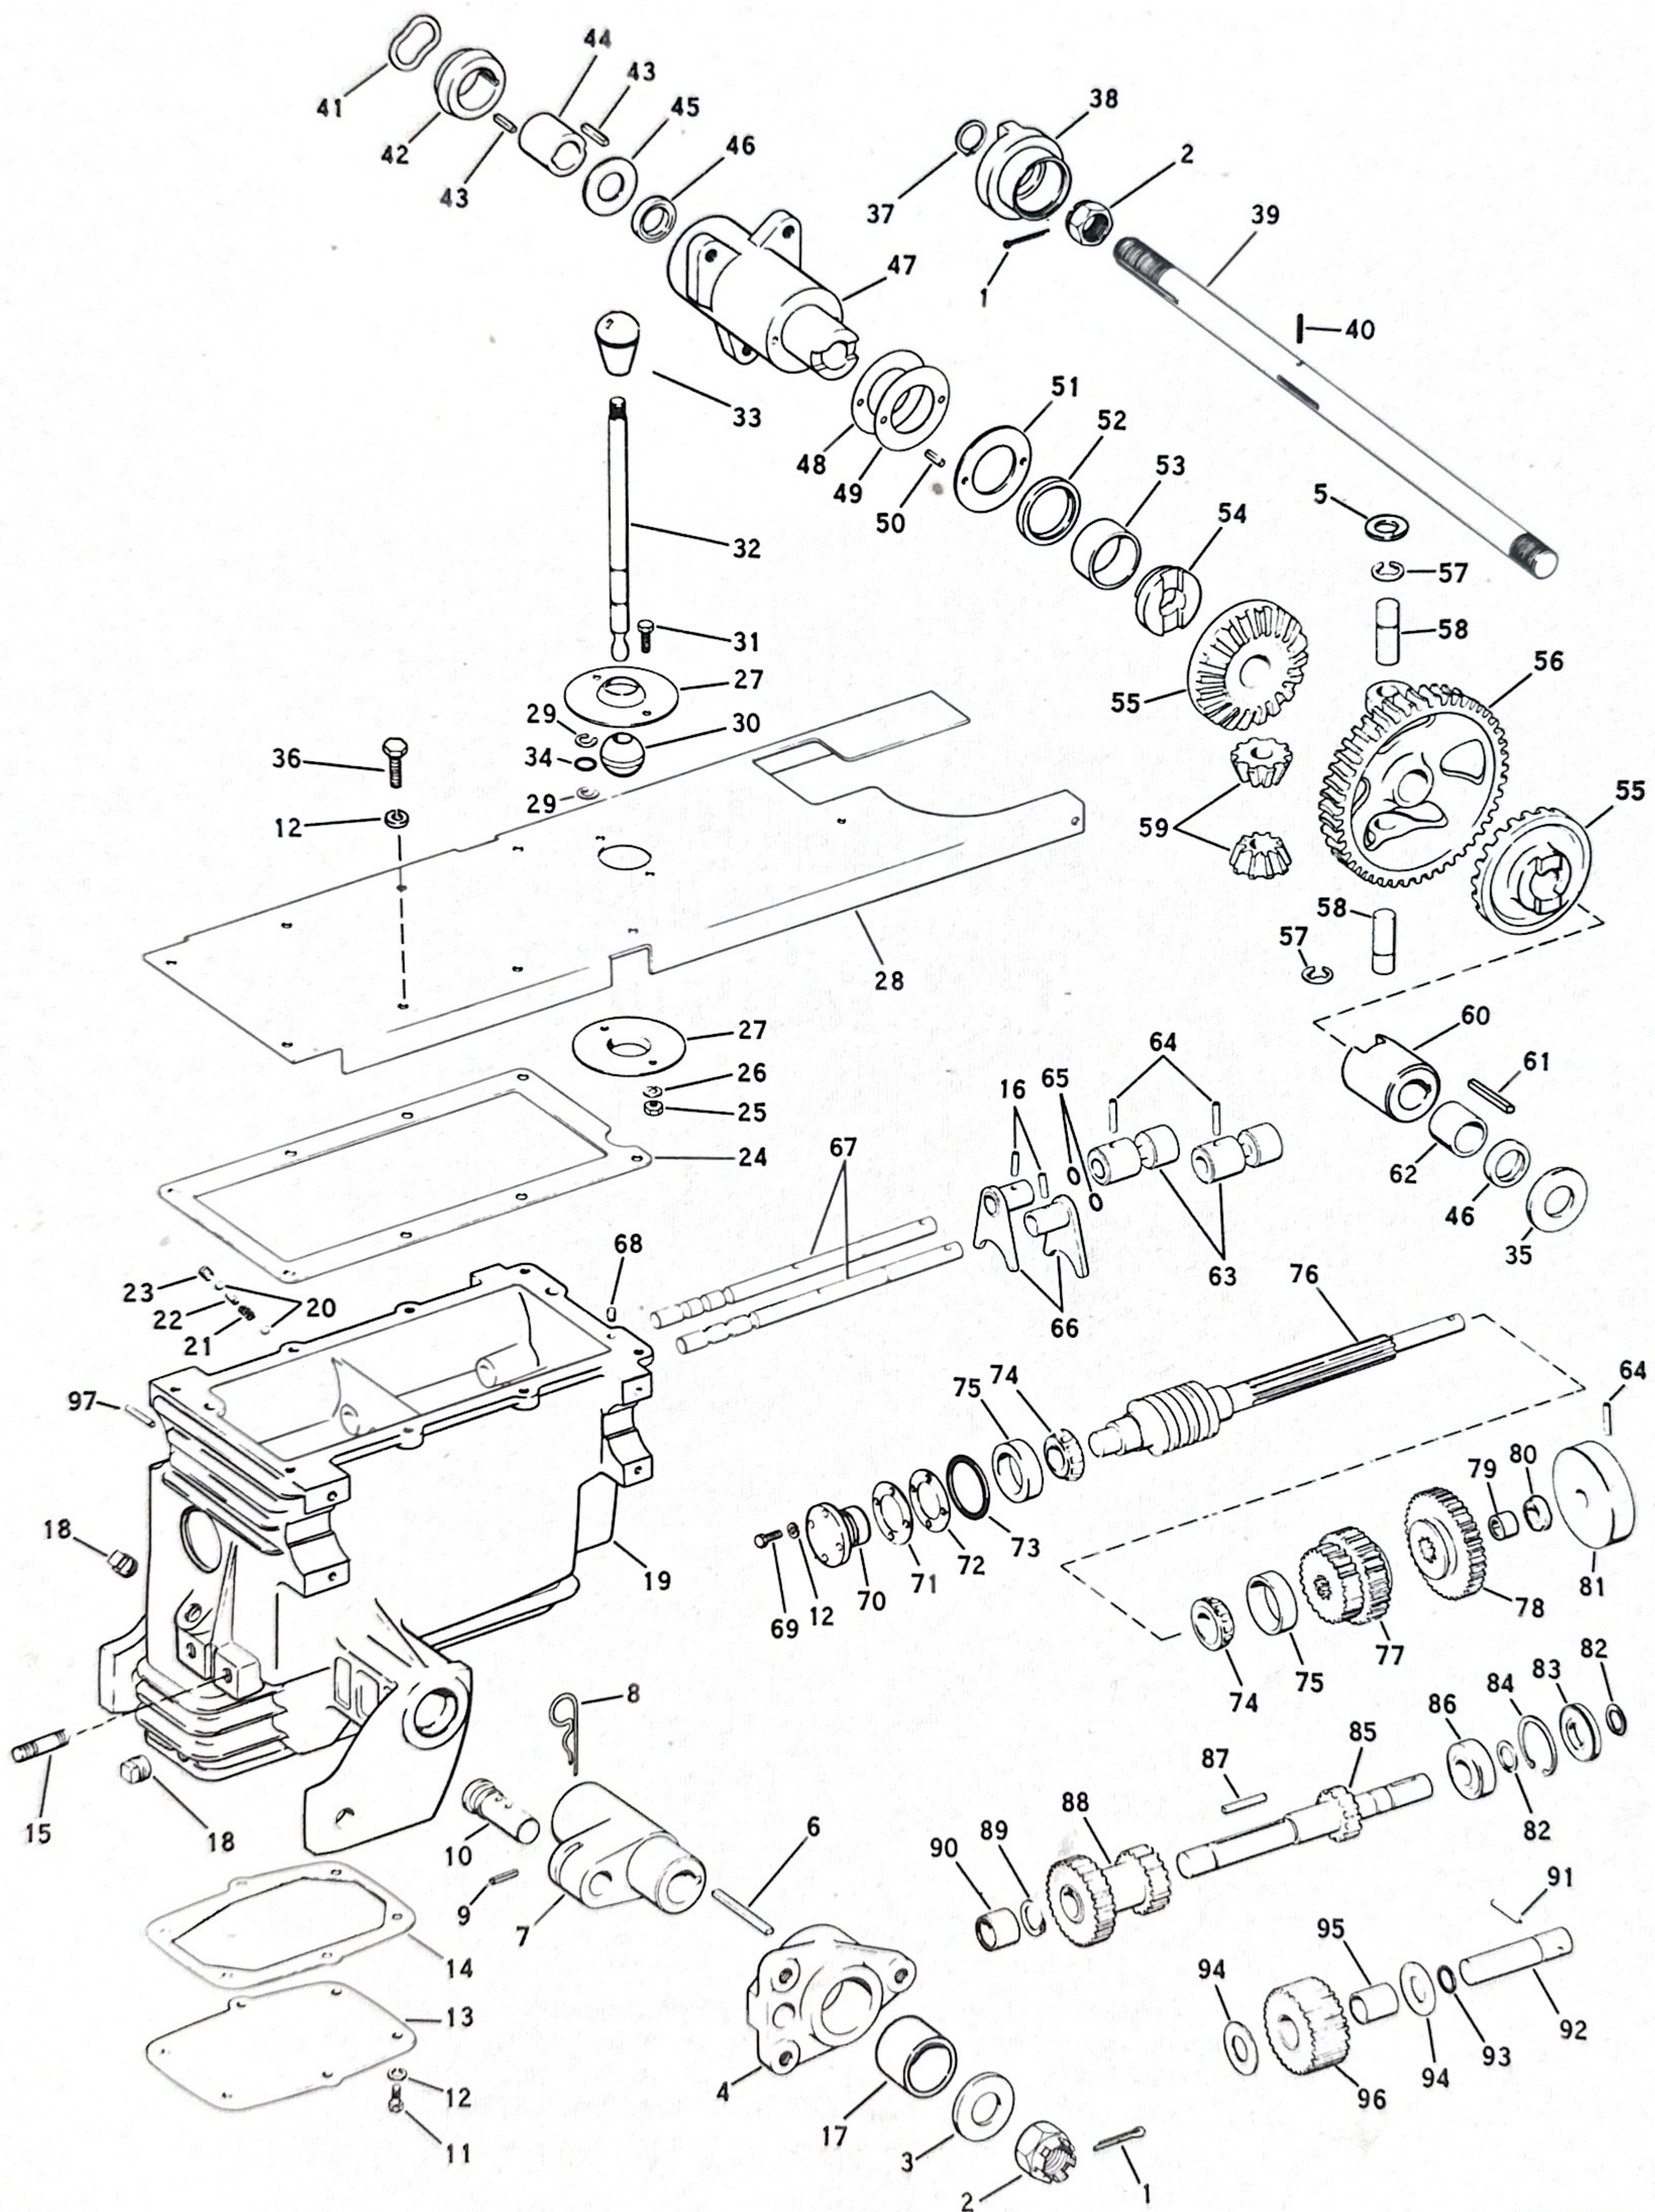


FIGURE 1


TRANSMISSION ASSEMBLY MODEL 191-01

Ref. No.	Part No.	Description	No. Req'd.
1	1100352	Cotter Pin 1/8 x 1-1/2	2
2	1120129	Hex Nut 1-14	2
3	1716741	Flat Washer	1
4	1716694	Free Wheeling Hub	1
5	1712763	Washer	4
6	1703053	Sq. Key 1/4 x 2-3/4	1
7	1715725	Drive Collar	1
8	1185590	Hitch Pin	1
9	1185409	Drive Pin 1/4 x 5/8	1
10	1713426	Lock Pin	1
11	1106872	Capscrew 5/16-18 x 5/8	6
12	1100242	Lockwasher 5/16	20
13	1713428	Cover	1
14	1713427	Gasket	1
15	1718067	Stud	2
16	1703066	Drive Pin 1/8 x 3/4	2
*17	1185646	Bearing	2
18	1105678	Pipe Plug	2
19	1713465	Gear Case	1
20	1713416	Ball	2
21	1713417	Spring	1
22	1713421	Pin	1
23	1185342	Set Screw 5/16-18 x 3/8	1
24	1713429	Gasket	1
*25	1103838	Hex Nut 1/4-20	2
*26	1100241	Lockwasher 1/4	2
*27	1713455	Bearing Retainer	2
*28	1717274	Cover Plate	1
*29	1118804	Retaining Ring	2
*30	1713423	Pivot Ball	1
*31	1106832	Capscrew 1/4-20 x 5/8	2
*32	1716518	Shifter Lever	1
*33	1715546	Knob	1
*34	1706782	Bowed Washer	1
35	1711786	Thrust Bearing	1
*36	1106876	Capscrew 5/16-18 x 7/8	8
37	1180025	Retaining Ring	1
38	1714564	Adjusting Nut	1
39	1714567	Rear Axle	1
40	1713432	Drive Pin 3/16 x 1-1/4	1
41	1714572	Spring Washer	4
42	1714562	Drive Cone	1
43	1104336	Sq. Key 1/4 x 1	2
44	1714561	Coupling	1
45	1713468	Thrust Washer	1
46	1185295	Oil Seal	2
47	1716702	Wheel Hub	1
48	1714558	Shim - .020	As Req.
49	1714559	Shim - .005	As Req.

Ref. No.	Part No.	Description	No. Req'd.
50	1713457	Drive Pin	2
51	1714557	Thrust Bearing	1
52	1185426	Oil Seal	1
53	1714571	Bronze Bearing	1
54	1714565	Coupling	1
55	1714917	Bevel Gear	2
56	1713411	Worm Wheel	1
57	1177567	Retaining Ring	2
58	1713467	Pinion Shaft	2
59	1713466	Bevel Pinion	2
60	1714566	Drive Hub	1
61	1104337	Sq. Key 1/4 x 1-1/2	1
62	1185300	Bronze Bearing	1
63	1713422	Connector	2
64	1704692	Roll Pin 1/8 x 1	3
65	1177388	O-Ring	2
66	1716489	Shifter Arm	2
67	1713424	Shifter Shaft	2
68	182682	Breather	1
69	1106878	Capscrew 5/16-18 x 1	4
70	1714290	Bearing Retainer	1
71	1714291	Shim - .010	As Req.
72	1714292	Shim - .003	As Req.
73	1185572	O-Ring	1
74	1185275	Bearing Cone	2
75	1185276	Bearing Cup	2
76	1713408	Worm Shaft	1
77	1713439	Sliding Gear	1
78	1713409	Gear	1
79	1185165	Needle Bearing	1
80	1891820	Oil Seal	1
81	1713597	Brake Drum	1
82	1118809	Retaining Ring	2
83	1185352	Oil Seal	1
84	1700012	Retaining Ring	1
85	1713442	Shaft	1
86	1104440	Ball Bearing	1
87	1108841	Sq. Key 3/16 x 1-1/2	1
88	1713436	Gear and Shaft	1
89	1113527	Retaining Ring	1
90	1185280	Needle Bearing	1
91	1185232	Drive Pin 3/16 x 1-1/4	1
92	1713419	Shaft	1
93	1185360	O-Ring	1
94	1707546	Flat Washer	2
95	1185113	Bronze Bearing	1
96	1713412	Gear	1
97	1120209	Drive Pin 3/16 x 3/4	1

*Indicates parts not included with Gear Case Assembly Part No. 1714999.

TRACTOR ASSEMBLY MODEL 191-01

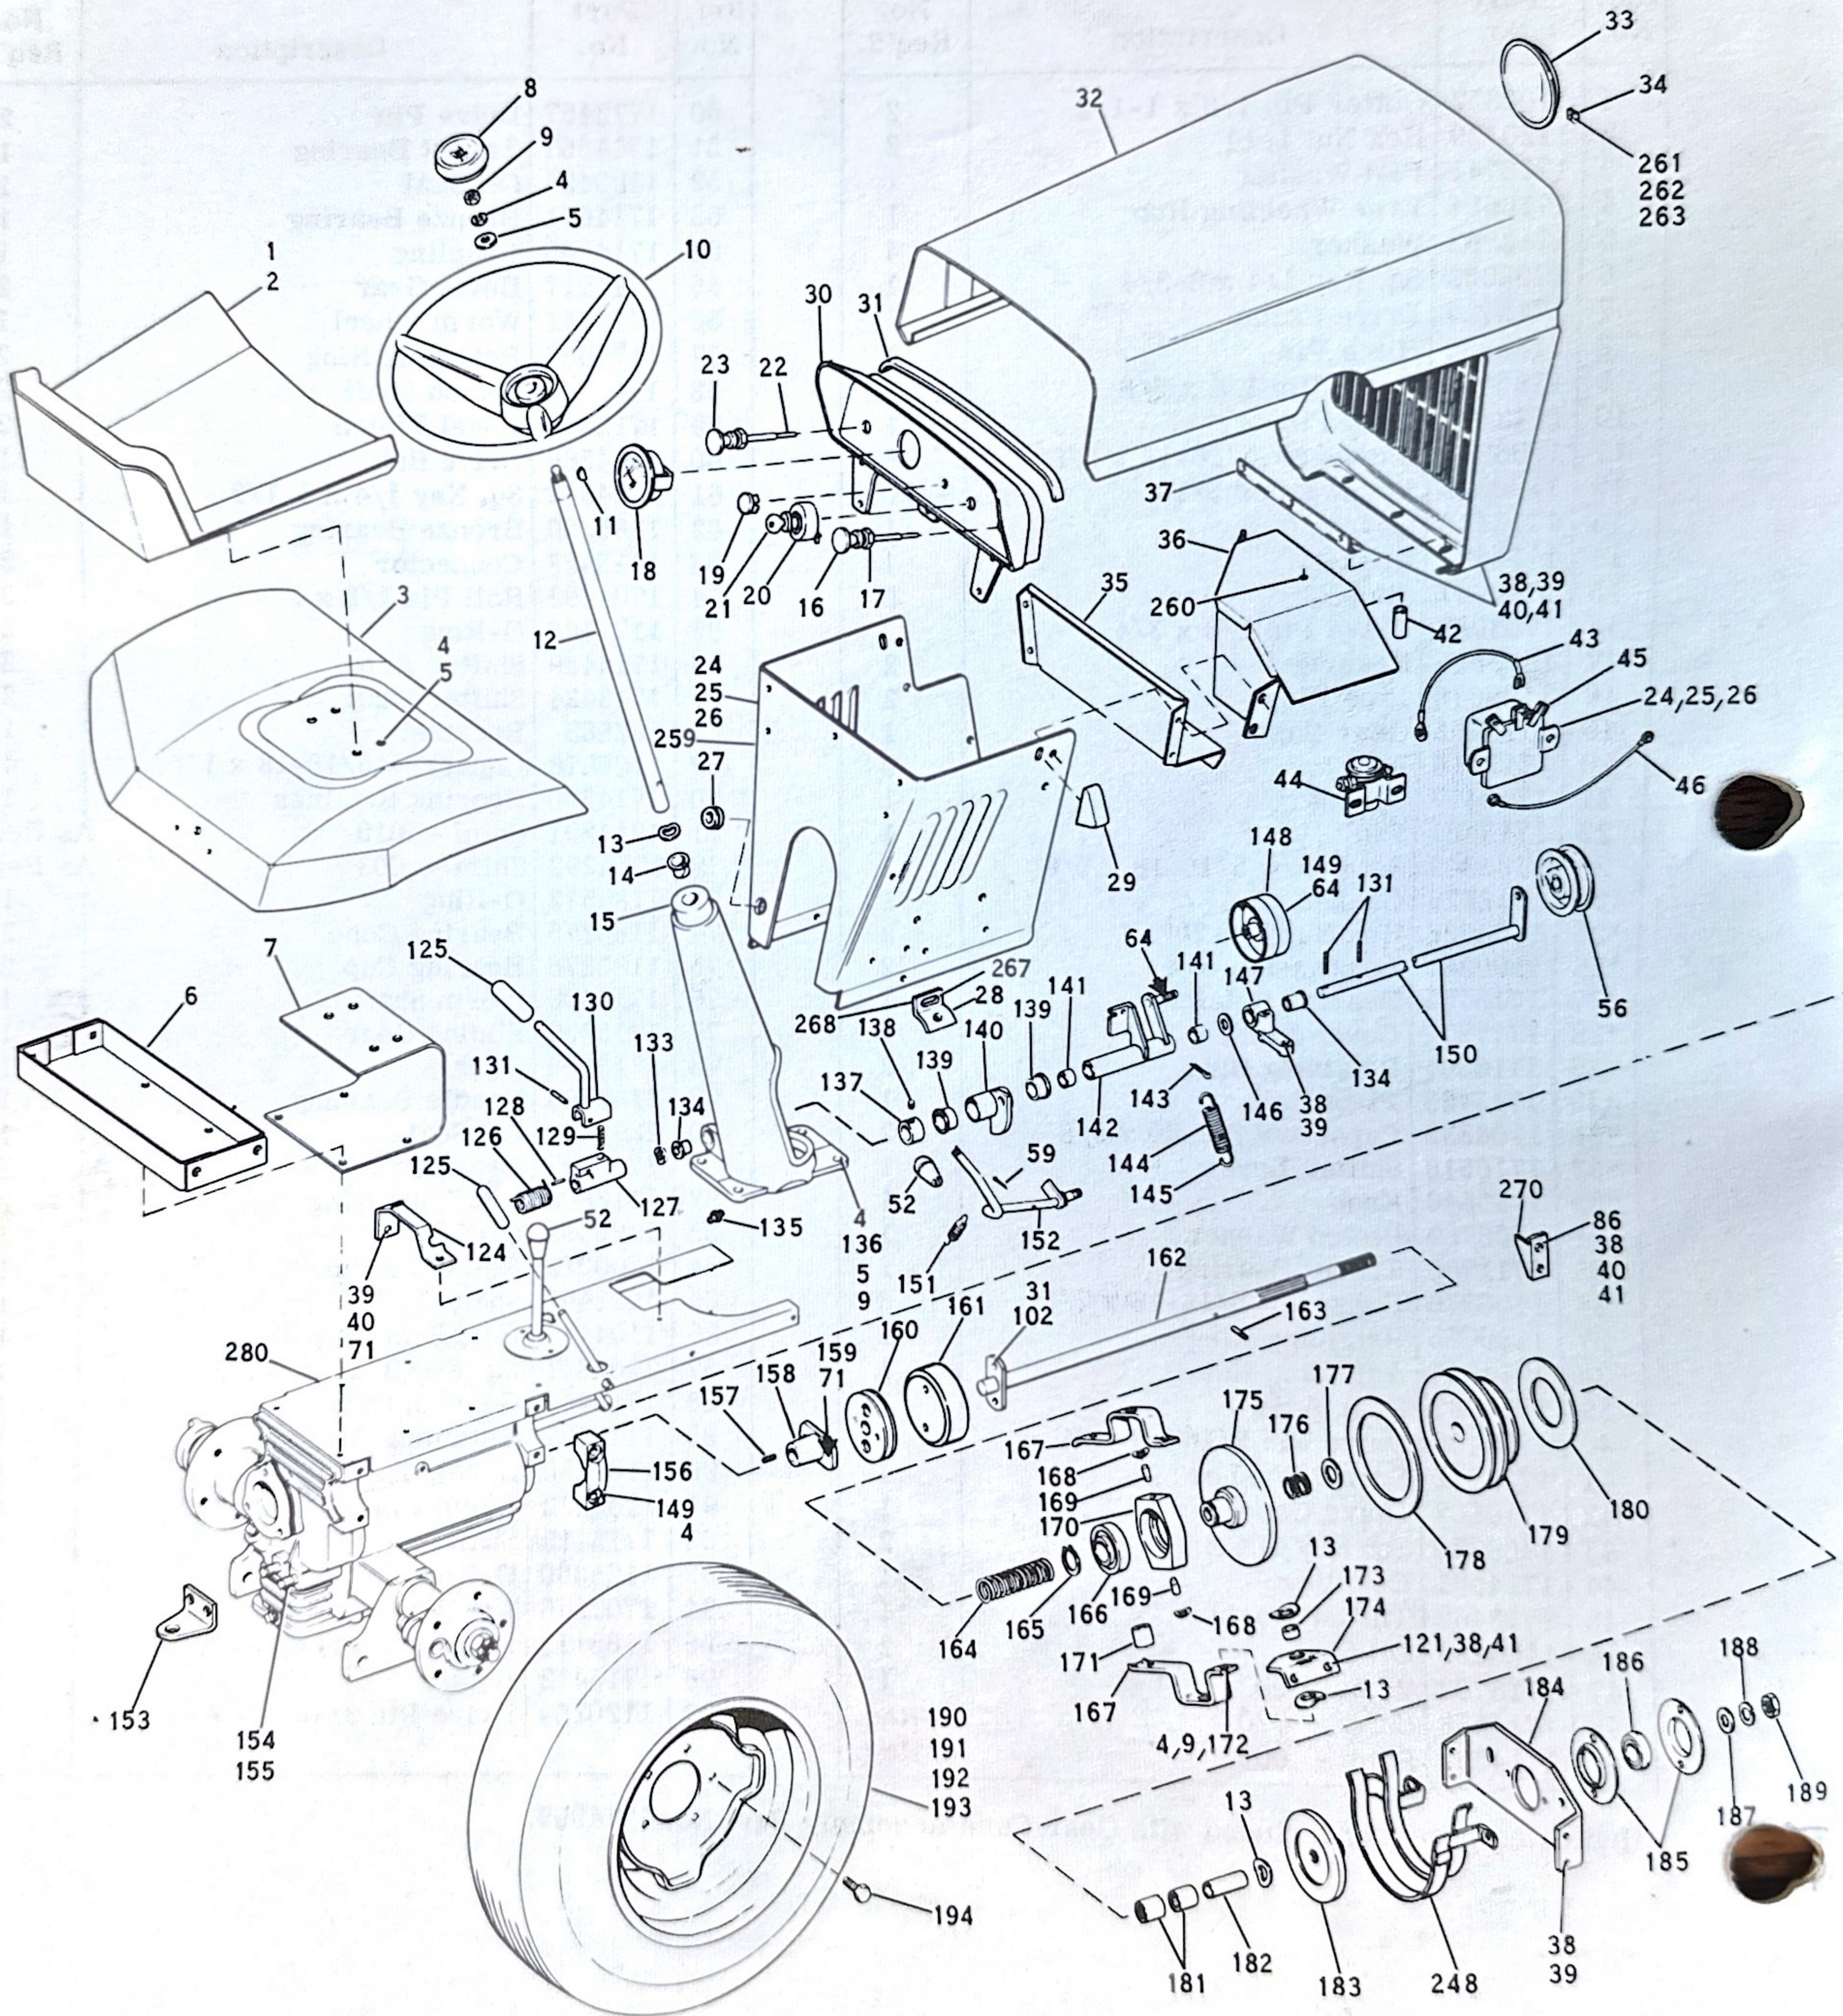



TRACTOR ASSEMBLY MODEL 191-01

Ref. No.	Part No.	Description	No. Req'd.
1	1717354	Seat Pad	1
2	1717351	Seat, Pan Assy	1
3	1717221	Fender	1
4	1100243	Lockwasher 3/8	36
5	1107383	Flat Washer 3/8	23
6	1713820	Fender Bracket	1
7	1713415	Support	1
8	1717327	Cap	1
9	1121509	Hex Nut 3/8-16	15
10	1717326	Steering Wheel	1
11	1104436	Woodruff Key 3/16 x 3/4	1
12	1717269	Steering Shaft	1
13	1713122	Bowed Washer	4
14	1717263	Bearing	1
15	1717258	Steering Support	1
16	1717242	Throttle Control (Inc. 17)	1
17	1718233	Throttle Knob & Wire Only	1
18	1714146	Ammeter	1
19	1717551	Hole Plug	1
20	1717255	Ignition Switch (Inc. 21)	1
21	1718266	Key Only	1
22	1717241	Choke (Inc. 23)	1
23	1718232	Choke Knob & Wire Only	1
24	1100241	Lockwasher 1/4	16
25	1115931	Phillips Screw 1/4-20 x 5/8	13
26	1121507	Hex Nut 1/4-20	13
27	1185585	Flip Grommet	1
28	1714642	Brace	2
29	1717232	Latch	2
30	1717249	Instrument Panel	1
31	1717599	Pad	1
32	1718261	Hood and Grill Assy	1
33	1717262	Lens	2
34	1717264	Clip	6
35	1716621	Heat Shield	1
36	1717399	Heat Shield	1
37	1717246	Hinge	1
38	1100242	Lockwasher 5/16	39
39	1106872	Capscrew 5/16-18 x 5/8	26
40	1107382	Flat Washer 5/16	19
41	1182563	Hex Nut 5/16-18	22
42	1717596	Spacer	1
43	1717395	Lead Wire	1
44	1709173	Solenoid	1
45	1708287	Voltage Regulator	1
46	1717266	Lead Wire Ground	1
47	1705092	Washer	3
48	1185582	Sleeve Bearing	1
49	1717372	Clutch Pedal	1
50	1185706	Flat Screw 3/8-16 x 1-1/8	1
51	1717268	Bracket	1
52	1715546	Knob	2
53	1716717	Brake Rod	1
54	1703066	Roll Pin 1/8 x 3/4	3
55	1716718	Brake Stop	1
56	1713803	Pulley Idler	1
57	1716716	Bracket	1
58	1716724	Spring	1
59	1100346	Cotter Pin 3/32 x 3/4	13
60	1112587	Clevis Pin	1
61	1716582	Clutch Rod	1
62	1121551	Lock Nut 3/8-16	2
63	1714655	Spring	1

Ref. No.	Part No.	Description	No. Req'd.
64	1110108	Lock Nut 3/8-16	16
65	1713780	Brake Shoe Assy (Inc. 66 & 67)	1
66	1713777	Lining Only	1
67	1185570	Rivet	2
68	1713772	Bracket	2
69	1717310	Brake Rod Assembly	1
70	1185257	Retaining Ring	1
71	1110107	Lock Nut 5/16-18	9
72	1713804	Brake Control Pivot	1
73	1713782	Compression Spring	1
74	1713806	Brake Shoe Rod	1
75	1713760	Brake Shoe Assy (Inc. 76, 77)	1
76	1713751	Lining Only	1
77	1713793	Brake Bracket	1
78	1703616	Bowed Washer	2
79	1716719	Brake Rod	1
80	1714663	Pivot Block	1
81	1717349	Wiring Assembly	1
82	1716169	Starter Generator	1
83	1708293	Pulley	1
84	1714688	Adjusting Strap	1
85	1106876	Capscrew 5/16-18 x 7/8	4
86	1106878	Capscrew 5/16-18 x 1	6
87	1717854	Clip	2
88	1716636	Lead Assy (Ground)	1
89	1716630	Battery	1
90	1110024	Wing Nut 3/8-16	2
91	1716623	Clamp Rod	2
92	1716678	Clamp	2
93	1716624	Carrier Battery	1
94	1118378	Screw 5/16-18 x 1/2	4
95	1185498	Speed Nut 5/16-18	4
96	1714690	Generator Belt 31-31/32	1
97	1714685	Tank Strap	1
98	1714767	Tank (Inc. 99)	1
99	1714766	Cap Only	1
100	1705905	Bowed Washer	2
101	1717236	Hood Stop	1
102	1717244	Bracket	1
103	1103204	Capscrew 5/16-18 x 2-1/2	2
104	1714720	Spacer	1
105	1714687	Tank Strap	1
106	1715006	Belt 34"	2
107	1717287	Engine Pulley	1
108	1103470	Set Screw 5/16-18 x 1/2	2
109	1187474	Square Key 1/4 x 2-1/4	1
110	1106852	Capscrew 1/4-20 x 2	1
111	1714643	Bracket	1
112	1714721	Spacer	1
113	1703896	Tank Outlet	1
114	1106832	Capscrew 1/4-20 x 5/8	1
115	1107381	Flat Washer 1/4	3
116		Engine	1
117	1106946	Capscrew 3/8-16 x 3-3/4	4
118	1714648	Spacer	4
119	1713394	Plate	1
120	1714615	Belt Guide	2
121	1106874	Capscrew 5/16-18 x 3/4	4
122	1103839	Hex Nut 5/16-18	2
123	1717312	Belt Guide	2
124	1713472	Quadrant	1
125	1715685	Grip	1

TRACTOR ASSEMBLY MODEL 191-01

Ref. No.	Part No.	Description	No. Req'd.	Ref. No.	Part No.	Description	No. Req'd.
126	1715680	Spring	1	189	1109532	Hex Nut 9/16-18	1
127	1716239	Pivot (Inc. 128)	1	190	1715866	Wheel and Tire Assy (Inc. 191, 192, 193)	2
128	1120210	Roll Pin 3/16 x 1	1	191	1715787	Wheel Only	2
129	1713391	Spring	1	192	1715856	Tubeless Tire 8 x 12	2
130	1713524	Control Lever	1	193	1716011	Valve Stem Assy	2
131	1704692	Roll Pin 1/8 x 1	4	194	101085	Hub Bolt	10
132	1185550	Set Screw 3/8-16 x 5/16	2	195	1716559	Frame Tube, LH	1
133	1706782	Bowed Washer	1	196	1717279	Frame Tube, RH	1
134	1185647	Bearing	2	197	1711380	Expansion Plug	2
135	1104954	Grease Fitting	5	198	1713483	Foot Rest	2
136	1106923	Capscrew 3/8-16 x 1-1/4	6	199	1713474	Spacer	2
137	1714595	Set Collar	1	200	1185558	Sleeve Bearing	2
138	1112859	Set Screw 5/16-18 x 5/16	1	201	1717315	Mounting Plate	1
139	1185035	Flange Bushing	2	202	1713397	Support	1
140	1714608	Quadrant Stop Assembly	1	203	1708012	Flat Washer	1
141	1185586	Flanged Bushing	2	204	1185284	Drive Pin 1/4 x 2	2
142	1714590	Idler Arm Assembly	1	205	1713811	Steering Pinion	1
143	1185096	Cotter Pin 3/16 x 1-1/4	1	206	1713809	Steering Gear	1
144	1716728	Spring	1	207	1100350	Cotter Pin 1/8 x 1	2
145	1185584	Cotter Pin 3/16 x 3/4	1	208	1714840	Cross Shaft	1
146	1107385	Flat Washer 1/2	1	209	1716563	Steering Arm	1
147	1716590	Shaft Support	1	210	1713361	Ball Joint	2
148	1714708	Idler Pulley	1	211	1103926	Jam Nut 1/2-20	2
149	1106930	Capscrew 3/8-16 x 1-3/4	9	212	1713385	Tie Rod	1
150	1717324	Control Shaft	1	213	1713378	Steering Lever RH	1
151	1701495	Spring	1	214	1891696	Drive Pin 5/16 x 1-1/2	2
152	1714586	Control Rod Assembly	1	215	1110152	Self Locking Nut 1/2-20	3
153	1714101	Hitch	1	216	1713377	Steering Lever LH	1
154	1100245	Lockwasher 1/2	2	217	1716697	Axle	1
155	1121511	Hex Nut 1/2 x 13	2	218	1716953	Spindle LH	1
156	1713461	Mounting Cap	4	219	1717462	Drag Link	1
157	1104333	Square Key 3/16 x 1	1	220	1106938	Capscrew 3/8-16 x 2-3/4	7
158	1713670	Coupling	1	221	1714611	Quadrant Assembly	1
159	1110818	Set Screw 5/16-18 x 3/4	4	222	1714710	Belt Guide	1
160	1716561	Bonded Coupling	1	223	1110152	Self Locking Nut 1/2-20	1
161	1713794	Brake Drum	1	224	1716952	Spindle RH	1
162	1717294	Drive Shaft	1	225	1185616	Ball Bearing	2
163	1713432	Drive Pin 3/16 x 1-1/4	1	226	1715855	Valve Stem Assy	2
164	1714649	Spring	1	227	1715789	Wheel Only	2
165	1113526	Retaining Ring	1	228	1713744	Tire	2
166	1704479	Ball Bearing	1	228	1700495	Tube	2
167	1714666	Clutch Yoke	2	228	1718291	Tubeless Tire 4.80/400 x 8	2
168	121900	Bowed Washer	As Req.	229	1715786	Wheel, Tire and Tube Assy 4.80/400 x 8	2
169	1110202	Dowel Pin	2	229	1718426	Wheel and Tubeless Tire Assy 4.80/400 x 8	2
170	1714639	Bearing Retainer	1	230	1185615	Ball Bearing	2
171	1714665	Spacer	1	231	121898	Washer	4
172	1106927	Capscrew 3/8-16 x 1-1/2	2	232	1716197	Set Collar	2
173	1714664	Spacer	1	233	1187857	Set Screw 1/4-20 x 1	2
174	1714656	Yoke Support	1	234	1715899	Dust Cap	2
175	1717309	Clutch Flange	1	235	1714644	Plunger	1
176	1716583	Spring	1	236	1714233	Bushing	1
177	1185432	Thrust Race	1	237	1713075	Spring	1
178	1714630	Friction Disc	2	238	1714577	Lift Lever	1
179	1717299	Pulley Assy (Inc. 178 & 180)	1	239	1714645	Rod	1
180	1717298	Friction Disc	1	240	1714575	Tool Lift	1
181	1185471	Needle Bearing	2	241	1703011	Spring Cotter	1
182	1717237	Spacer	1	242	1107035	Capscrew 1/2-13 x 2	1
183	1717296	Clutch Flange	1	243	1185496	Jam Nut 1/2-13	1
184	1717293	Bearing Support	1	244	1714132	Rubber Tip	2
185	1185588	Bearing Flange	2	245	1104436	Woodruff Key 3/16 x 3/4	1
186	1185587	Self Aligning Bearing	1				
187	1185023	Flat Washer 9/16	1				
188	1100246	Lockwasher 9/16	1				

(CONT ON PAGE 8)

TRACTOR ASSEMBLY MODEL 191-01

Ref. No.	Part No.	Description	No. Req'd.
246	1714555	Pulley	1
247	1715563	Shaft	1
248	1717288	Belt Guide	1
249	1106880	Capscrew 5/16-18 x 1-1/8	2
250	1185224	Oil Seal	1
251	1185010	Needle Bearing	1
252	1715785	Support Housing	1
253	1106921	Capscrew 3/8-16 x 1-1/8	3
254	1185605	Ball Bearing	1
255	1118730	Retaining Ring	1
256	1717270	Axle Support	1
257	1185232	Drive Pin 3/16 x 1-1/4	2
258	1713383	Axle Pivot	1
259	1717260	Rear Panel	1
260	1111609	Capscrew 5/16-18 x 2-3/4	1
261	1185680	Screw 10-32 x 3/4	6
262	1109845	Nut #10-32	6
263	1100240	Lockwasher #10	7

Ref. No.	Part No.	Description	No. Req'd.
264	1716315	Support	1
265	1114474	Fil. Screw 1/4-20 x 1-1/2	2
266	1715575	Grip	1
267	1890234	Flat Washer 1/2	1
268	1185456	Tinnerman Nut	2
269	1114755	Screw #10-32 x 5/8	1
270	1716586	Clutch Stop	1
271	1106940	Capscrew 3/8-16 x 3	8
272	1714549	Belt Guide	1
273	1106893	Capscrew 5/16-18 x 2-1/2	2
274	1106896	Capscrew 5/16-18 x 2-3/4	1
275	1111265	Carriage Bolt 5/16-18 x 3/4	2
276	1185649	Retaining Ring	2
277	1185432	Thrust Race	2
278	1185551	Lock Screw	2
279	1715740	Belt - P.T.O. 42-7/8"	1
280	1714999	Transmission Assy	1