




Owner's Manual / Manual del Propietario

Portable Generator / Generador Portátil
Model / Modelo 01925

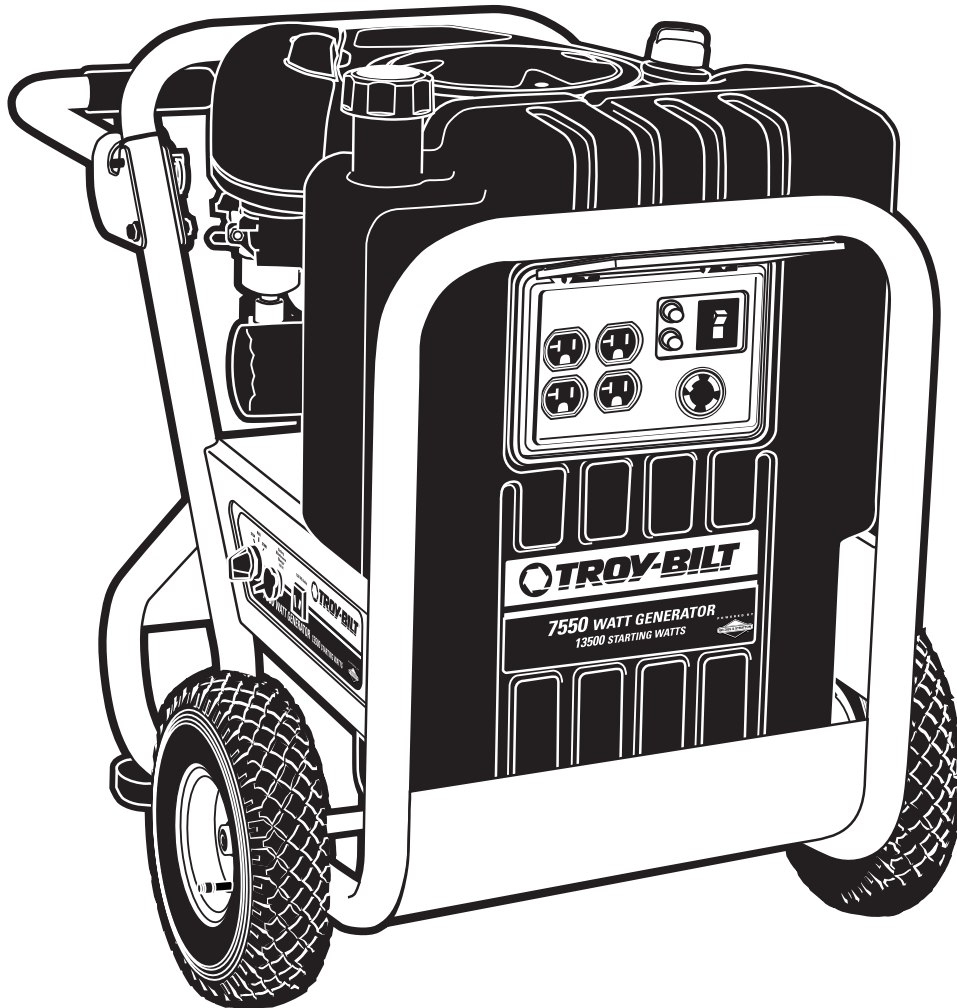

IMPORTANT: READ SAFETY RULES AND INSTRUCTIONS CAREFULLY
IMPORTANTE: LEYO LA SEGURIDAD LAS ORDENES Y LAS INSTRUCCIONES DETENIDAMENTE

Questions? Preguntas?
Helpline - 1-888-611-6708 M-F 8-5 CT

Troy-Bilt® is a registered trademark of Troy-Bilt, LLC and is used under license to Briggs & Stratton Power Products.
Troy-Bilt® es una marca registrada de Troy-Bilt, LLC y se usa abajo licencia a Briggs & Stratton Power Products.

BRIGGS & STRATTON POWER PRODUCTS GROUP, LLC
JEFFERSON, WISCONSIN, U.S.A.





Printed in USA


Manual No. 192472GS Revision 6 (03/23/2004)

Wiring Diagram and Schematic

SCHEMATIC

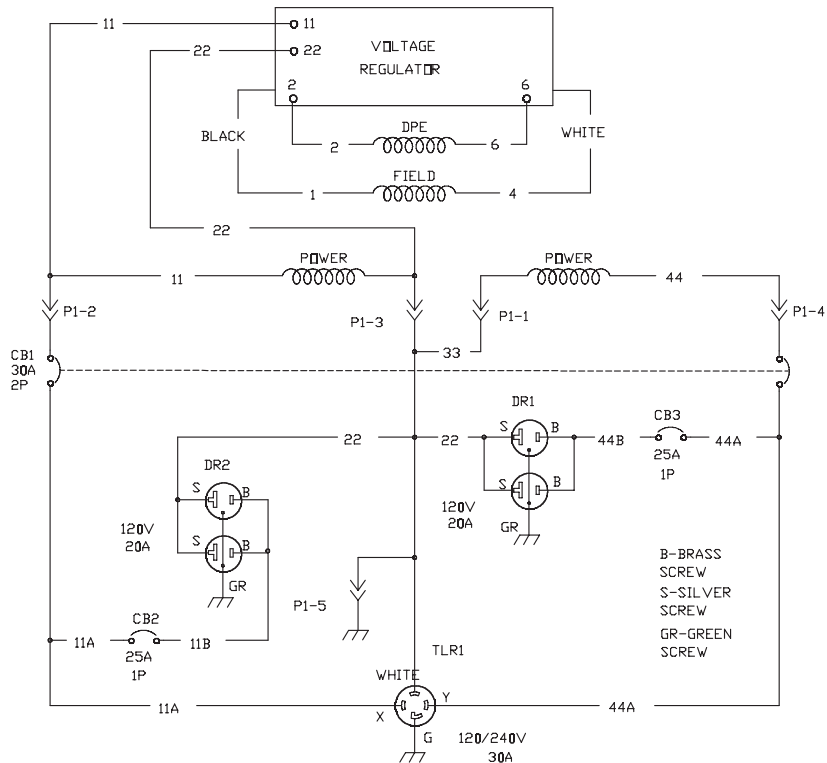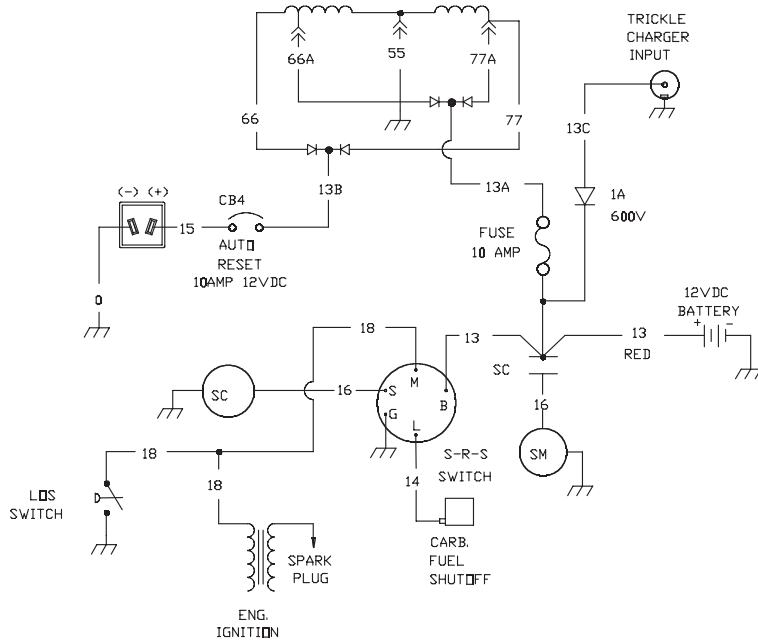

EXPLODED VIEW - MAIN UNIT

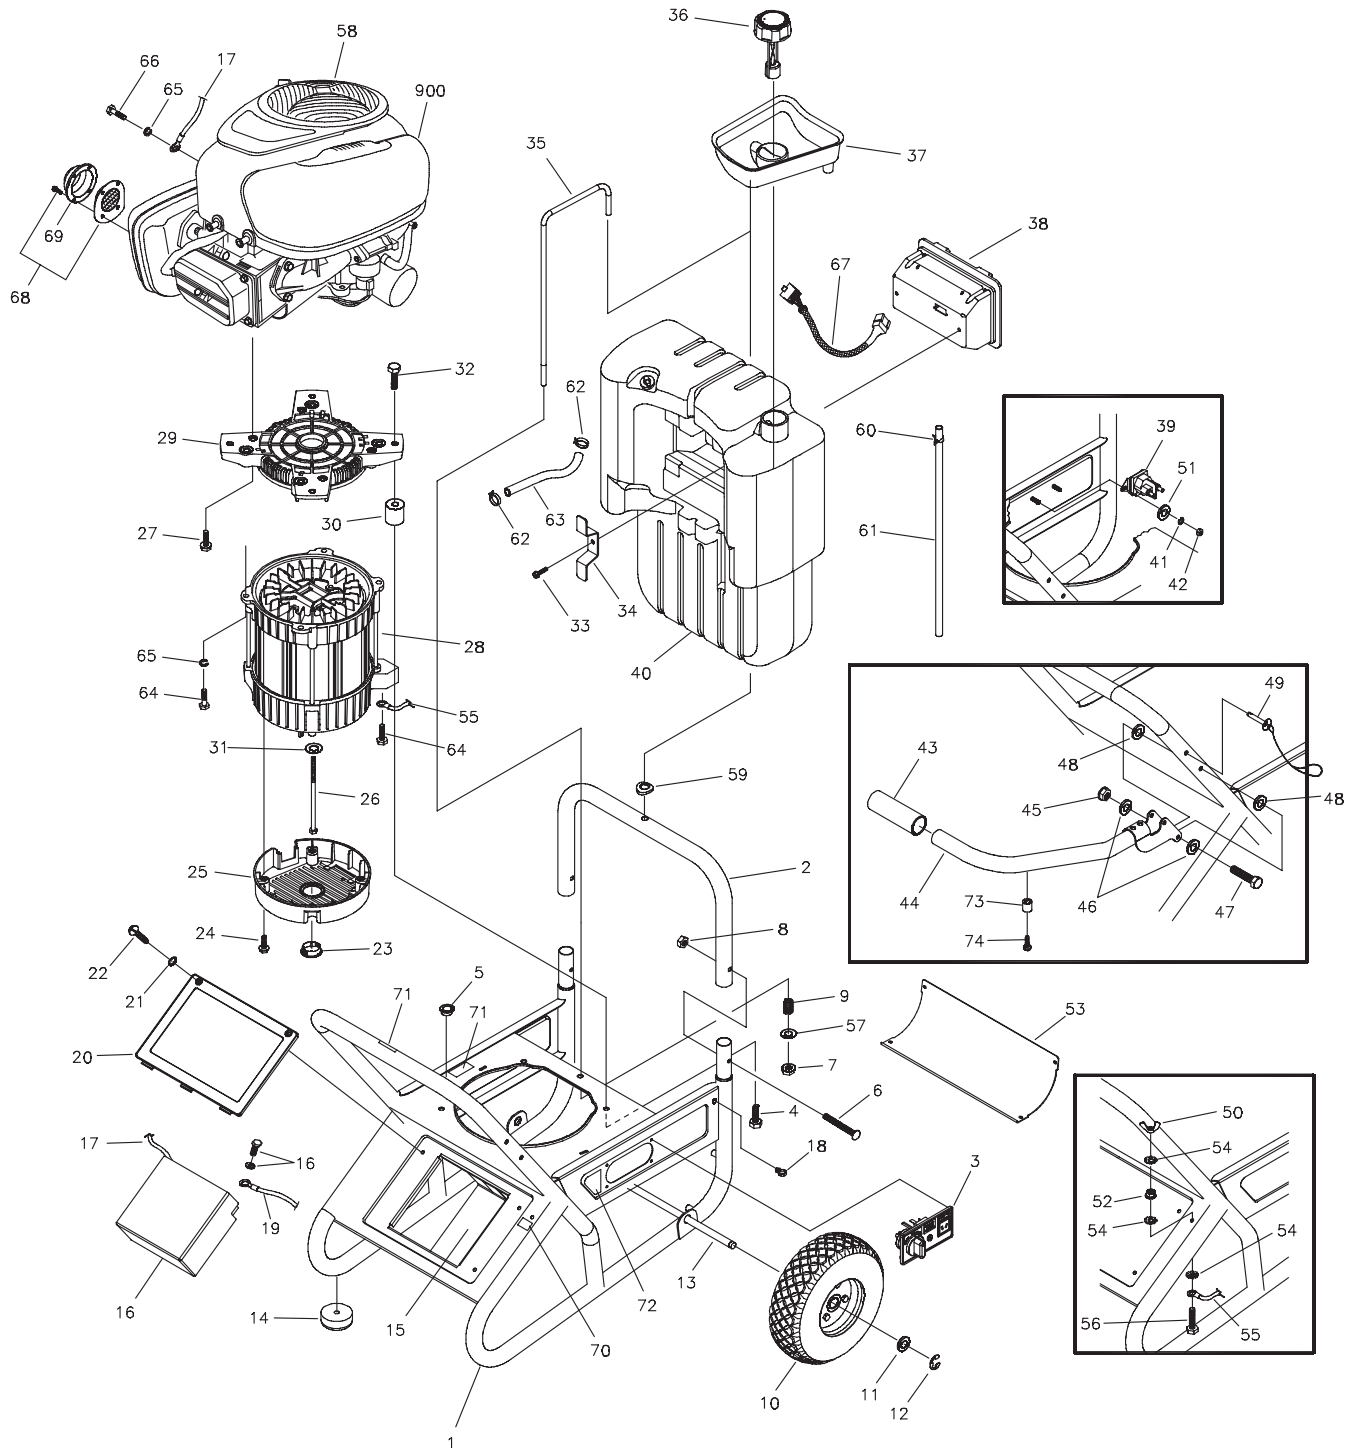


Section 9: Exploded Views and Parts Lists

PARTS LIST - MAIN UNIT

Item	Part #	Description	Item	Part #	Description
1	B191821GS	CRADLE	45	49820GS	NUT, Nylok
2	B193086GS	CRADLE, Top	46	22145GS	WASHER
3	NSP	ASSY, DC Control Panel (see page 23)	47	51730GS	SCREW
4	193263GS	SCREW	48	193288GS	WASHER, Nylon
5	186173GS	BUSHING, Snap	49	B4135GS	PIN, Handle Release
6	31669GS	BOLT, Carriage	50	87680GS	NUT, Wing
7	26911GS	NUT, Nylock	51	22473GS	WASHER
8	B2071GS	NUT, Lock	52	52857GS	NUT, Lock
9	192470GS	SPRING, Loading, Tank	53	193344GS	KIT, PLT, Skid, SRV
10	B4966GS	WHEEL	54	26850GS	WASHER
11	22247GS	WASHER	55	192810GS	HARNESS, Ground
12	191265GS	E-RING	56	45757GS	SCREW
13	191267GGS	AXLE	57	22131GS	WASHER
14	192553GS	KIT, Vibration Mount Hardware (2 sets)	58	192251GS	GUARD, Recoil
15	193320GS	STRIP, Foam	59	192520GS	GROMMET, Rod, Tank
16	193463GS	BATTERY, 12V w/Hardware	60	193055GS	CLAMP, Hose
17	185939LGS	CABLE, Blk, Battery to Engine	61	192997GS	HOSE, Fuel Overflow
18	192940GS	CLIP, Retainer, Fuel Hose	62	48031CGS	CLAMP, Hose, Band
19	189302EGS	CABLE, Red, Battery to Solenoid	63	189867DGS	HOSE, Fuel
20	191815GS	COVER, Battery, Billboard	64	22125GS	SCREW
21	22769GS	WASHER	65	22129GS	WASHER, Lock
22	36701GS	SCREW	66	22142GS	SCREW
23	191190GS	CAP, Bolt, Rotor	67	192809GS	HARNESS, AC
24	74908GS	SCREW	68	392390	ARRESTOR, Spark with Screws
25	191029GS	COVER, RBC, Plastic	69	396903	DEFLECTOR, Muffler
26	187365HGS	SCREW	70	B4986GS	DECAL, Ground
27	75246GS	SCREW	71	191436GS	DECAL, Caution Hot Muffler
28	NSP	ASSY, Alternator (see page 24)	72	193504GS	DECAL, Battery Instructions
29	191793GS	ADAPTER, Engine	73	186569GS	BUMPER, Recess
30	193249GS	MOUNT, Engine	74	28828BGS	SCREW
31	96796GS	WASHER	900	NSP	ENGINE
32	193264GS	SCREW	Parts Not Illustrated		
33	191991GS	BOLT, Plastite	192508GS	HARNESS, DC	
34	191990GS	BRACKET, Retaining, Panel	191824GS	TRAY, Oil Drain	
35	191989GS	ROD, Mounting Tank	192472GS	MANUAL, Owners	
36	191826GS	CAP, Fuel Gauge	BB3061GS	OIL, Bottle	
37	192921GS	SHIELD, Fuel Fill	188971GS	CORD, Extension	
38	192277GS	ASSY, Control Panel (see page 22)	189302FGS	CABLE, Red, Solenoid to Starter	
39	555374	SOLENOID/BRACKET	A3746GS	ASSY, Holder Fuse	
40	193345GS	ASSY, Tank, 7-Gallon	65787GS	CABLE, Battery Charge	
41	22097GS	WASHER, Lock	B4177GS	CHARGER, Battery	
42	22127GS	NUT	193347GS	KIT, Battery Term, Hardware	
43	192477GS	GRIP, Handle	193346GS	KIT, Decals	
44	B191822GS	HANDLE (Includes Item 43)			

Section 9: Exploded Views and Parts Lists


AC CONTROL PANEL EXPLODED VIEW & PARTS LIST

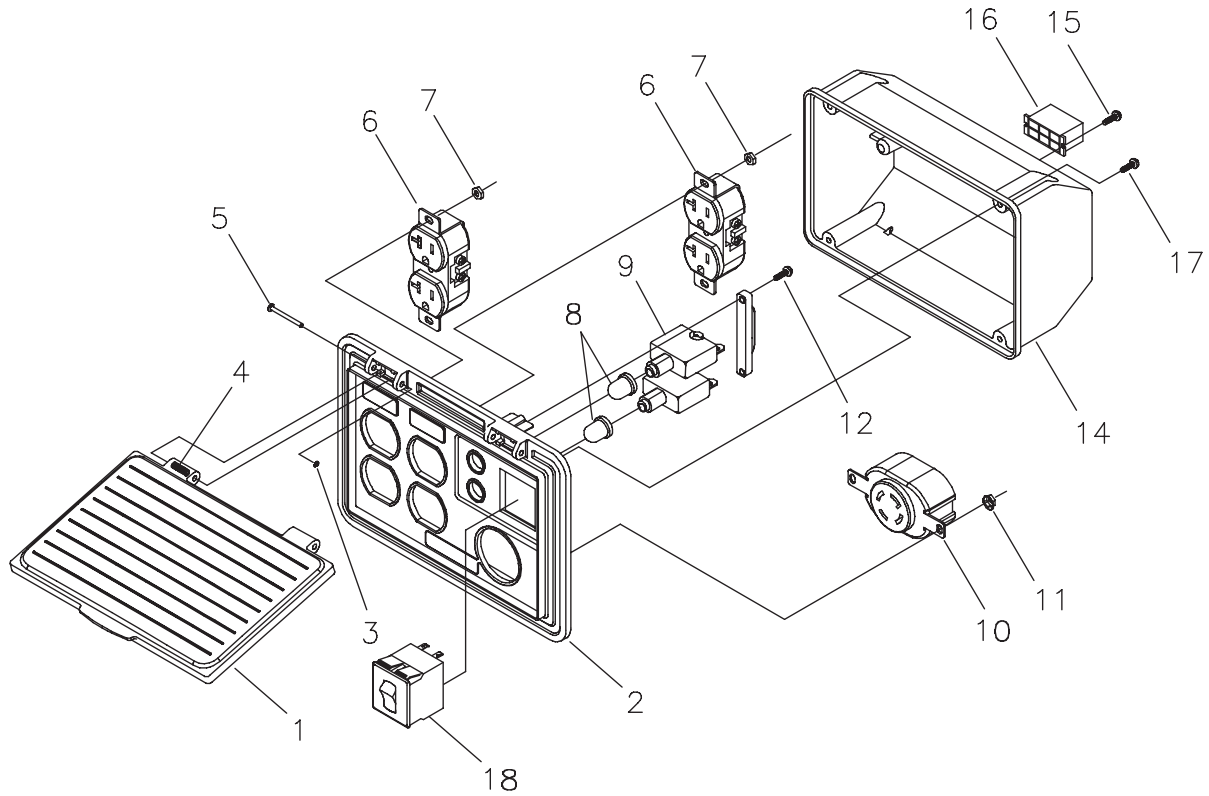

Item	Part #	Description
1	188914GS	COVER, Lid, Control Panel
2	192273BGS	CONTROL PANEL, Compact
3	189167GS	CLIP, Hinge Pin Retainer
4	189182GS	SPRING, Hinge, Pin
5	189166GS	PIN, Hinge, Cover, Compact
6	68759GS	OUTLET, 120V, 20A, Duplex
7	189165GS	NUT
8	84198GS	CAP, Circuit Breaker
9	75207GS	BREAKER, Circuit
10	43437GS	OUTLET, 120/240V Locking, 30A
11	189164GS	NUT
12	84543CGS	SCREW
13	93857GS	BAR, Retaining
14	192274GS	BOX, Rear Cover
15	82308GS	SCREW
16	22694GS	HOUSING, Receptacle
17	192241GS	SCREW
18	192785GS	BREAKER, Circuit

Section 9: Exploded Views and Parts Lists


DC CONTROL PANEL EXPLODED VIEW & PARTS LIST

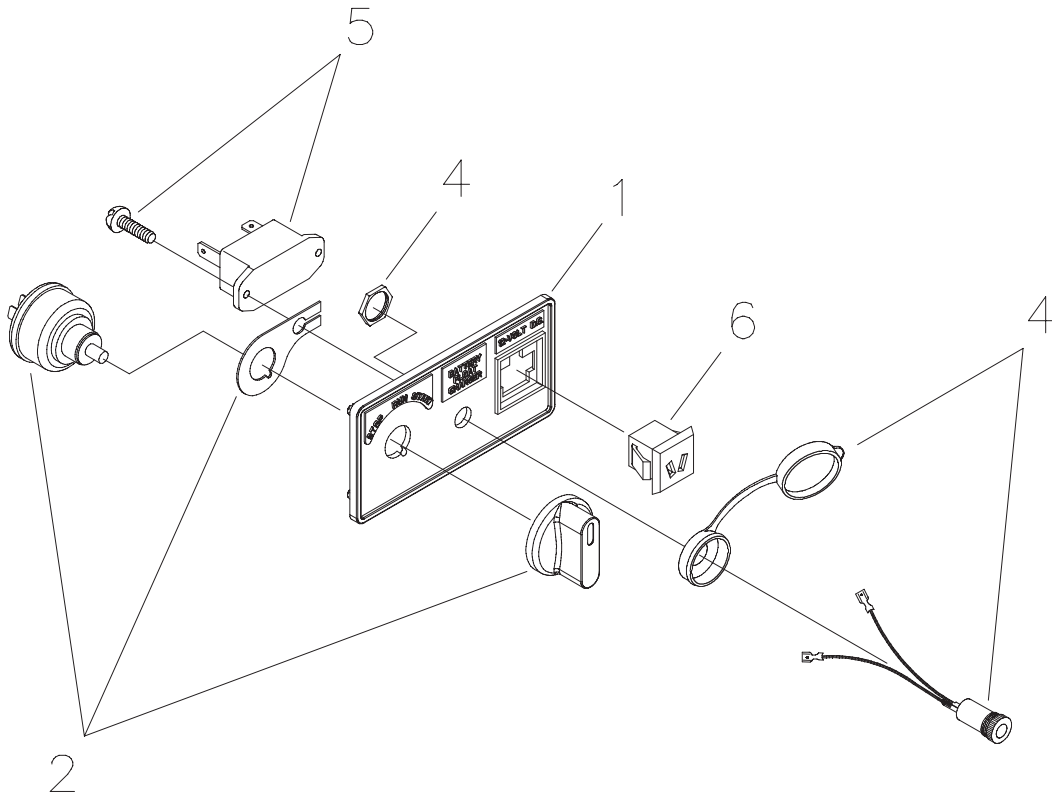

Item	Part #	Description
1	192367GS	PANEL, DC Control
2	194838GS	KIT, SRS, Switch with Knob
4	194840GS	ASSY, Jack, Coaxial with Cap
5	194839GS	KIT, Circuit Breaker
6	90418GS	OUTLET, 12VDC, Snap

Section 9: Exploded Views and Parts Lists

ALTERNATOR EXPLODED VIEW & PARTS LIST

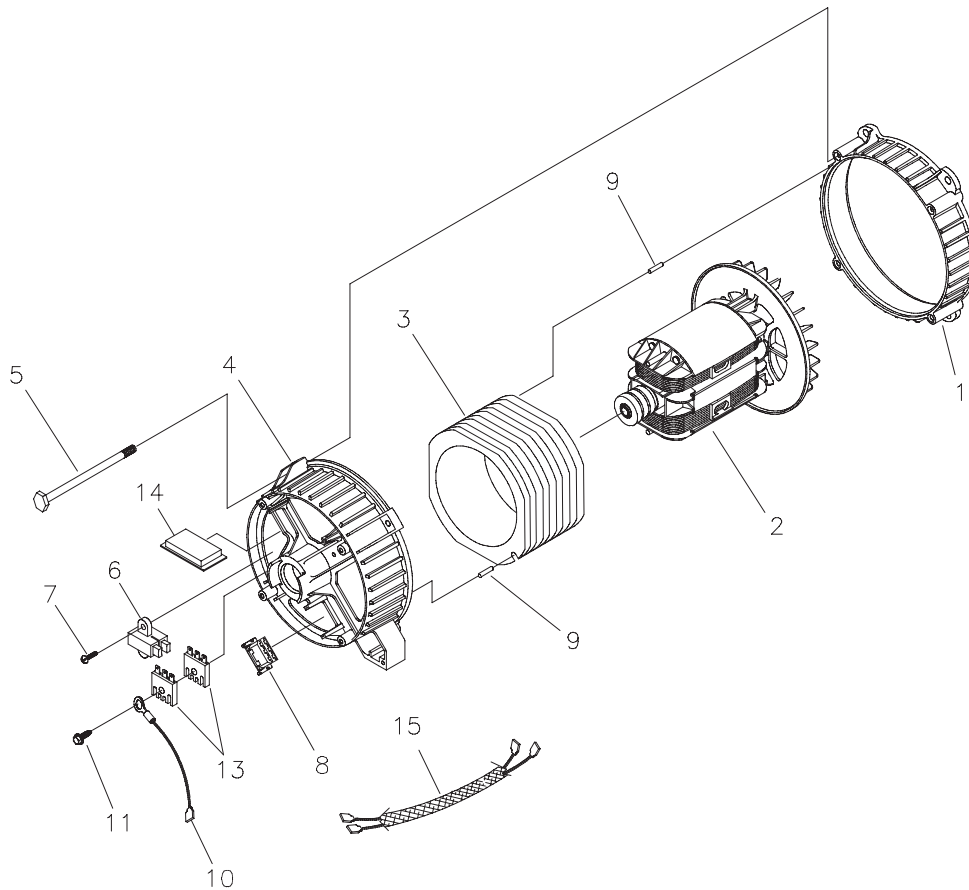

Item	Part #	Description
1	186059GS	ADAPTER, Mounting, Alternator
2	192171GS	ROTOR
3	192186AGS	STATOR
4	193336GS	RBC, (with O-Ring p/n 189197GS)
5	86308KGS	SCREW
6	66386GS	ASSY, Holder, Brush
7	66849GS	SCREW
8	22694GS	RECEPTACLE, 6 pin
9	81917GS	PIN, Roll
10	193428AGS	ASSY, Wire, Ground
11	66849CGS	SCREW
13	65795GS	RECTIFIER
14	191653GS	BOARD, Circuit, System Control
15	193074GS	HARNESS, Wire DC Charge