

INSTALLATION

1. Remove red reflectors from fender.

2. Install both tail lights (A). When securing the tail lights place the ring terminal of the short tail light lead over one of the studs and secure with lockwashers (B) and nuts (C). Plug the other tail light lead into the large double plug lead (D).

NOTE

The paint around the ground lead studs

should be removed to provide a good ground.

3. Route the tail light lead under the fender. Retain white lead to center of the fender by fastening a plastic clip (E) onto a clean area. See fig. 1.

4. On models that have a four position switch, OFF, RUN/LIGHTS, RUN and START, connect the tail light lead to the white wire on key switch with connector (F) provided.

5. On models that have a separate light

switch, connect to white wire of switch.

Test lights for proper operation.

6. If a tail light does not work check for a proper ground connection at tail light, see step 2.

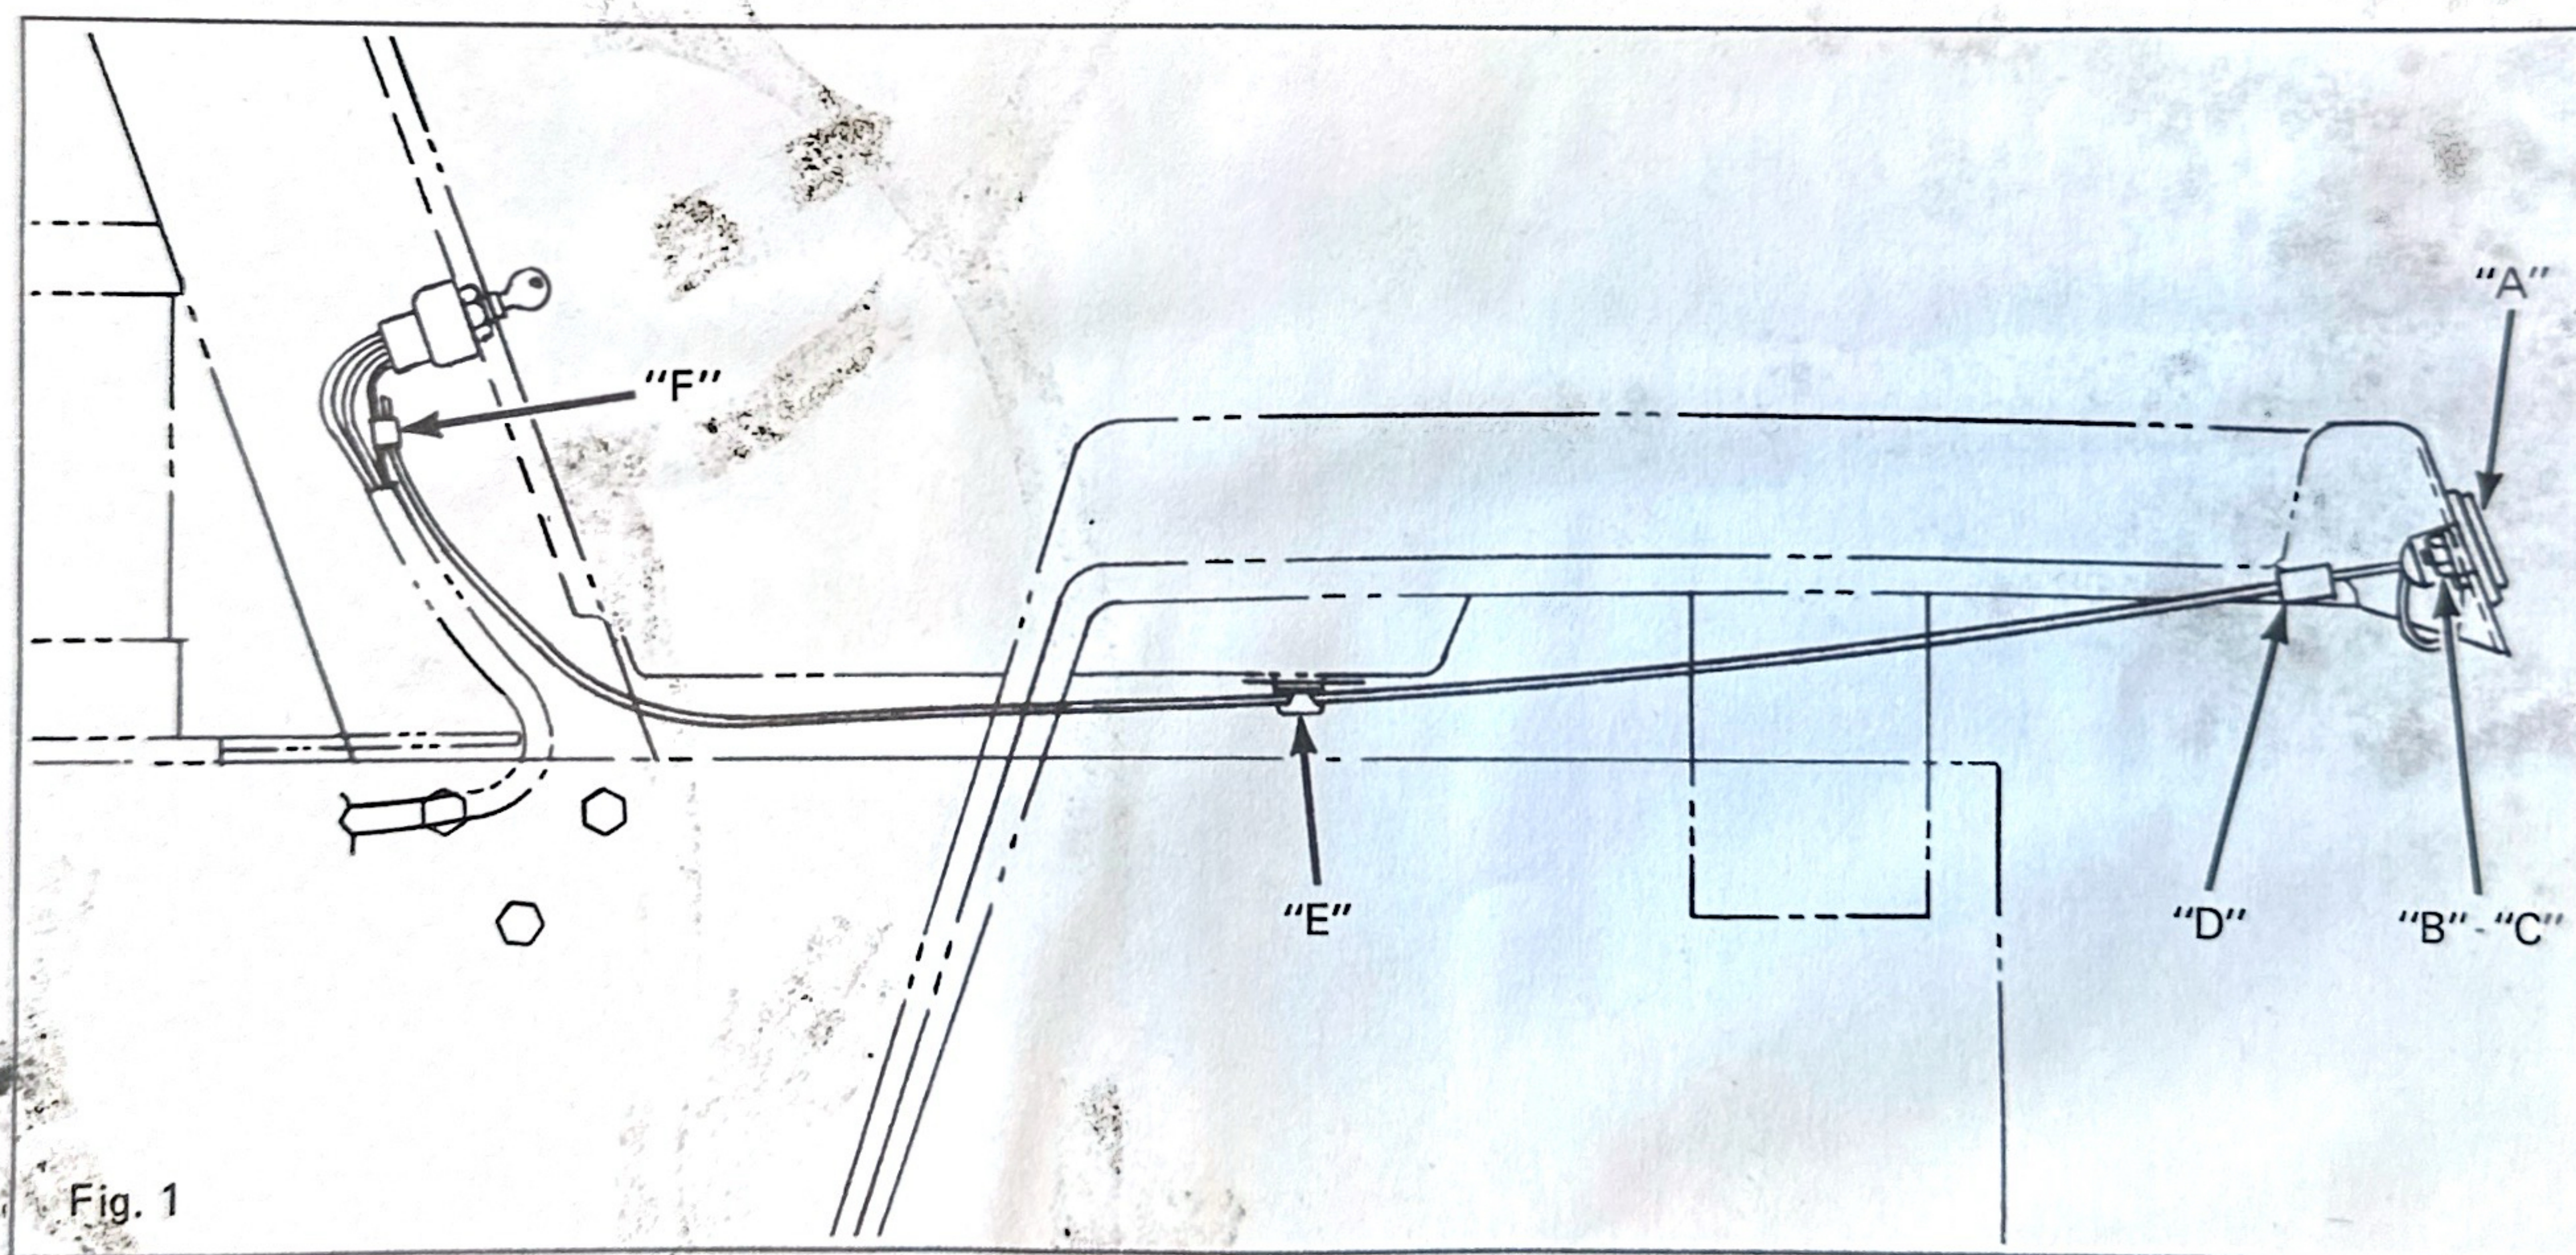


Fig. 1

This Kit consists of the following parts:

- A - 172 - 5312 (2) Tail Light
- B - 110 - 0240 (4) No. 10 Lockwasher
- C - 118 - 6208 (4) No. 10 - 32 Nut
- D - 172 - 6934 (1) Lead Adapter
- E - 172 - 4879 (1) Plastic Clip
- F - 172 - 1038 (1) Connector