



## Wheel Weight Kit Installation Instructions

Model 6910

### INSTALLATION

Secure two rectangular weight guides (A) to two holder ass'ys (B) using four 5/16-18 bolts (C) and nuts (D).


Secure support ass'y (E) to holder ass'y using two 5/16-18 bolts (C) and nuts (D).

Measure distance between pins (F). Measurement should be approximately 7-3/4" (19.7 cm).

Two holes this distance, .344 (8.7 mm) diameter, must be drilled into the top of frame so pins will lock in place. Holes should be approximately 3/8" (9.5 mm) from front of frame. See figure.

Insert pins of assembly into drilled holes and support (E) over pin of axle support.

Insert weight into complete assembly.

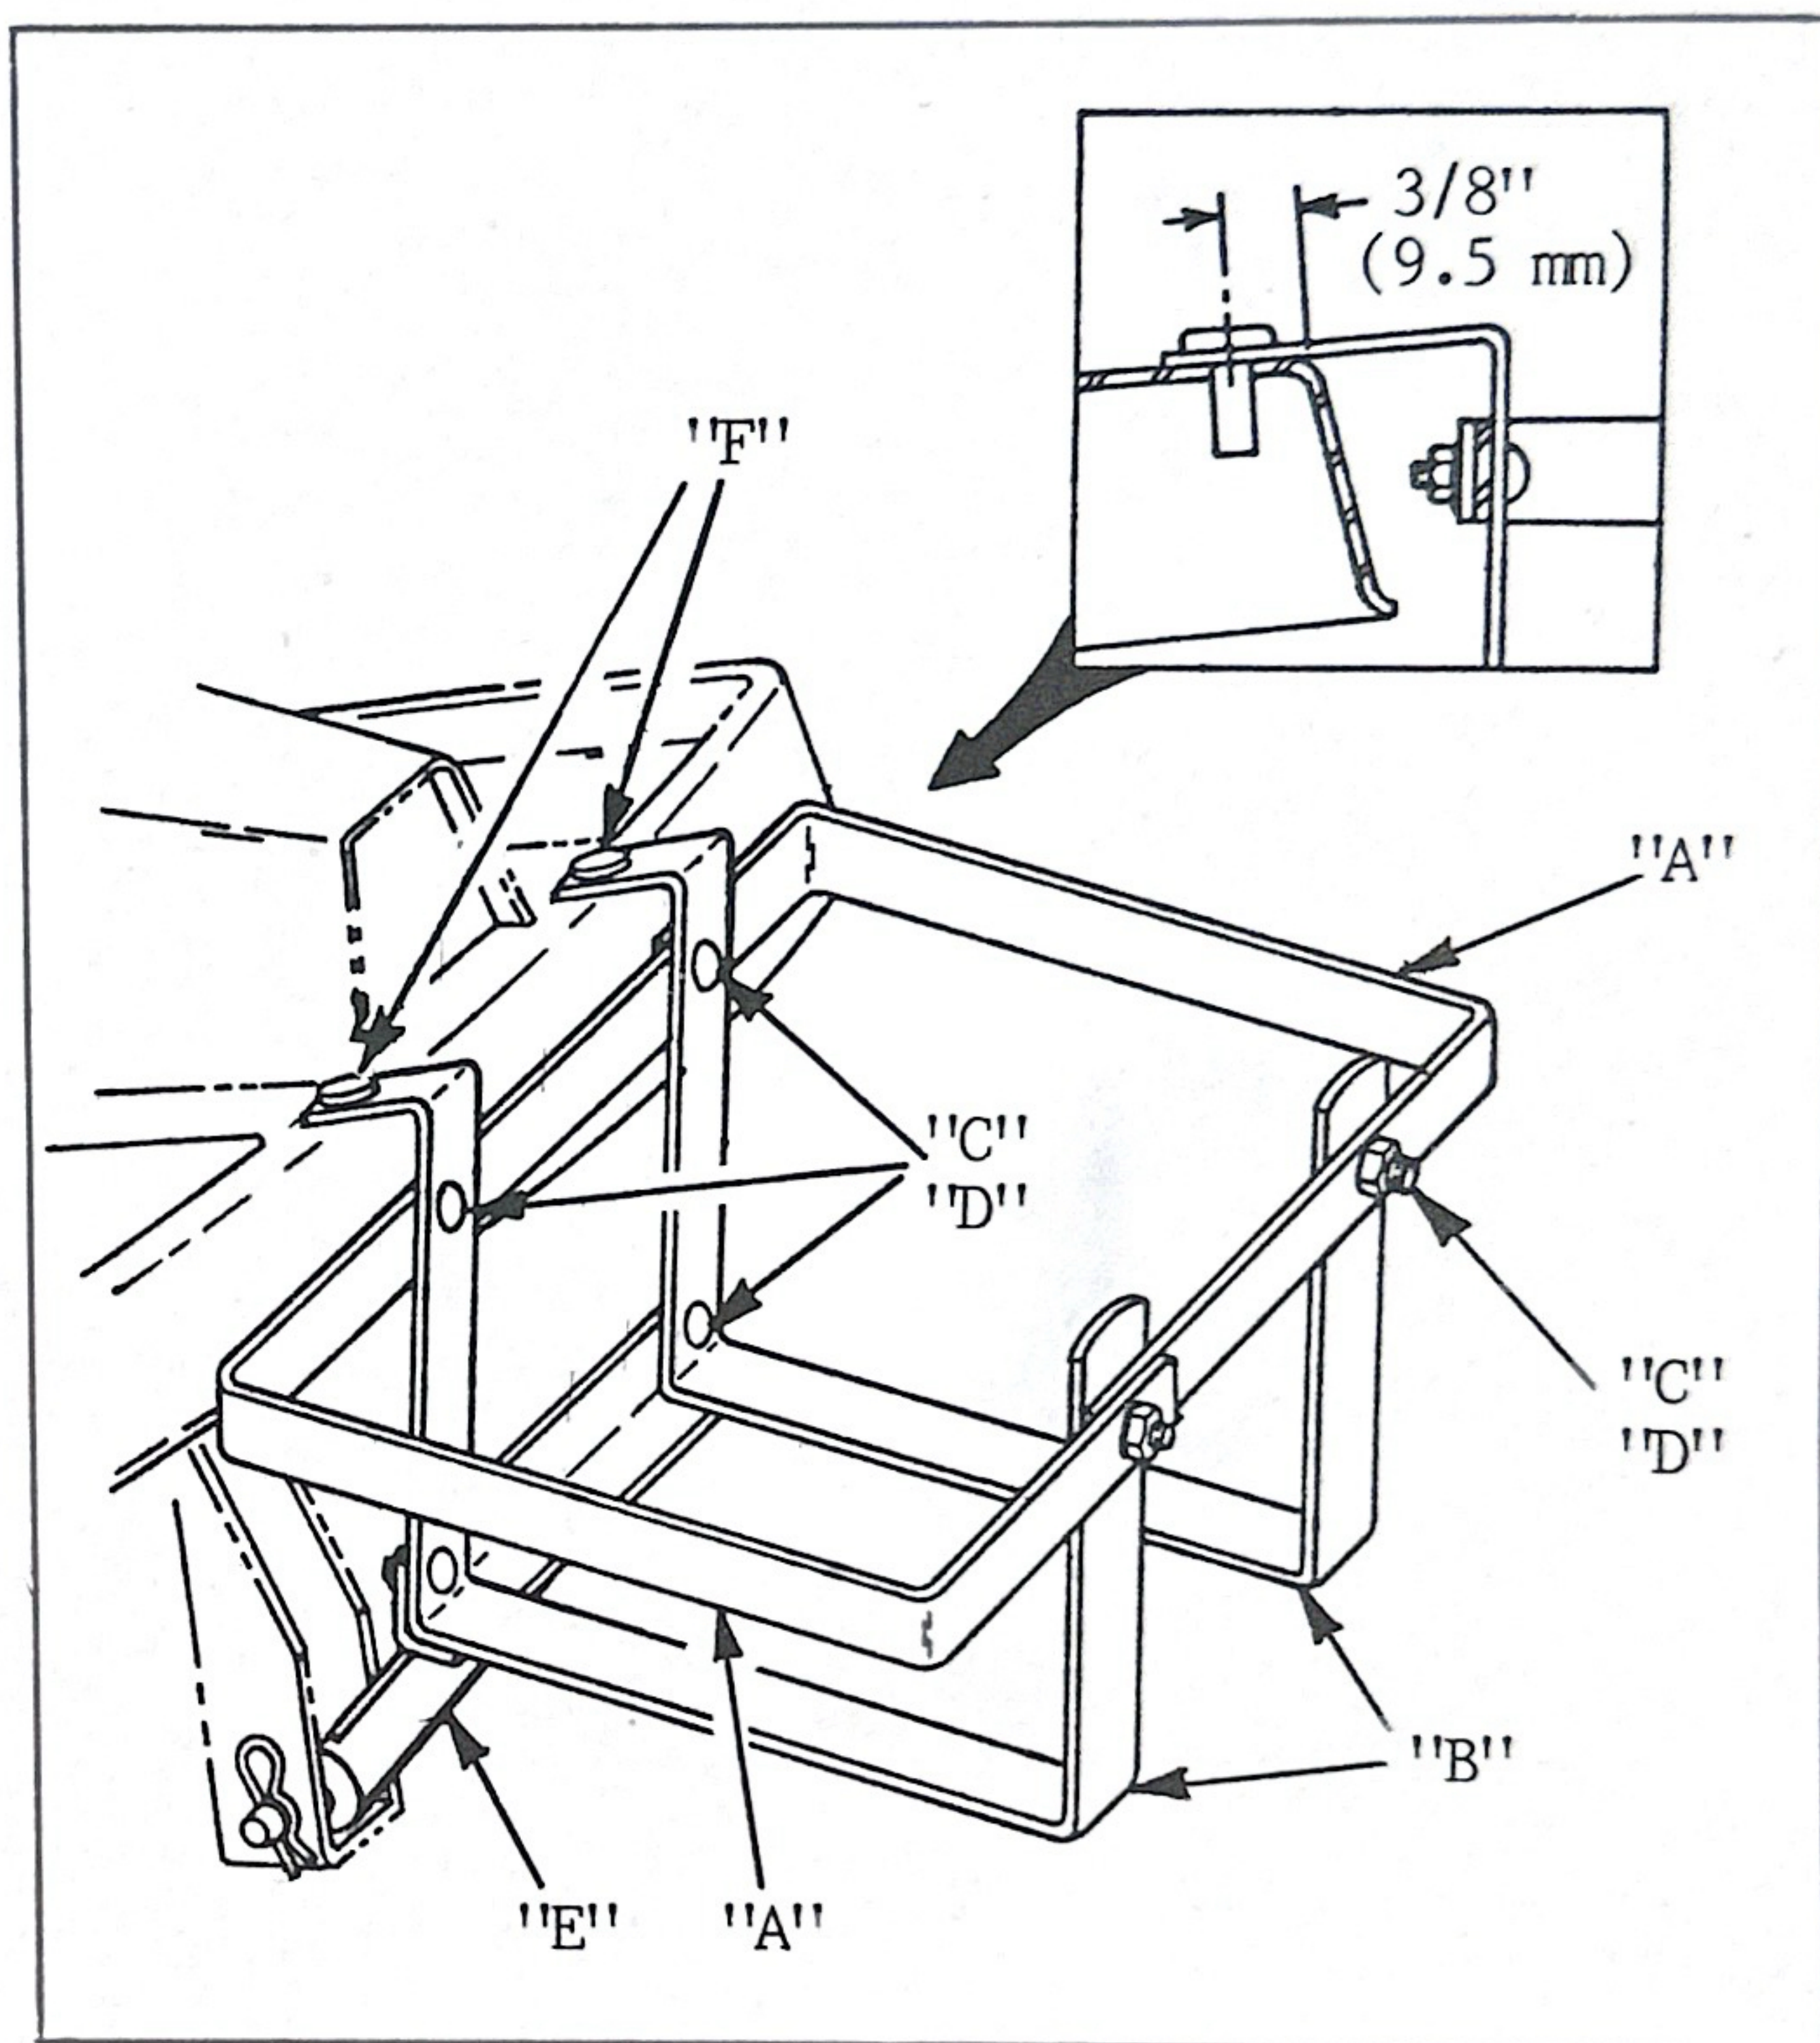

| REF. NO. | PART NO.  | DESCRIPTION                           | NO. REQ'D. |
|----------|-----------|---------------------------------------|------------|
| A        | 1748381   | Weight Guide .....                    | 2          |
| B        | 1748380   | Holder Ass'y Weight...                | 2          |
| C        | * 1186098 | Round Head Bolt<br>5/16-18 x 34 ..... | 6          |
| D        | * 1186391 | Flange Lock Nut 5/16 .                | 6          |
| E        | 1748378   | Support Ass'y .....                   | 1          |

•Common Hardware - Purchase Locally  
(Grade 5 where applicable)