




Light Kit Installation Instructions

Model 30910

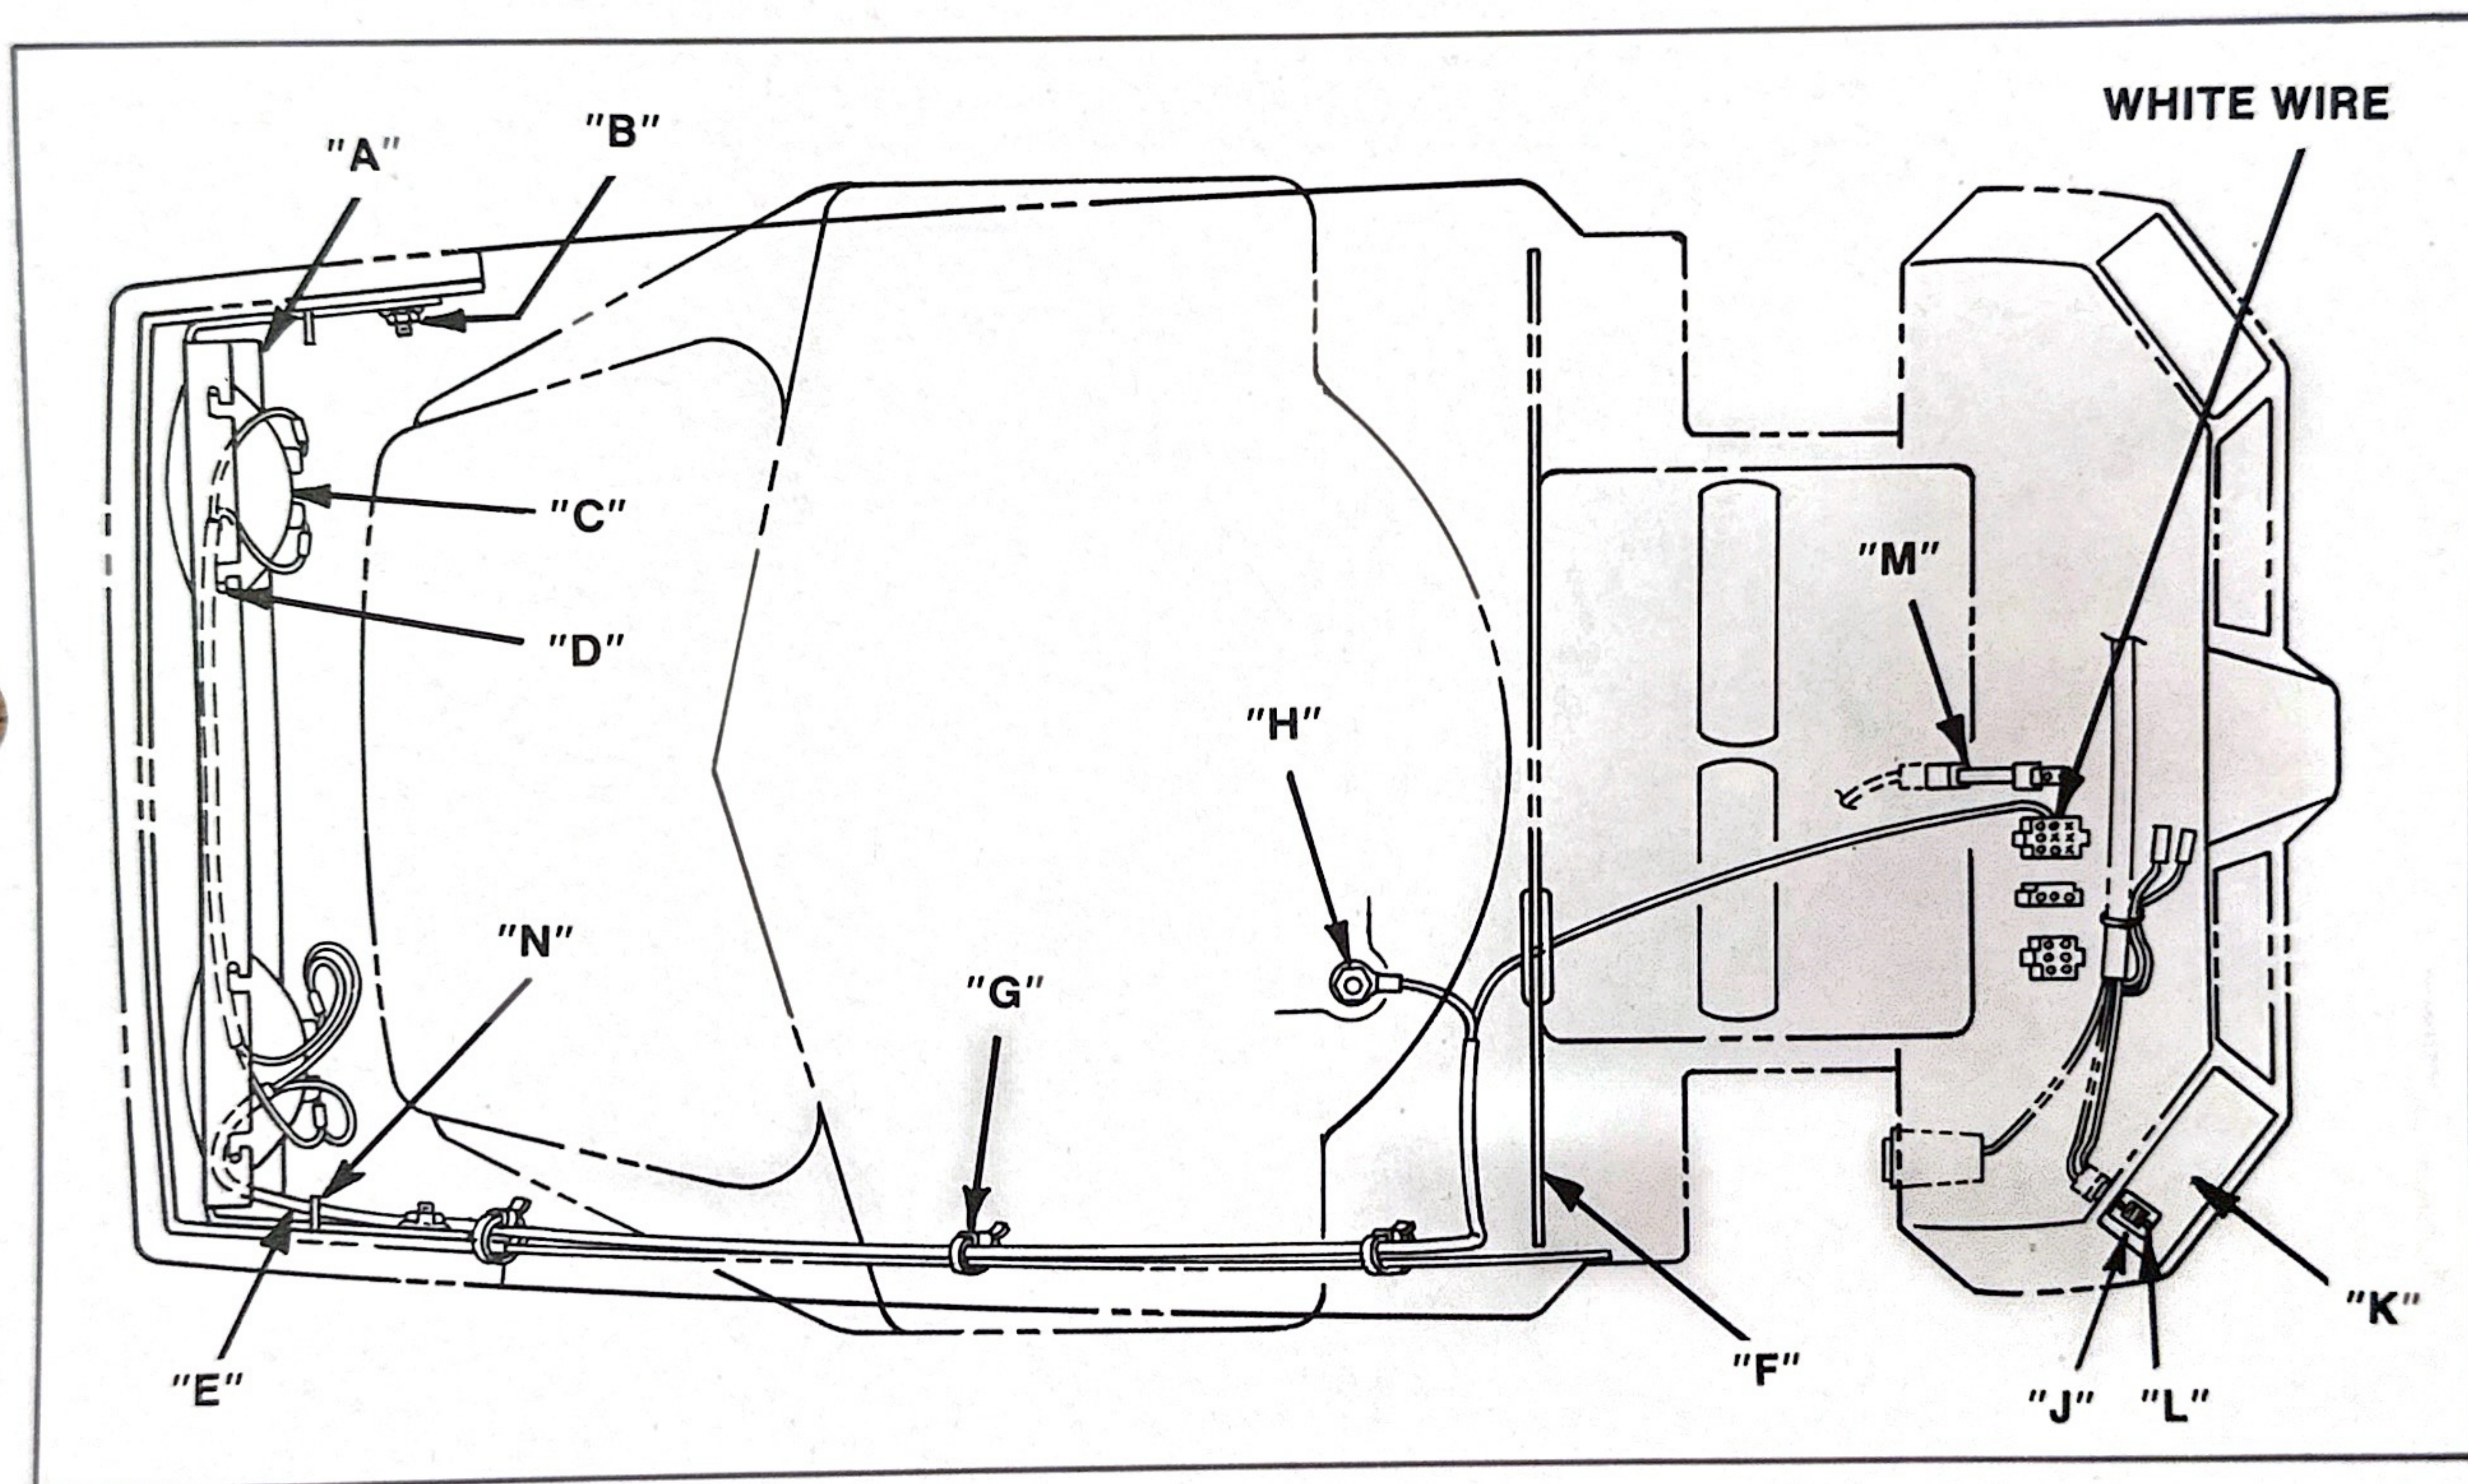

1. Locate headlight support (A) and secure to inside of front grille using (4) 1/4-20 flange nuts (B).

NOTE: - L.H. and R.H. side bars "N", may have to be repositioned to install support "A".

2. Place headlights (C) into opening of support and secure with wire retainers (D).

3. Route wiring harness (E) behind L.H. headlight retainer, as shown, and attach to lights.

4. Remove L.H. side panel.

5. Route harness along the L.H.

bar support up to engine heat shield (F) and secure to bar using (3) cable ties (G).

6. Attach eye terminal of harness to engine mounting bolt (H).

7. Route pin terminal of harness through the engine heat shield and insert into the nine pin connector opposite the white wire of the top plug.

8. Remove the choke decal from the console. Locate light switch (J), and secure into top opening of console using (2) flange head #6-32 screws (L).

9. Locate the plug under the console with the white and white/black wires. Plug the white wire into the top of the switch and the white/black into the bottom.

10. Fasten the new decal (K) onto the console.

11. Replace the existing diode assembly (M) with the new diode connection.

12. Reinstall the L.H. side panel.

REF. LETTER	PART NO.	DESCRIPTION	NO. REQ'D
A	1744021	Support	1
B	• 1186389	Flange Nut 1/4-20	4
C	1726435	Headlight.....	2
D	1744022	Retainer	2
E	1752422	Wiring Harness	1
G	1735531	Tie Cable	3
J	1751496	Light Switch	1
K	1750671	Choke Decal.....	1
L	1750963	Fl. Screw #6-32	2
M	1744489	Diode Assembly	1
