

Bolens®

Grass Bag Adapter Kit

Models 6880
6882

Installation Instructions With Parts List

Model 6880 for Tecumseh engines.
Model 6882 for Briggs & Stratton engines.

INSTALLATION INSTRUCTIONS

1. Position one support bracket with the leg up and to the rear on the outside of each handle just below the console, see sketch. Secure each support bracket with two 1/4-20 x 1-1/4 hex capscrews and two 1/4-20 hex locknuts.

Install the capscrews with their heads to the outside of the handles.

2. Insert the straight end of the bag hanger into the support rod coupling. Align holes in coupling and hanger and secure with 1/8 x 1-1/4 cotter pin.


3. Install the above assembly into the support brackets from the right side. Secure with spring cotter on each side of left support bracket.

4. Open the discharge door and install the chute over the discharge opening. Secure with the lock pin.

5. To install the grass catching bag, attach the open end of bag over discharge chute. Slip the loop on the opposite end

over the hook on the bag hanger, see sketch.

6. Fasten the exhaust deflector onto the muffler with the exhaust blowing slightly down and to the rear.

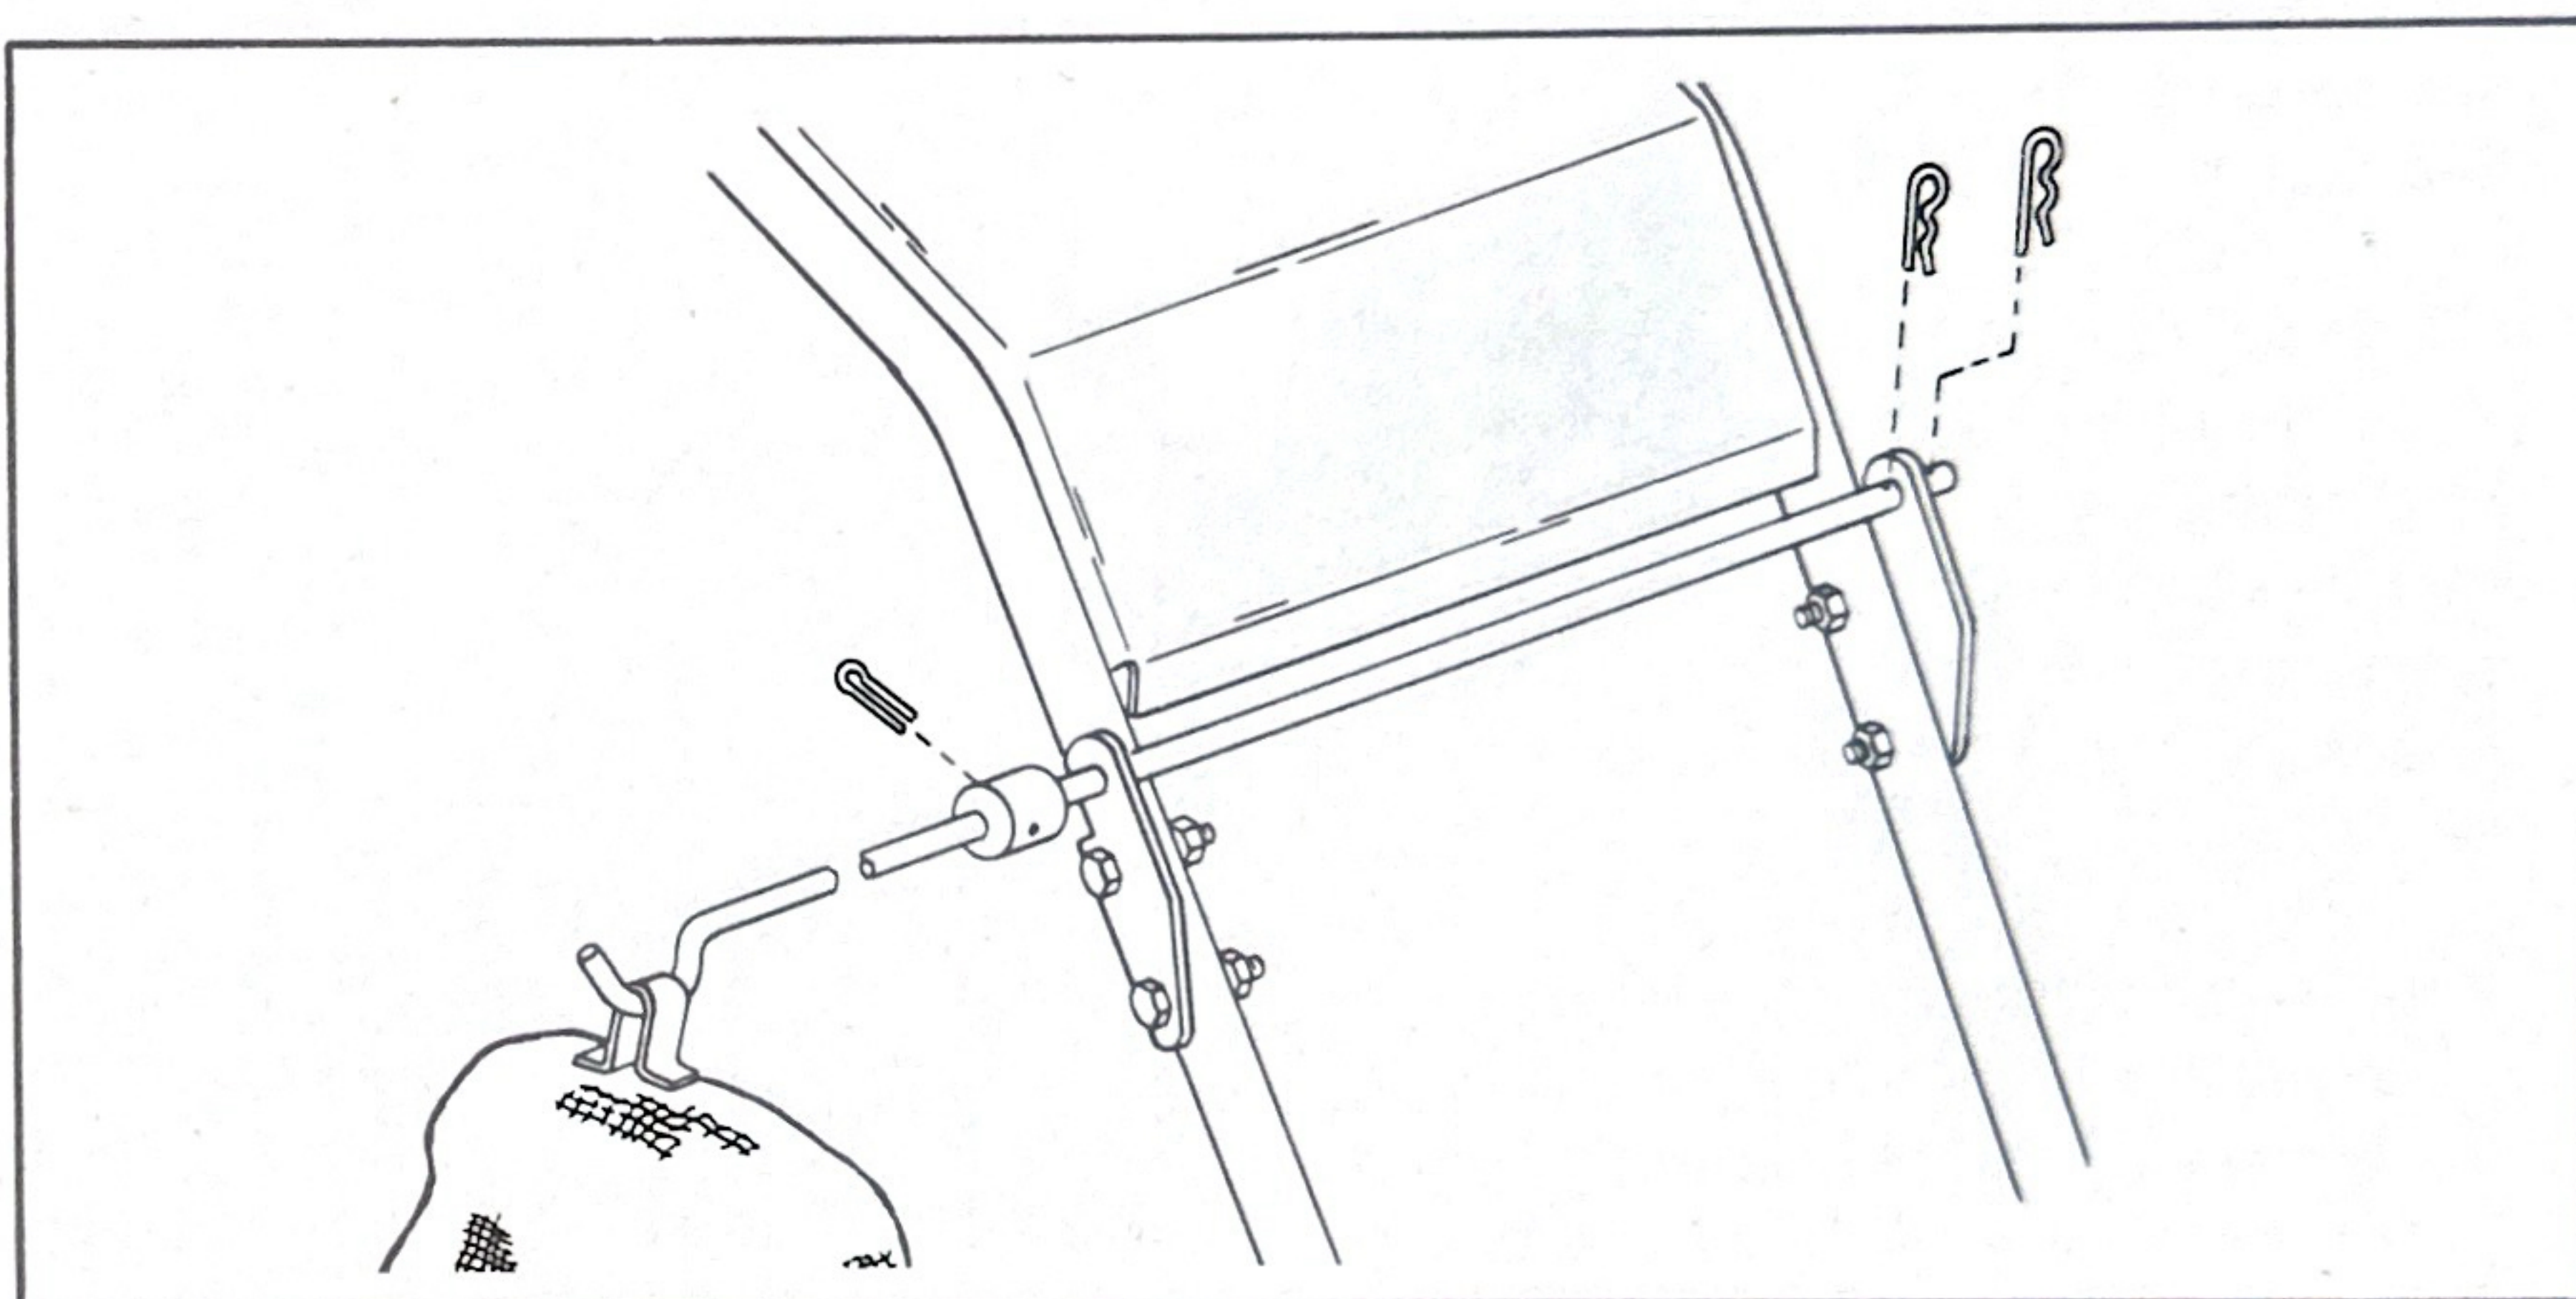

REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D.
1	1731424	Bag Hanger.	1
2	• 1100351	Cotter Pin, 1/8 x 1-1/4	1
3	1731983	Support Rod	1
4	1703011	Spring Cotter	2
5	1731423	Support Bracket	2
6	• 1110106	Lock Nut, 1/4-20	4
7	• 1100806	Capscrew, 1/4-20 x 1-1/4 . .	4
8	1731455	Exhaust Deflector, 1-5/8" Dia. (Model 6880). . .	1
9	1732215	Exhaust Deflector (Model 6882 B&S 4 H.P.)	1
10	1732216	Exhaust Deflector (Model 6882 B&S 3-1/2 H.P.) . . .	1
11	• 1731453	Screw	1
12	1894112	Chute	1
13	1731986	Grass Bag.	1

• Common Hardware - Purchase Locally
(Grade 5 where applicable).

