
Bolens[®]

**Tractor
14 HP & 16 HP**

Models 1667 (1600G)


Serial Numbers 0100101
thru 0499999

Models 1467 (1402G)

Serial Numbers 0100101
thru 0399999

Parts List

BOLENS TRACTORS

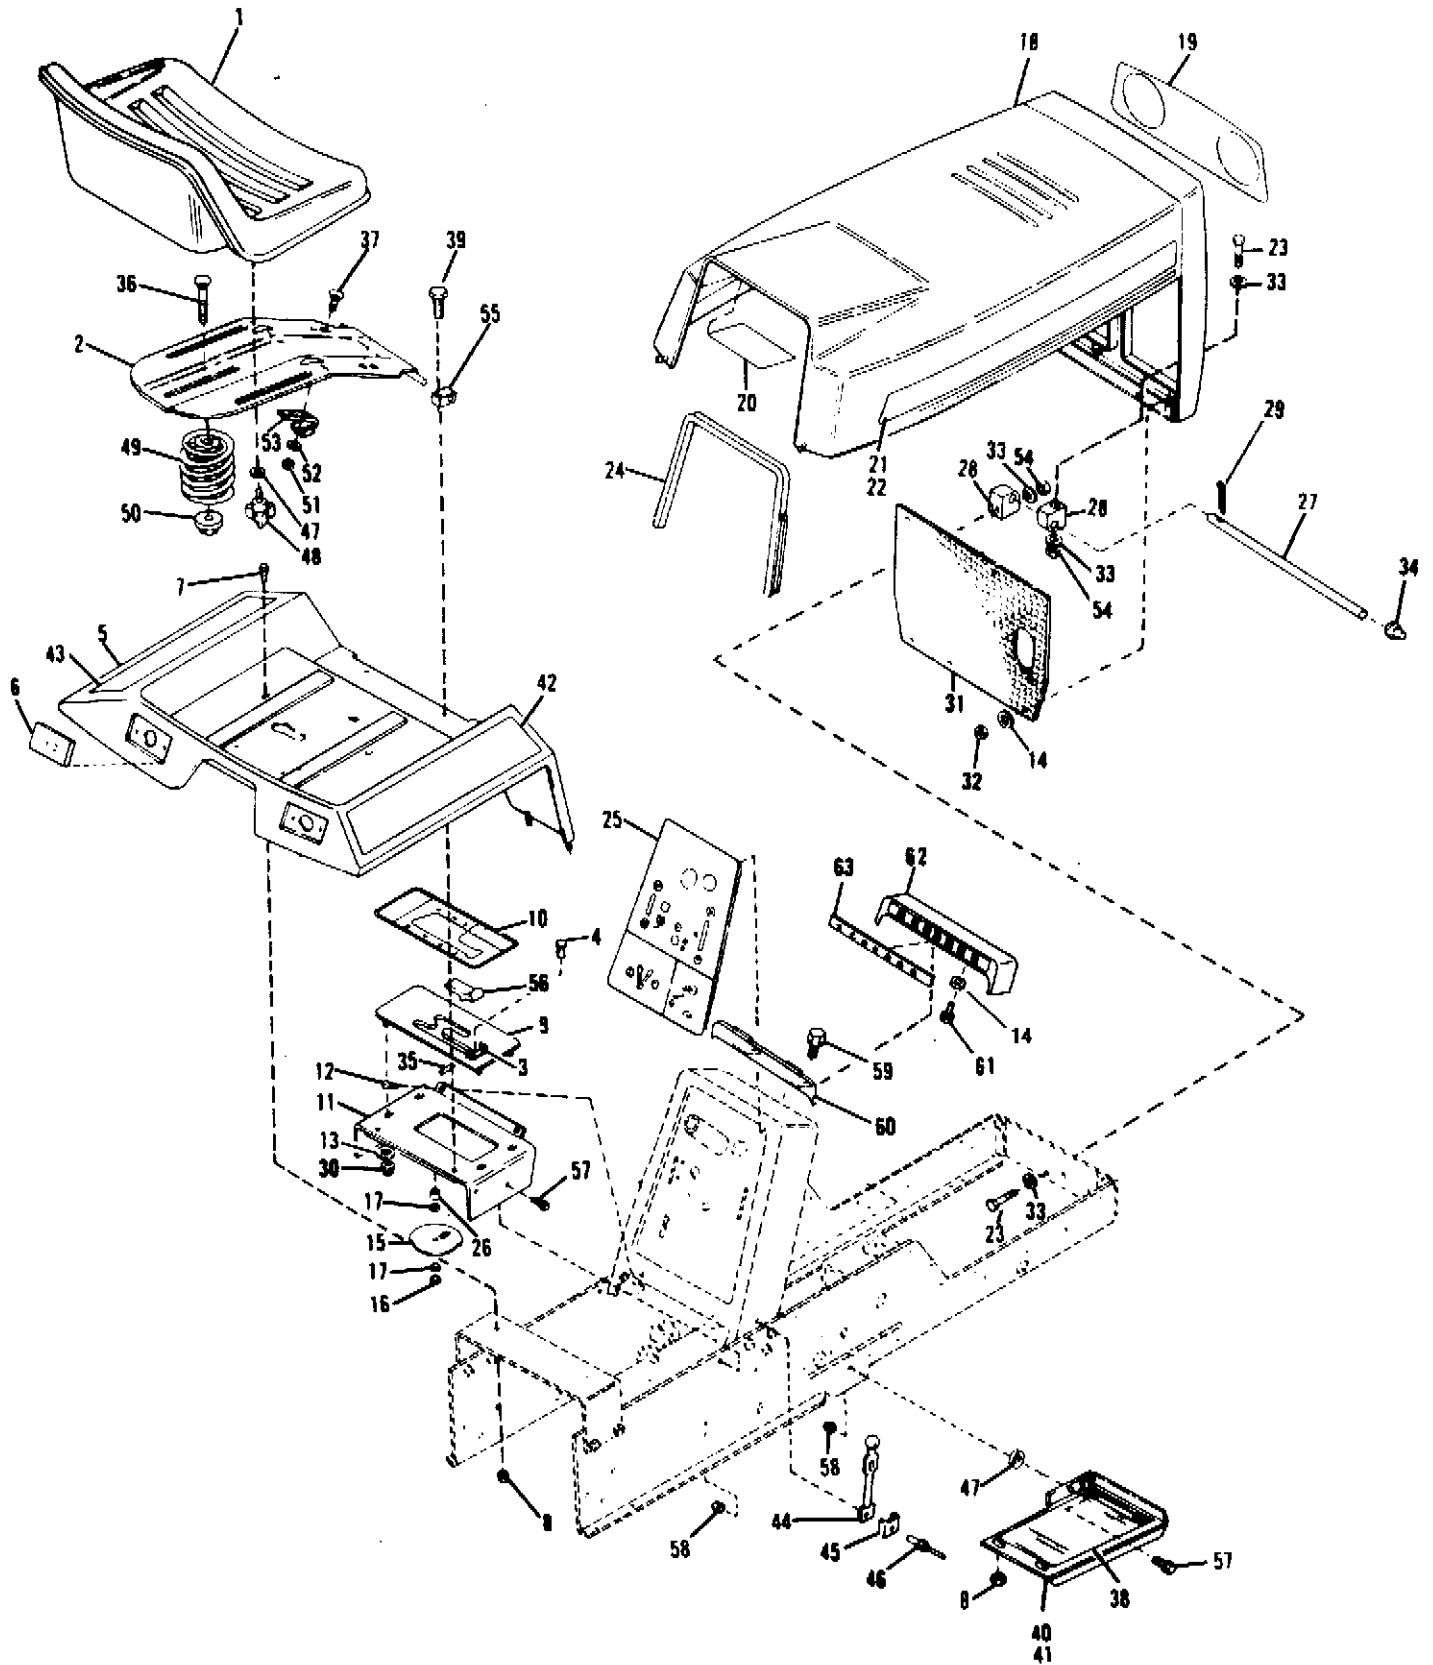

MODELS 1467 and 1667


REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D
1	1747835	Seat	1
2	1734115	Seat Support	1
3	1738815	Stop	1
4	1185878	Pop Rivet	2
5	1734691	Fender Assembly (1) (2).....	1
	1748574	Fender Assembly (3)(4)(5)(6)	1
6	1725615	Reflector	2
7 •	1186329	Screw, Hex Hd. Flange Lock, 5/16-18 x 3/4	2
8 •	1186391	Nut, Hex Flange Lock, 5/16- 18	6
9	1738819	Shift Plate Assembly	1
10	1736370	Decal, Instruction (1) (2)	1
	1750289	Instr. Decal (3) (4) (5) (6).....	1
11	1746323	Tunnel	1
12	1739688	Thd. Cutting Screw, 5/16 -18 x 5/8	2
13 •	1729492	Flat Washer 11/32.....	4
14 •	1185418	Flat Washer 7/32.....	4
15	1734084	Shift Shield.....	1
16	1734398	Top Lock Nut, 1/4-20	1
17 •	1107381	Washer, Flat, 1/4.....	2
18	1745797	Hood & Grille Assembly (1) (2)	1
	1749566	Hood & Grille Assembly (3) (4) (5) (6)	1
19	1746209	Decal, Grill (1) (2)	1
	1748707	Decal, Grill (3) (4) (5)	1
	1756360	Decal, Grill (6).....	1
20	1745681	Decal, Service Instr. (1) (2)	1
	1748716	Decal, Service Instr. (3) (4) (5)	1
21	1746211	Decal, Hood R.H. (1) (2).....	1
	1748708	Decal, Hood R.H. (3) (4) (5) ..	1
	1756361	Decal, Hood R.H. (6)	1
22	1746210	Decal, Hood L.H. (1) (2)	1
	1748709	Decal, Hood L.H. (3) (4) (5) ...	1
	1756362	Decal, Hood L.H. (6)	1
23 •	1100799	Screw, Hex Hd. 5/16-18 x 1-1/2.....	4
24	1726932	Trim	1
25	1735438	Decal, Instr. Panel (1) (2) (3)	1
	1751471	Decal, Instr. Panel (4) (5) (6)	1
26	1740874	Spacer	1
27	1736341	Pivot Rod	1
28	1736340	Pivot Block	4
29 •	1100362	Cotter Pin, 3/32 x 1/2	1
30 •	1186389	Nut, Hex Flange Lock, 1/4- 20	4

REF. NO.	PART NO.	DESCRIPTION	QTY REQ'D
31	1742100	Screen Grille	1
32	1736399	Flange Nut #10-32	4
33 •	1107382	Flat Washer 5/16.....	8
34	1728072	Push Nut	1
35	1185232	Drive Pin, 3/16 x 3/4	1
36 •	1186130	Carriage Bolt, 3/8-16 x 1- 1/4.....	1
37 •	1186067	Carriage Bolt, 1/4-20 x 1/2	1
38	1746139	Foot Rest Pad	2
39 •	1186332	Flange Screw, 5/16-18 x 1- 1/4.....	2
40	1736565	Foot Rest, L.H.	1
41	1736566	Foot Rest, R.H.	1
42	1746298	Fender Decal R.H. (1) (2).....	1
	1748715	Fender Decal R.H. (3)(5)	1
	1751744	Fender Decal R.H. (4)	1
	1756363	Fender Decal R.H. (6)	1
43	1746297	Fender Decal L.H. (1) (2)	1
	1748714	Fender Decal L.H. (3) (5)	1
	1751743	Fender Decal L.H. (4)	1
	1756364	Fender Decal L.H. (6)	1
44	1727127	Latch	2
45	1727126	Clip.....	1
46	1728772	Rivet, Pop, 3/16 x 1/2	2
47 •	1100256	Flat Washer, 3/8	4
48	1734269	Adjusting Knob	2
49	1733960	Spring	1
50	1735125	Special Nut.....	1
51 •	1186229	Hex Nut, 1/4-20.....	1
52 •	1100241	Lock Washer, 1/4	1
53	1734515	Actuator Bracket	1
54 •	1110107	Lock Nut, 5/16-18.....	4
55	1735265	Pivot Block	2
56	1738817	Shift Lever Stop	1
57 •	1186345	Fl. Screw 3/8-16 x 3/4	6
58 •	1186393	Fl. Nut 3/8-16.....	6
59	1724492	Fl. Hd. Thread Screw 1/4-20 x 1/2.....	2
60	1742092	Hood Support Assembly (1) (2)	1
61	1741454	Self Thd. Screw 10-16 x 1/2 (3) (4) (5) (6)	2
62	1748080	Light Cluster Housing (3) (4) (5) (6)	1
63	1748081	Lense (3) (4) (5) (6)	1
	1738223	Spray Paint (White)	
	1736796	Spray Paint (Dark Green)	

• Common Hardware-Purchase Locally (Grade 5 where applicable)

Model 1667 (1) Serial Numbers 0100101 thru 0199999
 (2) Serial Numbers 0200101 thru 0299999
 (3) Serial Numbers 0300101 thru 0399999
 (5) Serial Numbers 0400101 thru 0499999
 Model 1467 (4) Serial Numbers 0100101 thru 0299999
 (6) Serial Numbers 0300101 thru 0399999

BOLENS TRACTORS

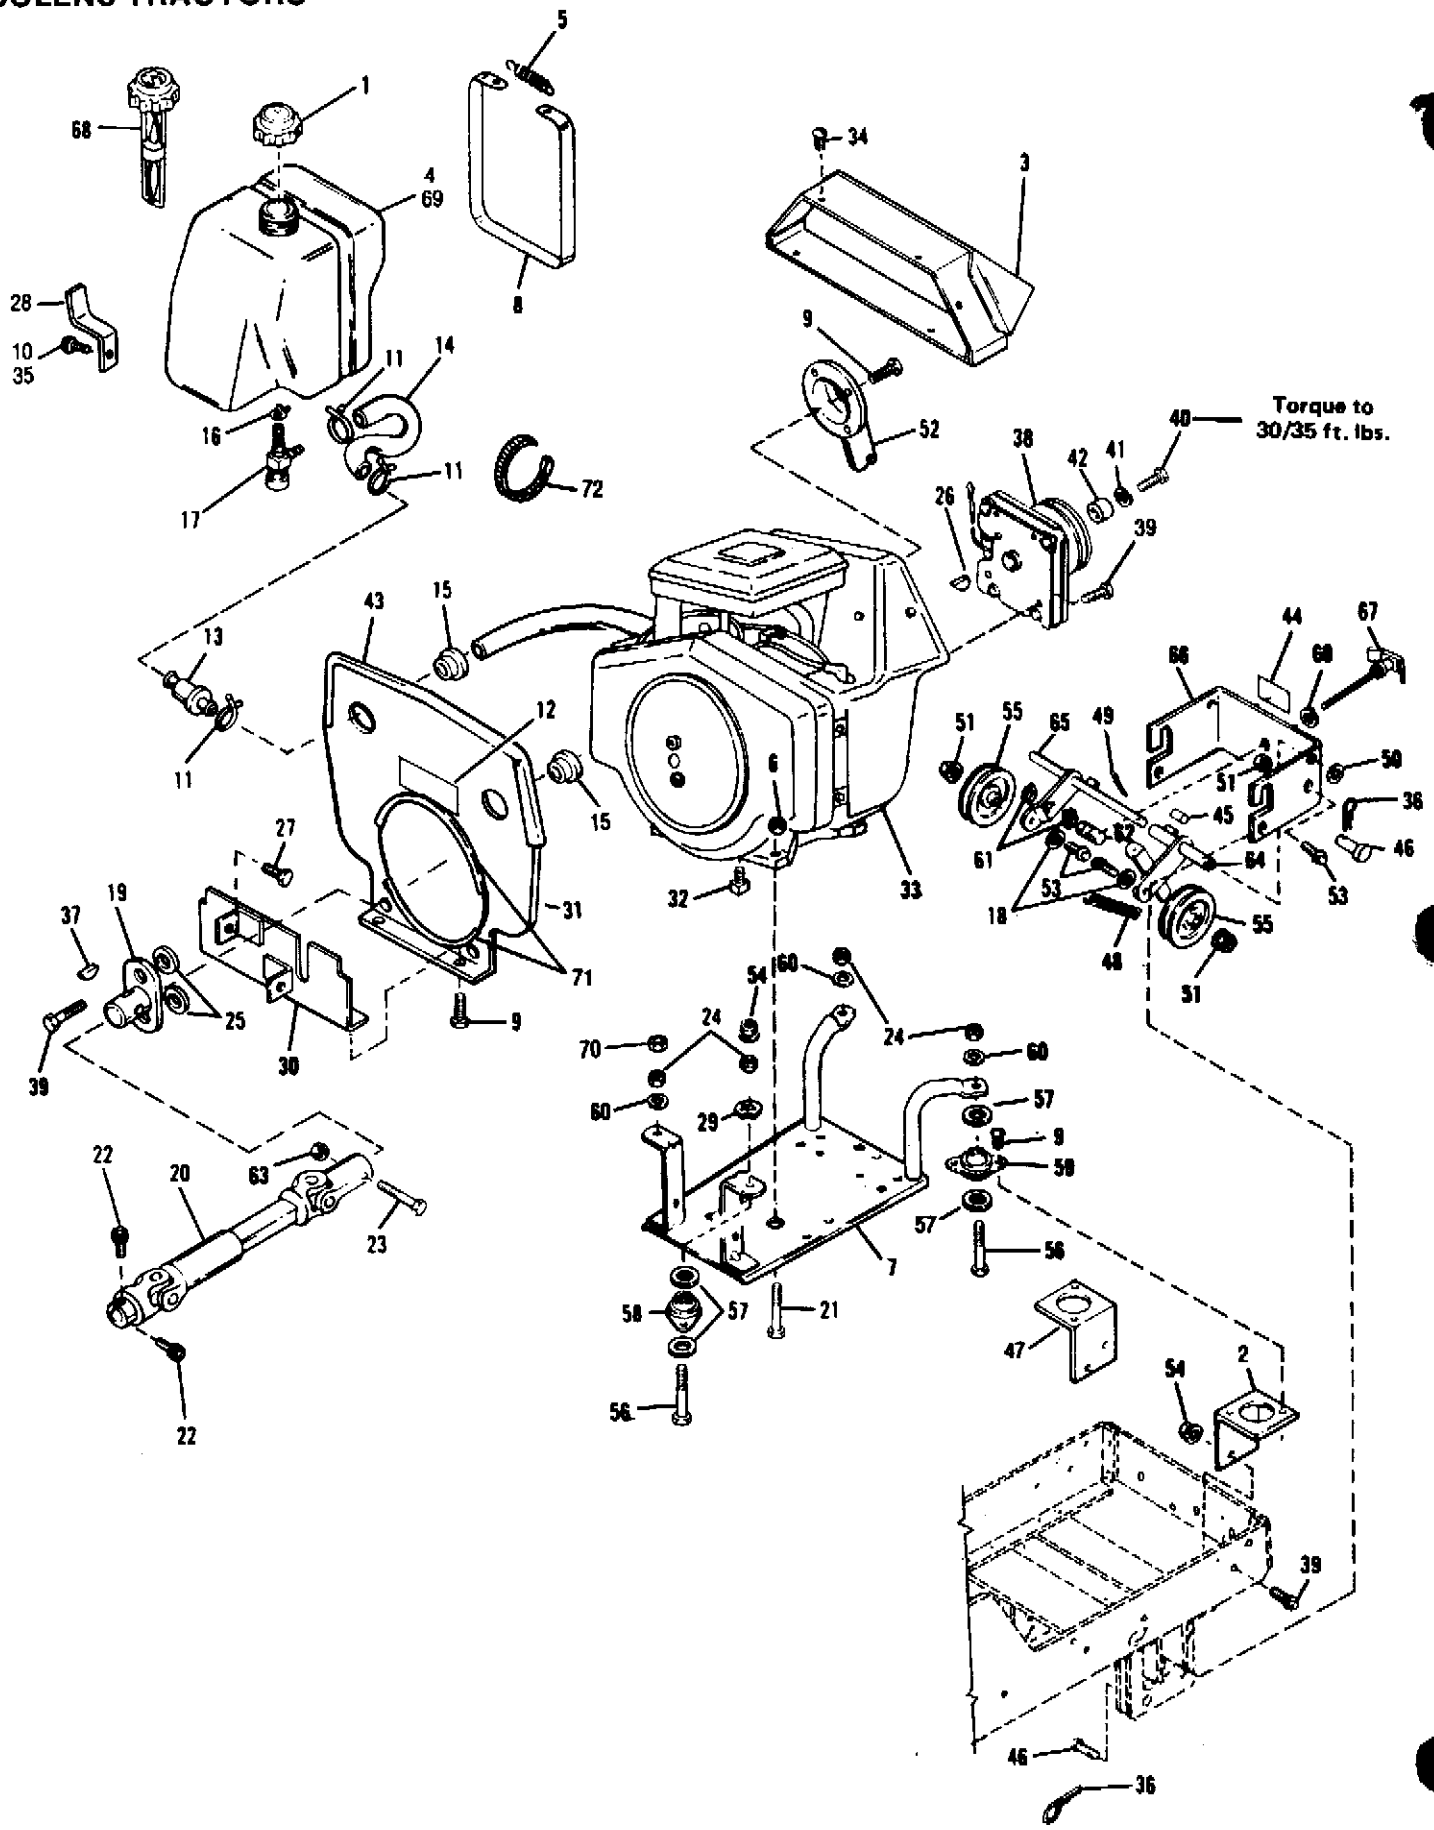

MODELS 1467 and 1667


REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D
1	1725868	Gas Cap. (1) (2)	1
2	1741653	Eng. Support (RH front-LH-rear)	2
3	1741664	Heat Shield Deflector	1
4	1735065	Tank, Fuel (Includes Ref. No. 1) (1) (2)	1
5	1806648	Spring, Extension	1
6	• 1186391	Flange Nut, 5/16-18	4
7	1741667	Engine Support (1) thru (5) ...	1
	1756470	Engine Support (6)	1
8	1727918	Strap	1
9	• 1185712	Screw, Hex. Hd. Thd. Cutting No. 10-24 x 1/2	14
10	• 1186310	Fl. Screw 1/4-20 x 3/4	1
11	1750687	Clamp, Hose	3
12	1736298	Hot Surface Decal (1) (2) (3)	1
13	1727491	Filter Fuel	1
14	1724708	Line, Fuel	1
15	1729587	Bushing, Snap	2
16	1723474	Clamp, Hose	1
17	1718029	Valve, Shut Off	1
18	• 1100256	Flat Washer 3/8	2
19	1741654	Engine Extension	1
20	1741575	Drive Shaft Assembly	1
21	• 1186332	Flange Lock Screw 5/16-18 x 1-1/4	4
22	1185596	Sq. Hd. Set Screw	2
23	• 1100807	Hex Screw 1/4-20 x 2	1
24	• 1733398	Nut, Hex. Lock, 3/8-16	4
25	• 1107383	Washer, Flat, 3/8	2
26	1108842	Sq. Key 1/4 x 3/4	1
27	• 1186327	Flange screw 5/16-18 x 1/2 ...	2
28	1757213	Retainer, Tank (6)	1
29	1185715	Lock Washer (Pyramidal) 3/8	1
30	1742344	Shield, Grass	1
31	1741669	Shield, Heat	1
32	1105620	Sq. Plug 1/4-18 NPT	1
33	*	Engine, 16 HP, Briggs & Stratton 402437-0700 (3) (4)	1
	*	Engine, 14 HP, Briggs & Stratton 400437-0122 (4)	1
	*	Engine, 16 HP, Briggs & Stratton 402437-0666 (1) (2)	1
	*	Engine, 14 HP, Briggs & Stratton 400447-1206 (6)	1
	*	Engine, 14 HP, Briggs & Stratton 400437-1275 (5)	1

REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D
34	1724492	Flange Screw, Thd. Form 1/4-20 x 1/2	6
35	• 1186389	Fl. Nut 1/4-20	1
36	1723478	Hitch Pin	4
37	• 1100276	Key, Woodruff, 1/4-7/8	1
38	1741572	Clutch/Brake Elect.	1
39	• 1186345	Screw, Whiz Lock 3/8-16 x 3/4	12
40	• 1100009	Screw, Hex. Hd. 3/8-24 x 1 ...	1
41	• 1100243	Washer, Lock 3/8	1
42	1734790	Clutch Retainer	1
43	1740344	Heat Shield Gasket	1
44	1736368	Decal, Belt Adjustment	1
45	1734935	Indicator Cap.	2
46	1708125	Pin, Clevis	4
47	1733134	Support, Engine (L.H. Front R.H. Rear)	2
48	1726661	Spring Extension	1
49	• 1100350	Cotter pin 1/8 x 1	2
50	• 1107386	Washer, Flat 5/8	2
51	• 1186393	Nut, Flange 3/8-16	3
52	1741964	Exhaust Assembly	1
53	• 1186350	Screw, Flange Lock 3/8-16 x 1-3/4	3
54	• 1186393	Nut, Flange Lock 3/8-16	9
55	1726660	Pulley, Idler	2
56	• 1100049	Screw, Hex Hd. Cap 3/8-16 x 2-1/4	4
57	• 1186047	Washer, Flat 3/8 ID x 1-3/8 OD	8
58	1726510	Mount, Rear	2
59	1724896	Mount, Front	2
60	• 1107383	Washer, Flat 3/8	4
61	1113527	Ring, Retaining 3/4	2
62	1742723	Pivot	1
63	• 1734398	Nut, Lock 1/4-20	1
64	1738569	Idler Arm Assembly	1
65	1742725	Idler Arm Assembly	1
66	1736481	Support Idler	1
67	1735112	Knob, Adjusting	1
68	1748758	Gas Cap (3) (4) (6)	1
69	1735065	Tank, Fuel (Includes Ref. No. 68) (3) (4) (6)	1
70	1185506	Nut, Jam 5/16 (5) (6)	1
71	1755364	Heat Shield Seal (5) (6)	2
72	1735531	Cable Tie (5) (6)	1

• Common Hardware-Purchase Locally. (Grade 5 where applicable)

* Order Parts from your local Briggs & Stratton engine dealer

BOLENS TRACTORS

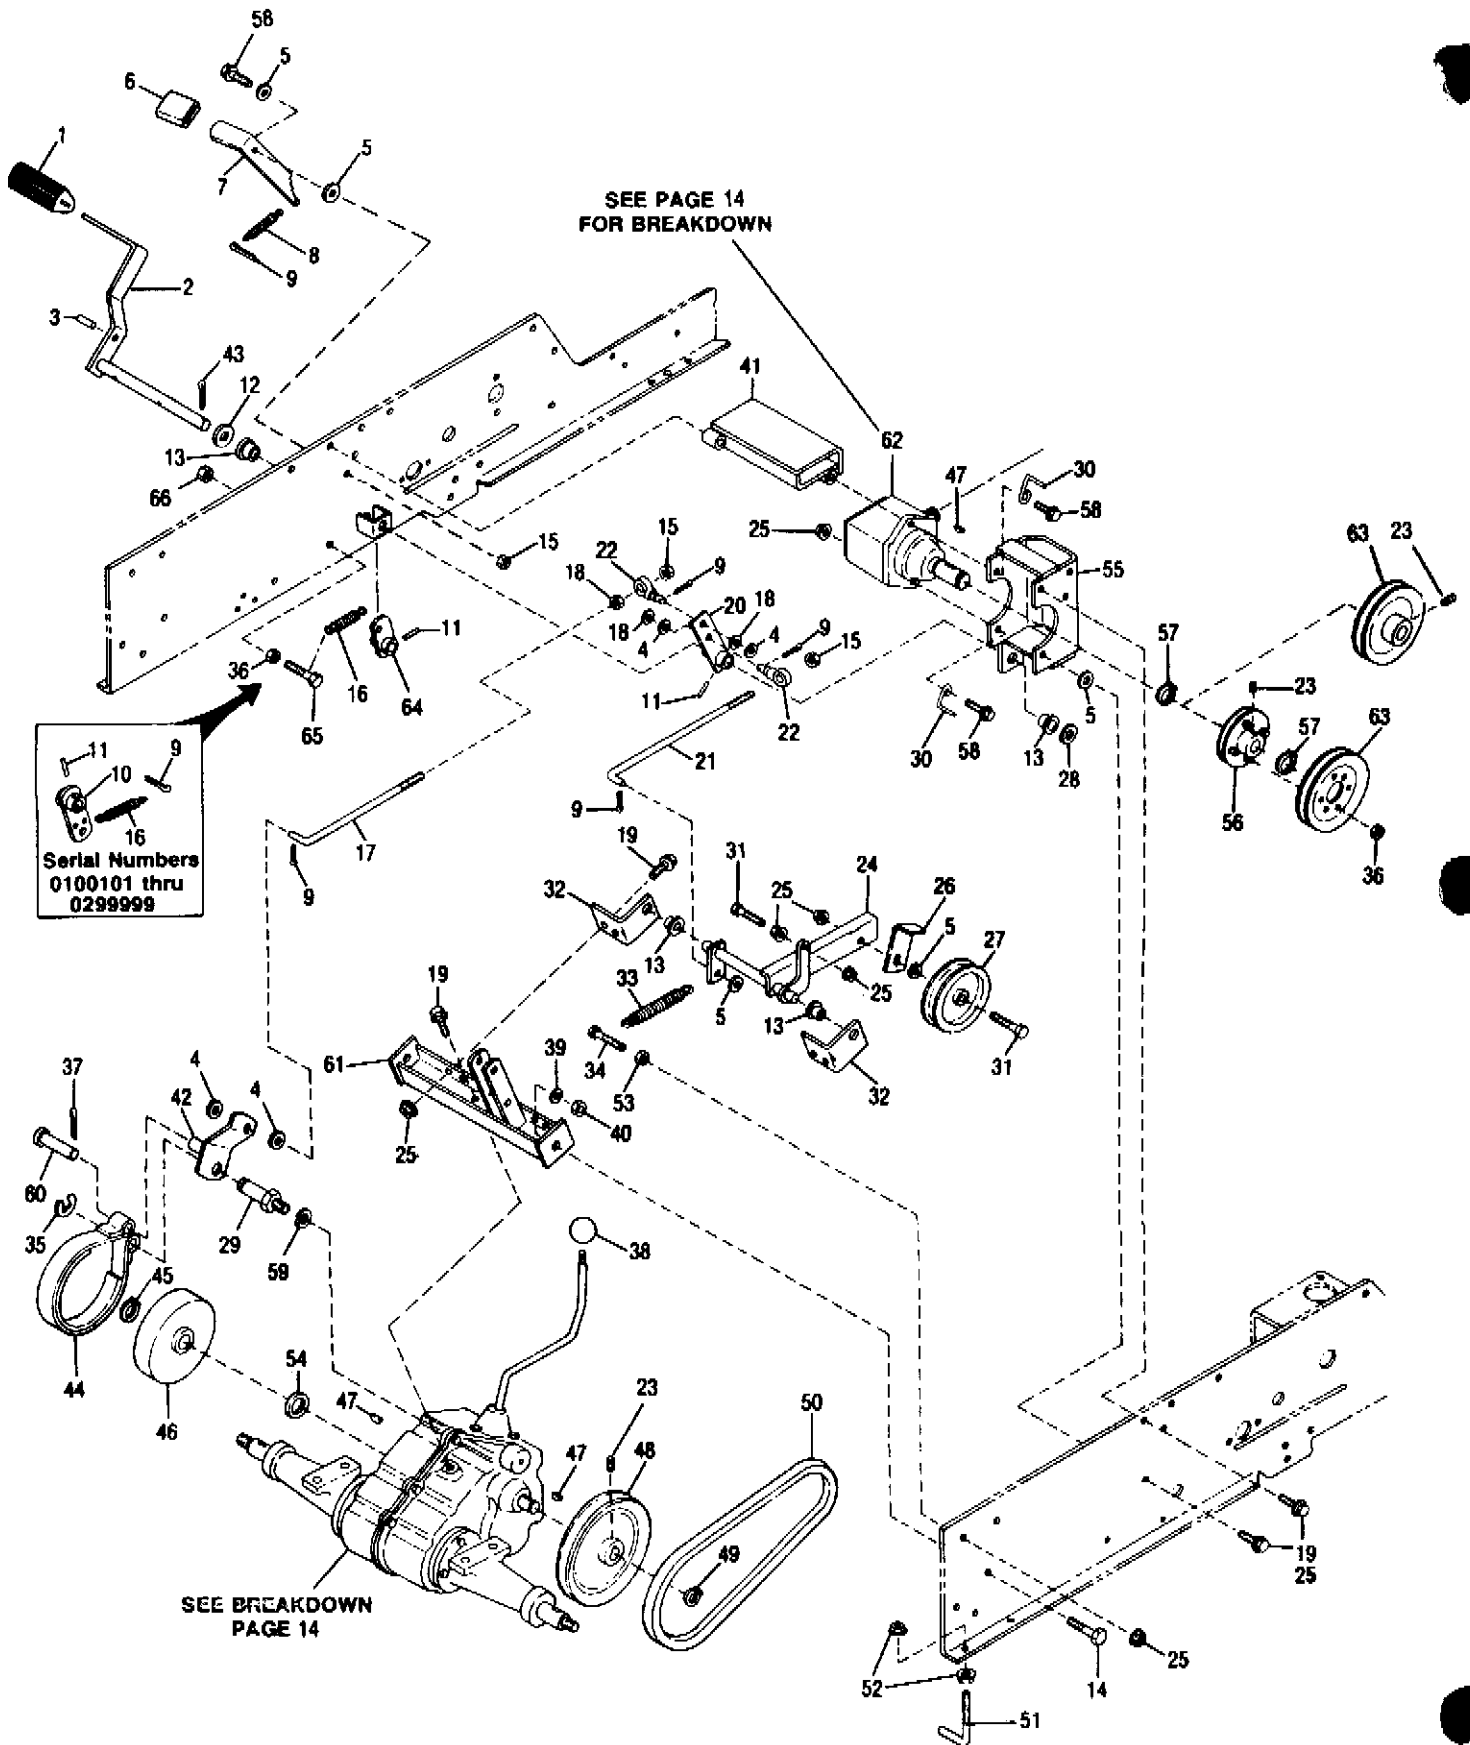

MODELS 1467 and 1667


REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D
1	1728694	Rubber Foot Rest	1
2	1733771	L.H. Pedal Ass'y	1
3	1120209	Roll Pin, 3/16 x 3/4	1
4	• 1107382	Flat Washer, 5/16 (3) (4) (5) ...	1
5	• 1107383	Flat Washer, 3/8	10
6	1728696	Handle Grip (1) thru (4)	1
	1734553	Handle Grip (5)	1
7	1729683	Brake Lock	1
8	1726640	Spring	1
9	• 1100346	Cotter Pin, 3/32 x 3/4	6
10	1746196	Control Arm Ass'y (1) (2)	1
11	1732147	Drive Pin	2
12	1727888	Spacer	1
13	1185802	Bushing	4
14	• 1100064	Screw, Hex, 1/2-13 x 1-1/2	2
15	1733398	Top Lock Nut, 3/8-16	4
16	1720612	Spring	1
17	1740859	Brake Rod (1) (2)	1
	1744813	Brake Rod (3) (4) (5)	1
18	1705108	Flat Washer (2) (3) (4) (5)	A/R
19	• 1186345	Flange Screw, 3/8-16 x 3/4 ...	12
20	1733774	Control Arm Ass'y	1
21	1735570	Clutch Rod	1
22	1747507	Pivot Block	2
23	1182554	Set Screw, 5/16-18 x 5/16	2
24	1739746	Idler Shaft Ass'y	1
25	• 1186393	Flange Nut, 3/8-16	13
26	1734835	Belt Guide	1
27	1728810	Idler	1
28	• 1107386	Flat Washer, 5/8	1
29	1739889	Should Bolt	1
30	1730138	Belt Guide	2
31	• 1100047	Hex Screw, 3/8-16 x 1-1/2	2
32	1733776	Idler Arm Support	2
33	1706822	Spring	1
34	• 1100062	Hex Screw, 3/8-16 x 2-1/2	1
35	1177567	Retaining Ring	1

• Common Hardware - Purchase Locally

REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D
36	• 1734398	Lock Nut, 1/4-20	4
37	• 1100351	Cotter Pin 1/8 x 1-1/4	1
38	1733871	Knob (1) thru (4)	1
	1756715	Knob (5)	1
39	• 1100245	Lock Washer, 1/2	2
40	• 1186233	Hex Nut, 1/2-13	2
41	1742410	Frame Support	1
42	1733761	Brake Arm Ass'y (1) (2)	1
	1744837	Brake Arm Ass'y (3) (4) (5) ...	1
43	• 1100350	Cotter Pin, 1/8 x 1	1
44	1733735	Brake Band Ass'y	1
45	1118554	Retaining Ring, 1"	1
46	1734741	Brake Drum Ass'y	1
47	1104436	Key, Woodruff, 3/16 x 3/4	3
48	1728308	Pulley (1)	1
	1744799	Pulley (2) (3) (4) (5)	1
49	1113527	Retaining Ring, 3/4	1
50	1729716	V Belt (H.B. 46.6") (1)	1
	1747232	V Belt (H.A. 44.3")(2)(3)(4)(5)	1
51	1728286	Belt Guide	2
52	• 1186391	Flange Nut, 5/16-18	4
53	• 1186259	Nut, Jam, 3/8-16	1
54	1186457	Thrust Washer	1
55	1733739	Support, Gear Box	1
56	1734904	Hub Ass'y (1)	1
57	1180025	Retaining Ring, 7/8	2
58	• 1186348	Screw, Flange, 3/8-16 x 1-1/4	3
59	• 1100243	Lock Washer, 3/8	1
60	1724639	Clevis Pin	1
61	1744800	Transaxle Support	1
62	1737757	Gear Box Ass'y	1
63	1734905	Pulley (1)	1
	1744798	Pulley (2) (3) (4) (5)	1
64	1748584	Brake Arm Ass'y (3) (4) (5) ...	1
65	1186312	Flange Lock Screw 1/4-20 x 1	
		(3) (4) (5)	1
66	• 1186389	FI Lock Nut 1/4-20 (3) (4) (5)	1

Model 1667 (1) Serial Numbers 0100101 thru 0199999
 (2) Serial Numbers 0200101 thru 0299999
 (3) Serial Numbers 0300101 thru 0399999
 (4) Serial Numbers 0400101 thru 0499999
 Model 1467 (4) Serial Numbers 0100101 thru 0299999
 (5) Serial Numbers 0300101 thru 0399999

BOLENS TRACTORS

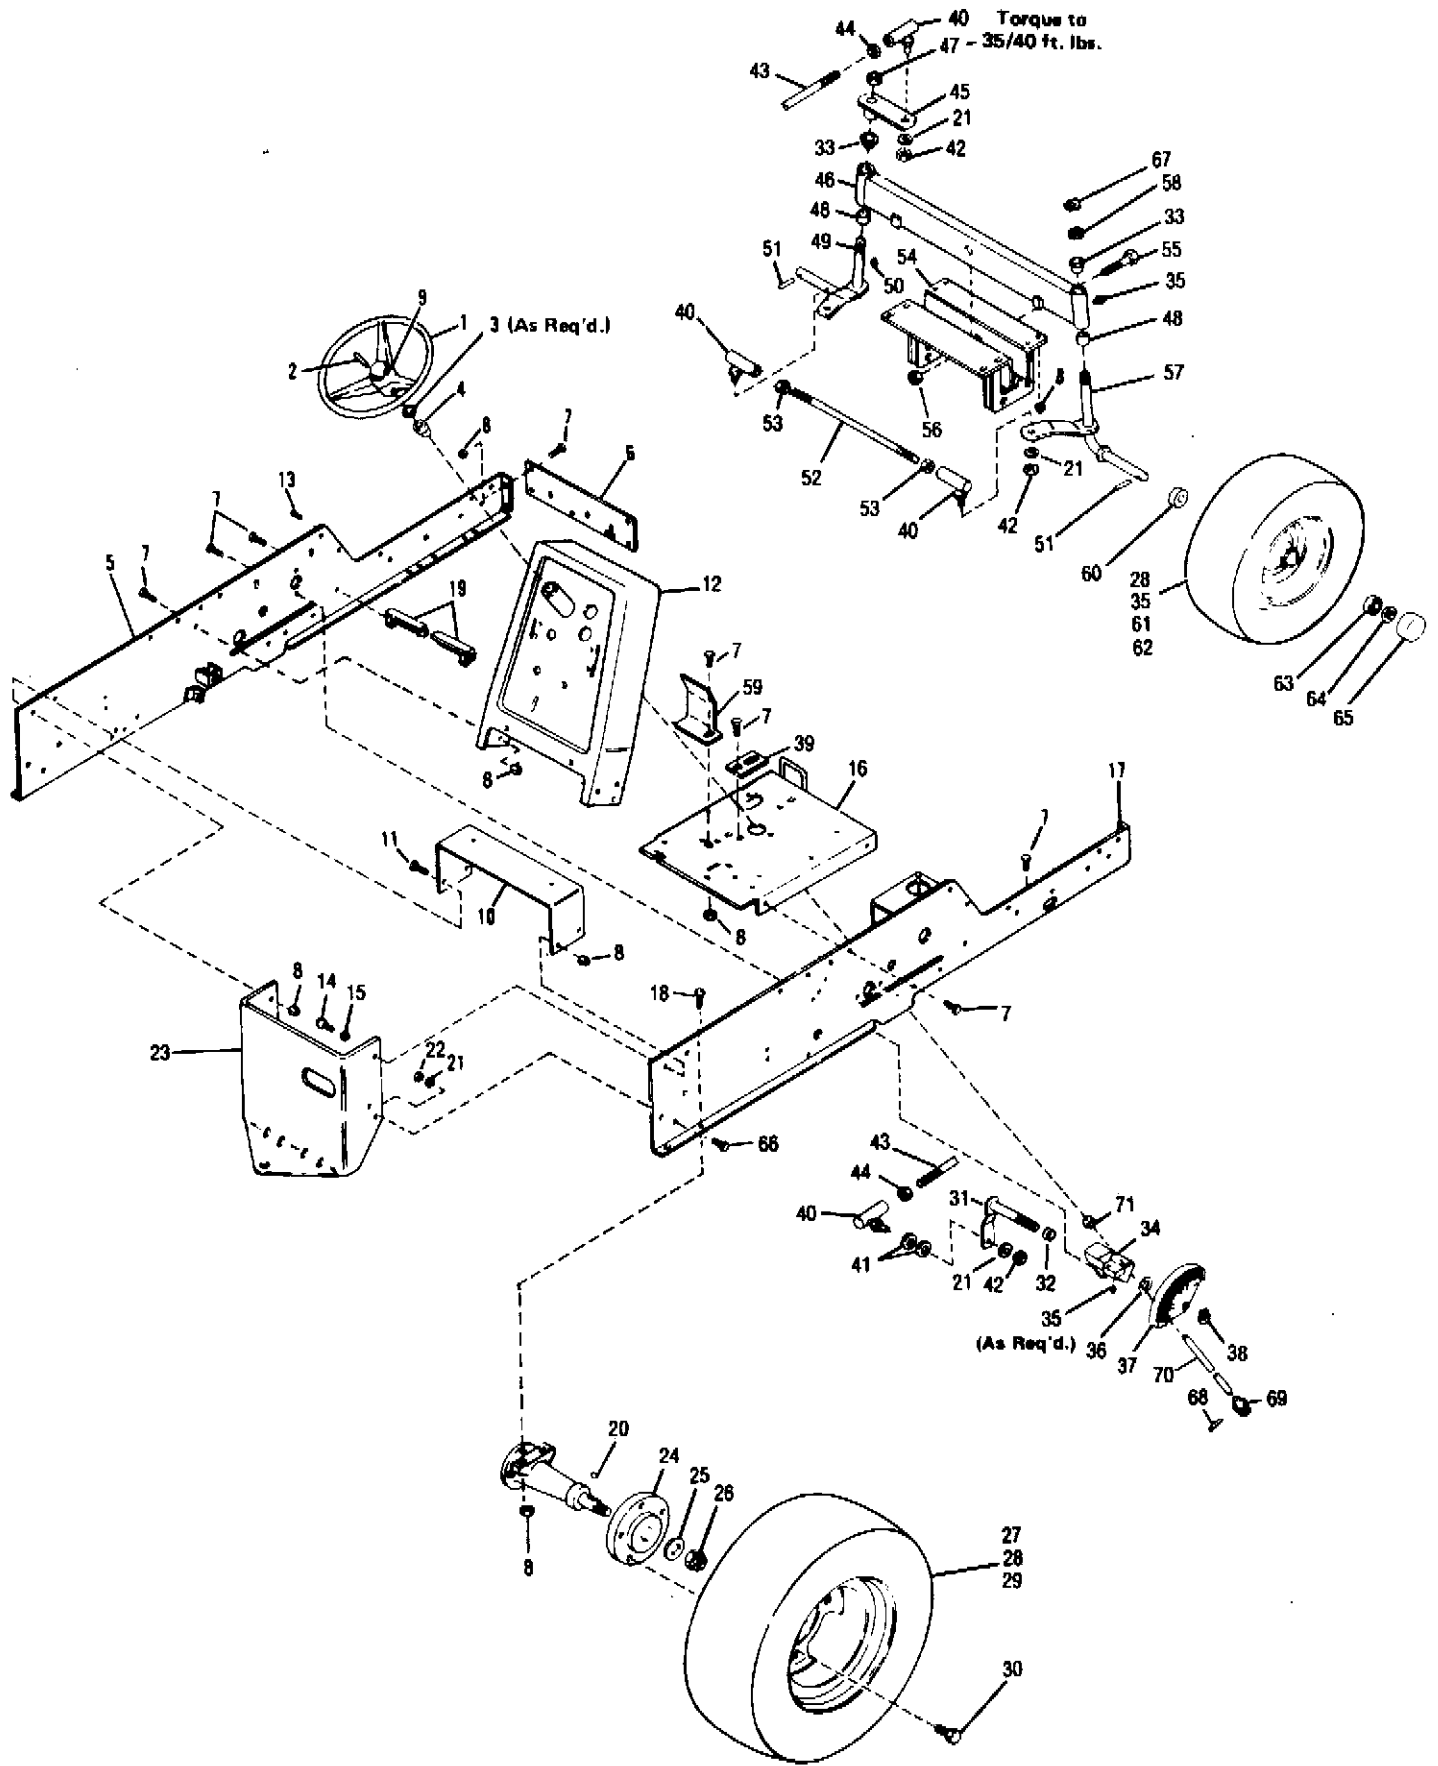

MODEL 1467 and 1667

REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D
1	1736907	Wheel, Steering (1) (2)	1
	1747804	Wheel, Steering (3) (4) (5)	1
2	1185279	Pin, Roll	1
3	1708012	Washer, Roll	1
4	1723994	Bearing, Steering	1
5	1739090	Frame Ass'y L.H. (1) (2)	1
	1748777	Frame Ass'y L.H. (3) (4) (5)	1
6	1742085	Brace	1
7	• 1186345	Screw, Hex Hd. Flange Lock, 3/8-16 x 3/4	23
8	• 1186393	Nut, Flange Lock, 3/8-16	23
9	1746382	Cap, Steering Wheel (2) (3) (4) (5)	1
10	1734555	Support, Seat	1
11	• 1186347	Screw, Hex Hd. Flange Lock, 3/8-16 x 1	3
12	1742099	Panel Ass'y, Instr. (1) (2)	1
	1748704	Panel Ass'y, Instr. (3)(4)(5)	1
13	• 1186348	Flange Screw, 3/8-16 x 1	1
14	• 1100062	Screw, Hex, 3/8-16 (REF)	1
15	• 1186259	Nut, Jam 3/8-16 (REF)	1
16	1745923	Support Assembly, Battery & Gas Tank (1) (2)	1
	1749849	Support Assembly, Battery & Gas Tank (3)	1
	1749657	Support Assembly, Battery & Gas Tank (4)	1
	1756443	Support Assembly, Battery & Gas Tank (5)	1
17	1739089	Frame Assembly, R.H. (1) (2)	1
	1747579	Frame Assembly, R.H. (3) (4) (5)	1
18	• 1186349	Flange Screw, 3/8-16 x 1-1/2	4
19	1735572	Frame Support	1
20	1100281	Woodruff Key	2
21	• 1100245	Lock Nut, 1/2-13	4
22	• 1186233	Nut, Hex, 1/2-13	4
23	1744808	Rear Panel	1
24	1726679	Hub, Wheel	2
25	1708599	Spacer	2
26	1120390	Nut, Hex, 3/4-10	2
27	1724718	Wheel Assembly	2
28	1718086	Valve	4
29	1733081	Tire, 23 x 8.50	2
30	0101085	Bolt, Hub	10


REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D
31	1731782	Arm Ass'y, Steering (1) (2) (3)	1
	1749895	Arm Ass'y, Steering (4) (5)	1
32	1733707	Spacer, Tubular	1
33	1185035	Bushing, Flange	2
34	1740753	Steering Support	1
35	1185976	Fitting, Grease Thd. Forming	5
36	1733442	Washer, Shim	AR
37	1740096	Gear, Steering	1
38	1185649	Ring, Retaining	1
39	1746622	Cover	1
40	1713361	Joint, Ball	4
41	1738490	Spacer	2
42	• 1110152	Nut, Hex Lock, 1/2-20	4
43	1726496	Rod, Steering	1
44	• 1186247	Nut, Hex Jam, 1/2-20	2
45	1731689	Arm Assembly, Steering	1
46	1743946	Axle Ass'y., Front	1
47	• 1120390	Nut, Hex Lock, 3/4-10	1
48	1185319	Bearing, Bronze	2
49	1736206	Spindle Ass'y., L.H. Wheel	1
50	1110547	Key, Woodruff, 3/16 x 1-1/8	1
51	1186460	Pin	2
52	1726495	Rod, Tie	1
53	• 1186247	Nut, Hex, 1/2-20	2
54	1738561	Support Ass'y., Axle	1
55	1732078	Screw, Hex Hd. Cap, 5/8-11 (Special)	1
56	• 1110112	Nut, Hex, 5/8-11	1
57	1739738	Spindle Ass'y., R.H. Wheel	1
58	1708550	Washer, Flat 3/4	1
59	1746621	Tank Clamp (1) (2) (3)	1
60	1185616	Bearing, Ball With Seal	2
61	1715789	Wheel Assembly	2
62	1732957	Tire, 16 x 6.50-8 (1) (2)	2
	1732927	Tire, 16 x 6.50-8 (3) (4) (5)	2
63	1185615	Bearing Ball	2
64	0121898	Washer	4
65	1744444	Cap, Dust, 1-5/8	2
66	• 1100064	Screw, Hex, 1/2-13 x 1-1/2	4
67	1113527	Retaining Ring	1
68	1738413	Roll Pin	1
69	1736159	Bevel Pinion Gear	1
70	1738414	Steering Shaft	1
71	1185846	Flange Bushing	1

• Common Hardware-Purchase Locally (Grade 5 where applicable)

Model 1667 (1) Serial Numbers 0100101 thru 0199999
 (2) Serial Numbers 0200101 thru 0299999
 (3) Serial Numbers 0300101 thru 0399999
 (4) Serial Numbers 0400101 thru 0499999
 Model 1467 (4) Serial Numbers 0100101 thru 0299999
 (5) Serial Numbers 0300101 thru 0399999

WIRING DIAGRAM

Model 1667 S/N 0100101 thru 0399999

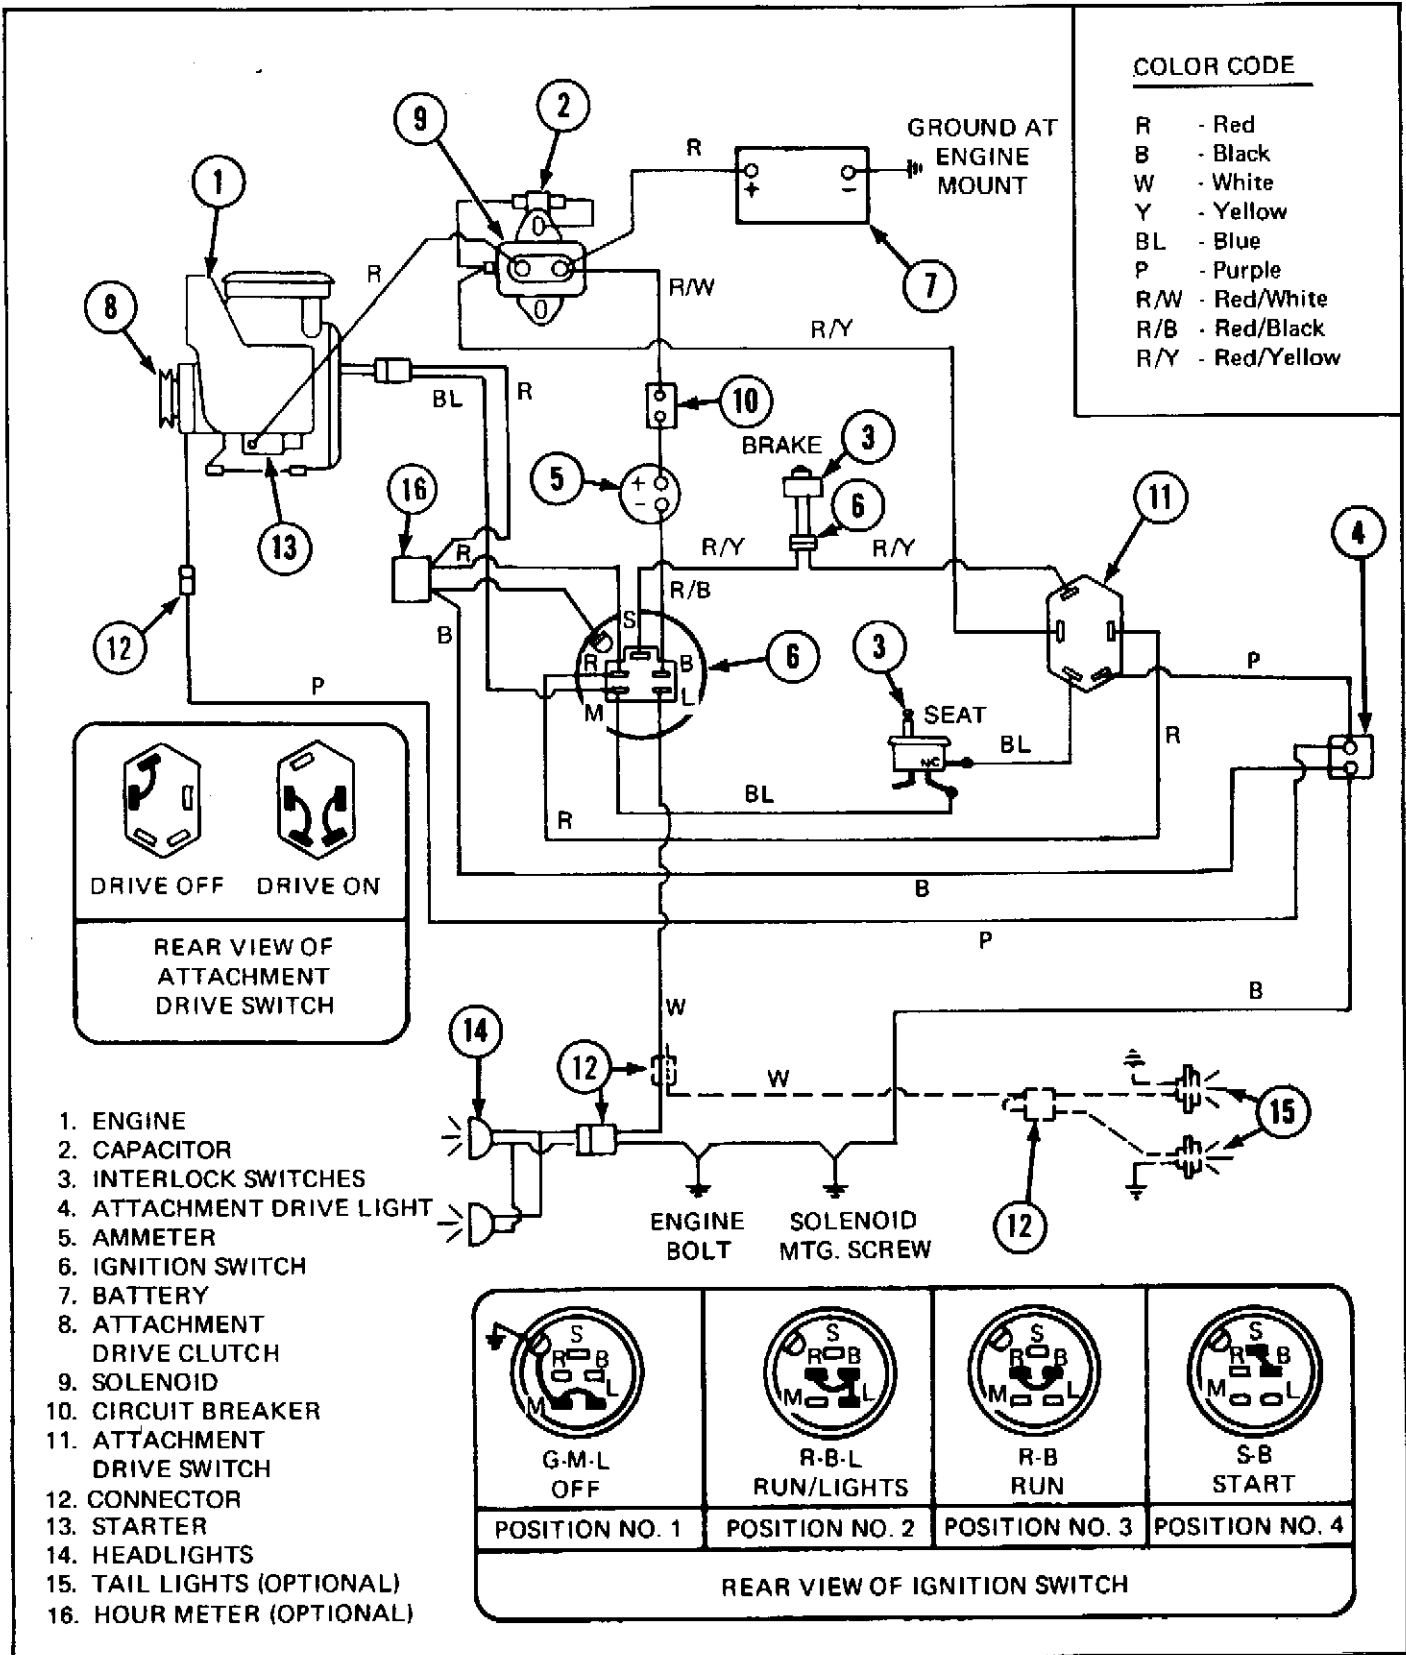


WIRING DIAGRAM

Model 1467 S/N 0100101 thru 0399999



1667 S/N 0400101 thru 0499999

COLOR CODE


R - Red	P - Purple
B - Black	R/W - Red/White
W - White	R/B - Red/Black
Y - Yellow	R/Y - Red/Yellow
BL - Blue	

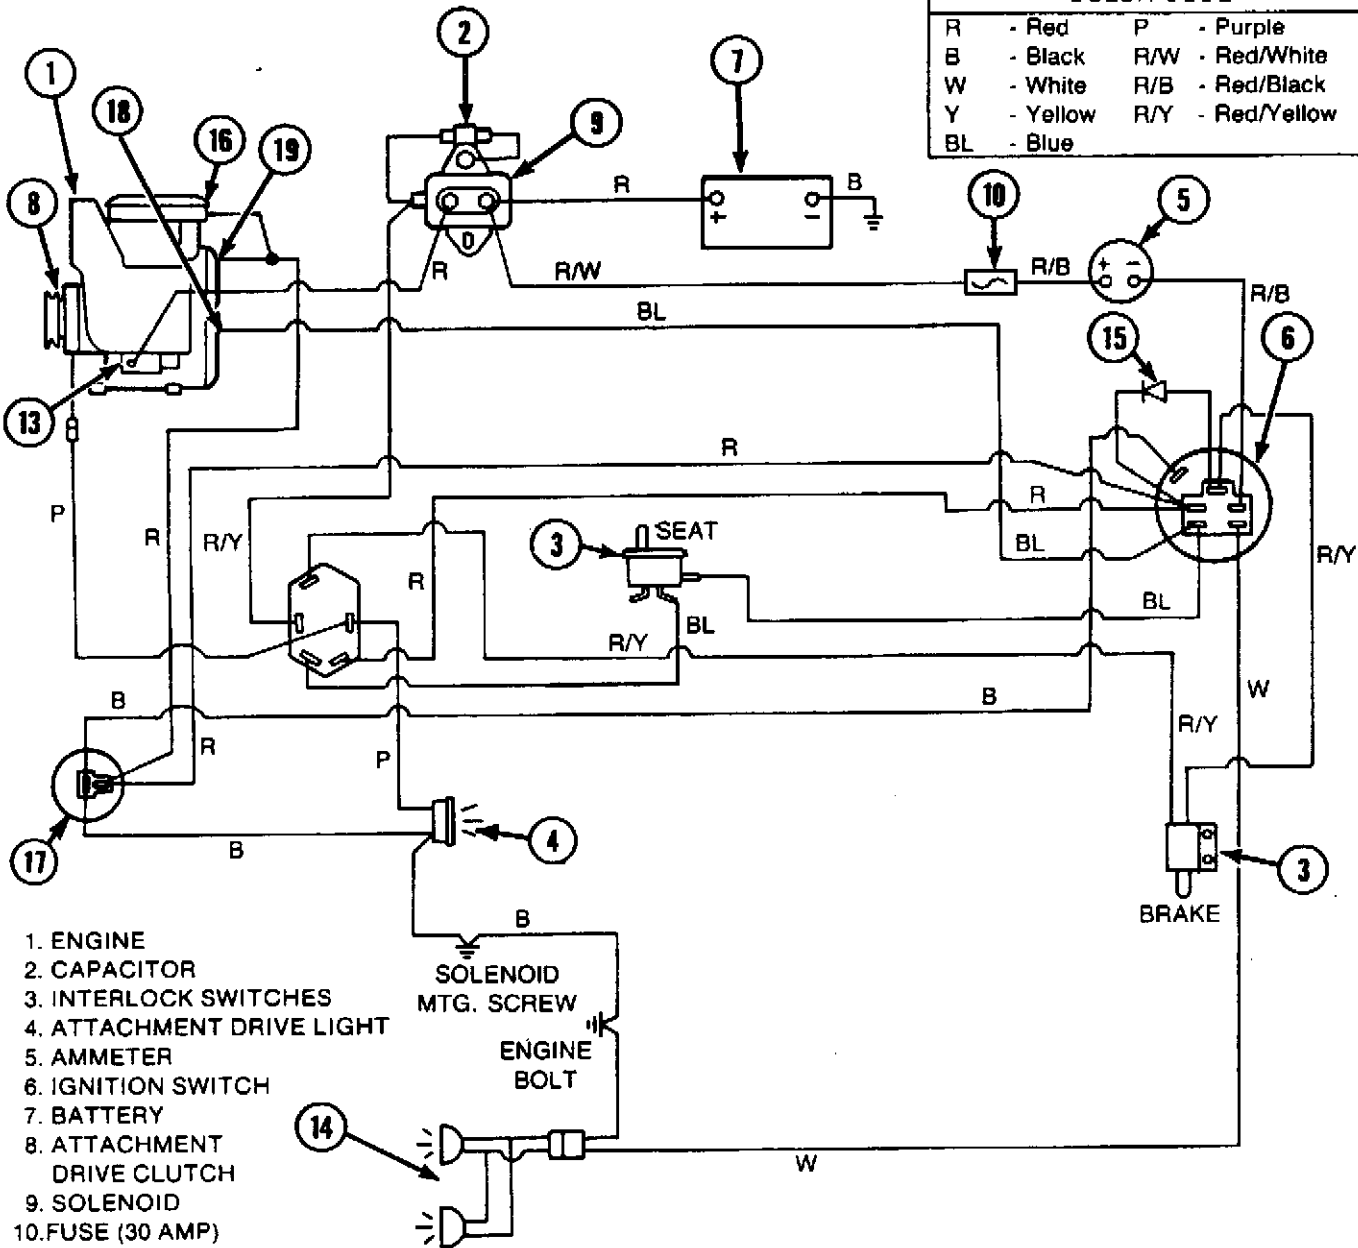

1. ENGINE
2. CAPACITOR
3. INTERLOCK SWITCHES
4. ATTACHMENT DRIVE LIGHT
5. AMMETER
6. IGNITION SWITCH
7. BATTERY
8. ATTACHMENT DRIVE CLUTCH
9. SOLENOID
10. FUSE (30 AMP)
11. ATTACHMENT DRIVE SWITCH
12. CONNECTOR PLUG
13. STARTER
14. HEADLIGHTS
15. DIODE
16. FUEL SOLENOID
17. HOUR METER - OPTIONAL
18. ENGINE MAGNETO
19. ENGINE ALTERNATOR

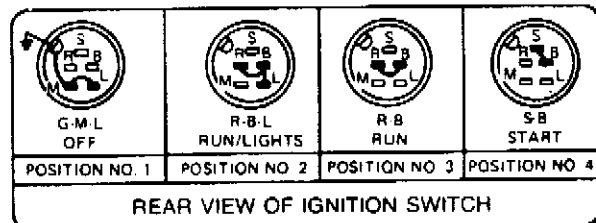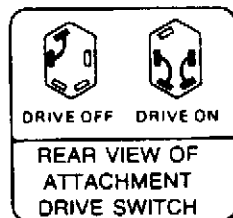

BOLENS TRACTORS

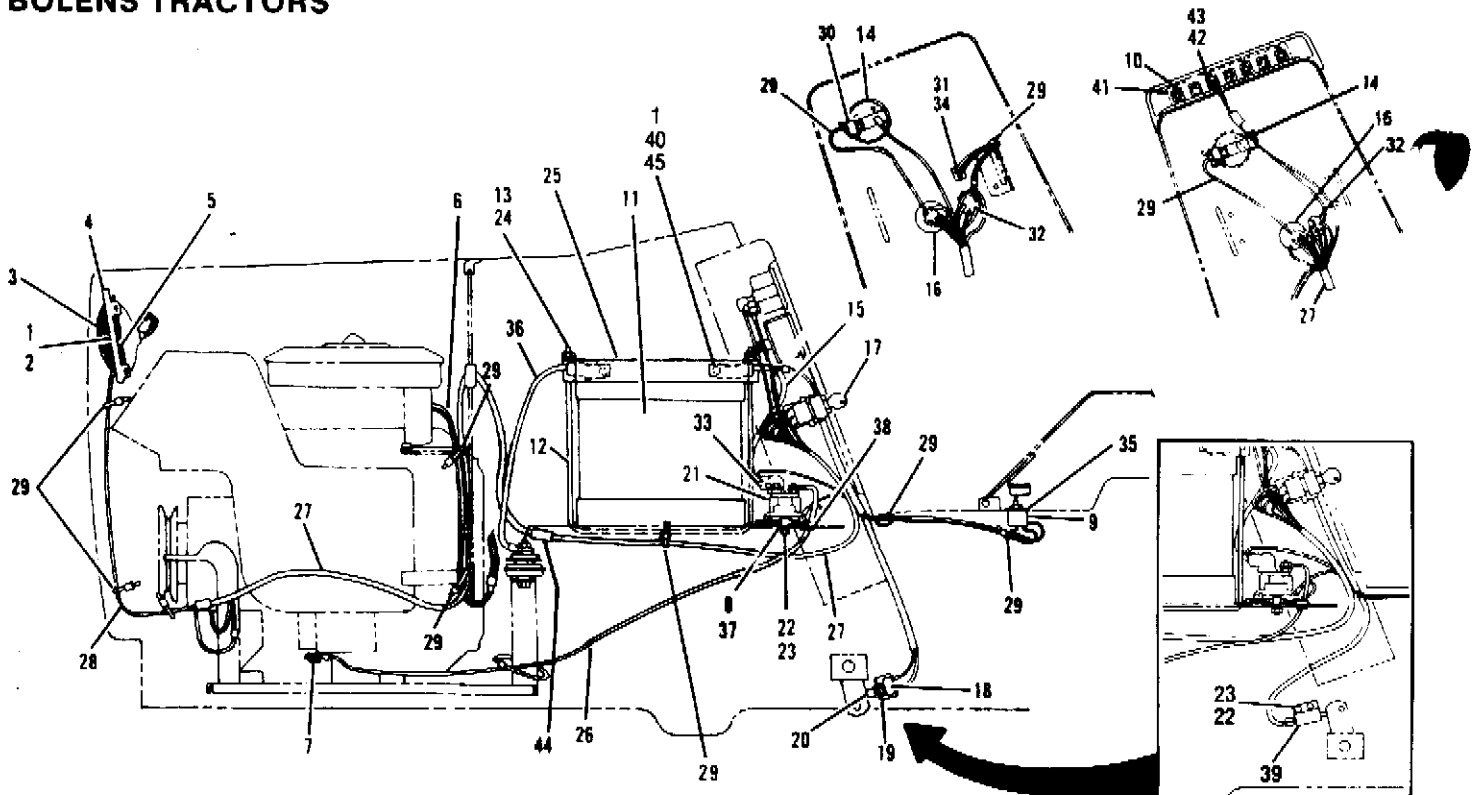


REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D
1	1111599	Hex Screw 1/4-20 x 5/8 (6)	2
2	1727379	Rivet, Pop 3/16 x 5/8	4
3	1726435	Headlight	2
4	1806805	Plate, Retainer	2
5	1806808	Retainer	2
6	1748581	Engine Harness	1
7	• 1186389	Flange Nut 1/4-20	1
8	1721252	J-Clip (1) (2) (3) (4)	1
9	1734366	Switch	1
10	1186020	Screw 6-32 x 3/8 (4) (5) (6)	2
11	1751498	Battery, 12 Volt (1) thru (5)	1
	1752840	Battery, 12 Volt (6)	1
12	1740804	Hold Down Rod (1) thru (5)	1
	1752586	Hold Down Hook (6)	2
13	• 1107381	Flat Washer 1/4	2
14	1739205	Ammeter 20-0-20	1
15	1725374	Cable, Battery Pos (1) (2) (3)	1
	1746199	Cable, Battery Pos (4) (5)	1
	1756074	Cable, Battery Pos (6)	1
16	1726169	Switch, Ignition (1) (2) (3) (4)	1
	1754183	Switch, Ignition (5) (6)	1
17	1718266	Key, Ignition (1) (2) (3) (4)	1
	1753986	Key, Ignition (5) (6)	1
18	1733577	Switch Ass'y., Interlock (1) (2)	1
19	1890234	Washer (1) (2)	2
20	1733576	Seal, Switch (1) (2)	1
21	1740056	Solenoid	1
22	• 1115815	Screw, Phil. No. 10-24 x 5/8	4
23	• 1185985	Nut, Keps Lock No. 10-24	2
24	1734398	Lock Nut 1/2-20	2
25	1739631	Battery, Hold Down (1) thru (5)	1
	1755802	Battery, Hold Down (6)	1

REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D
26	1732581	Cable, Starter (1) (2) (3) (5) (6)	1
27	1750846	Harness Main	1
28	1727169	Harness Headlight	1
29	1805345	Cable, Tie	11
30	1729914	Circuit Breaker (1) (2) (3)	1
31	1734824	Lamp, Clutch (1) (2) (3)	1
32	1734356	Switch PTO	1
33	1715012	Electrical Nipple	1
34	1735285	Bulb (Mgf. No. GE 73)	3
35	1734472	Switch Seal	1
36	1725373	Cable, Battery Neg. (1) thru (5)	1
	1756377	Cable, Battery Neg. (6)	1
37	1742113	Condensor	1
38	1749835	Flip Grommet	1
39	1748723	Push Button Switch (3) (4) (5)	1
40	1186229	Hex Nut 1/4-20 (6)	2
41	1749487	Retaining Strip (4) (5) (6)	1
42	1744085	Lamp Ass'y (4) (5) (6)	1
43	1735285	Bulb (4) (5) (6)	1
44	1752408	Plastic Tube (4) (5) (6)	1
45	• 1100241	Lock Washer (6)	2

• Common Hardware - Purchase Locally (Grade 5 where applicable)

Model 1667 (1) Serial Numbers 0100101 thru 0199999
 (2) Serial Numbers 0200101 thru 0299999
 (3) Serial Numbers 0300101 thru 0399999
 (5) Serial Numbers 0400101 thru 0499999
 Model 1467 (4) Serial Numbers 0100101 thru 0299999
 (6) Serial Numbers 0300101 thru 0399999

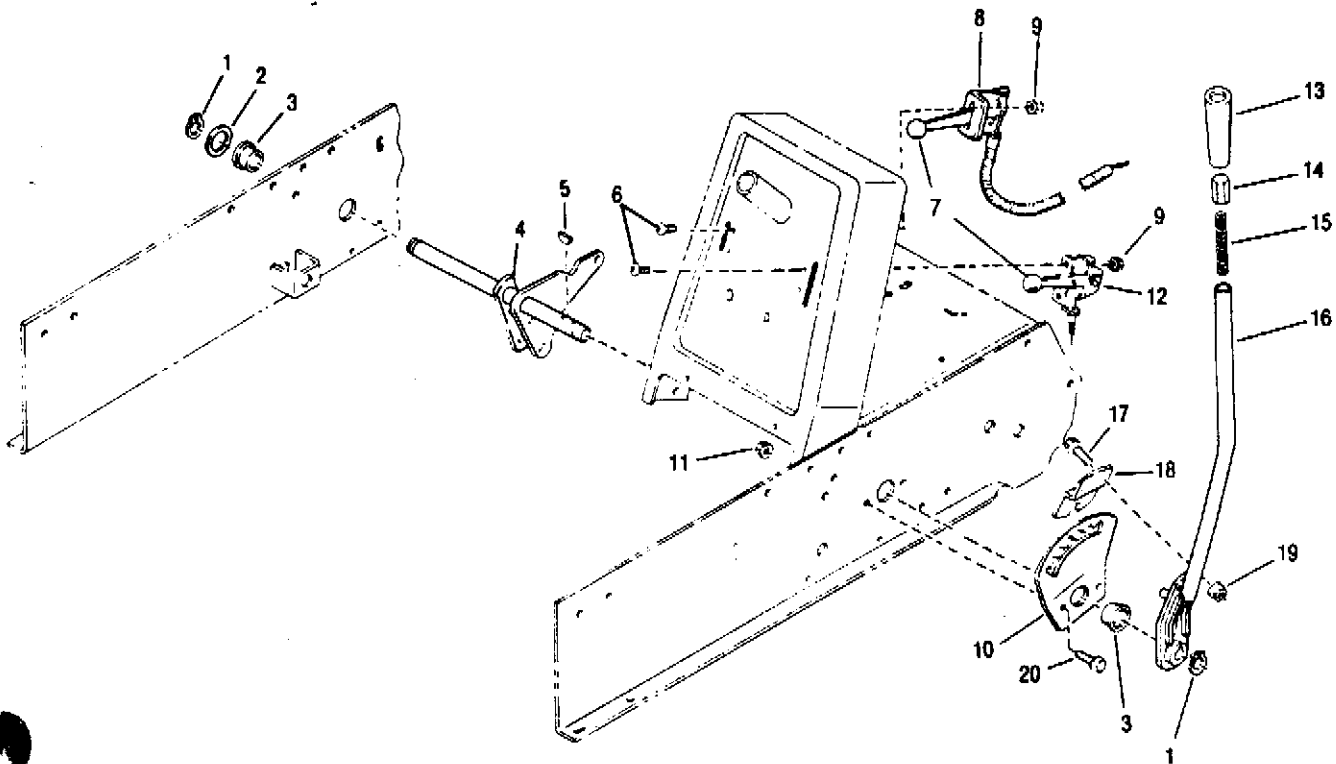

REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D
1	1118554	Retaining Ring	2
2	1185816	Shim	A/R
3	1185728	Flange Bearing	2
4	1734544	Shaft, Lift	1
5	1100279	Key, Woodruff, 1/4 x 1	1
6	• 1115815	Machine Screw, No. 10-24 x 5/8.....	4
7	1724527	Knob Only (A).....	2
	1737118	Knob Only (B).....	2
8	1732620	Control, Choke	1
9	1185985	Keps Nut, Nol. 10-24	4
10	1734262	Quadrant.....	1
11	• 1186393	Flange Lock Nut, 3/8-16.....	2
12	1736464	Control, Throttle.....	1


REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D
13	1730754	Grip (A)	1
	1719267	Grip (B)	1
14	1714644	Plunger	1
15	1713075	Spring	1
16	1734768	Handle, Lift (A)	1
	1755854	Handle, Lift (B)	1
17	• 1186329	Screw, Flange Lock, 5/16-18 x 3/4.....	2
18	1726401	Bracket (A)	1
	1755853	Bracket (B)	1
19	• 1186391	Flange Lock Nut, 5/16-18.....	2
20	• 1186345	Screw, Flange Lock, 3/8-16 x 3/4.....	2

(A) Model 1667

Model 1467 Serial Numbers 0100101 thru 0299999

(B) Model 1467 Serial Numbers 0300101 thru 0399999

BOLENS TRACTORS

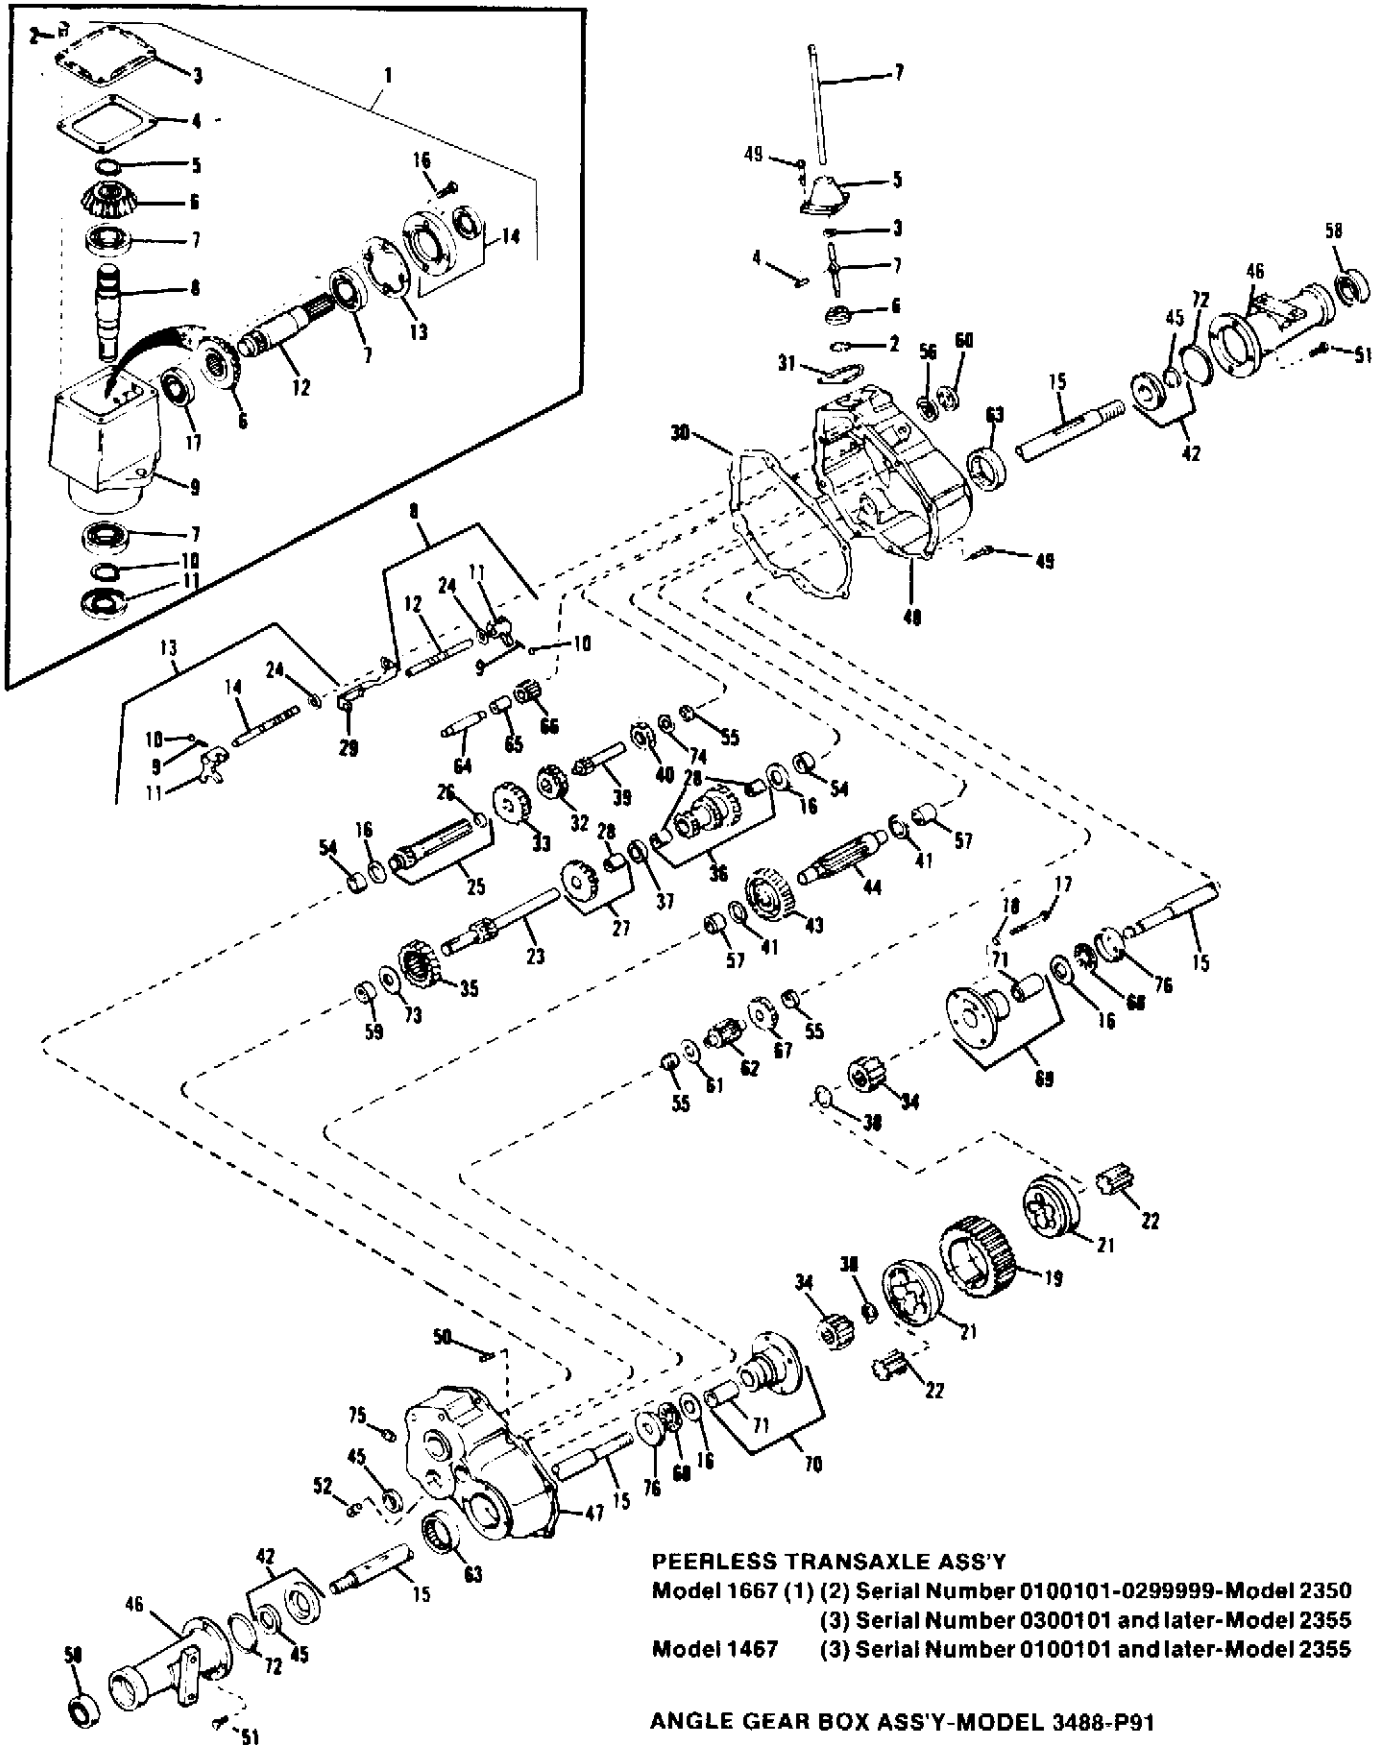

PEERLESS TRANSAXLE ASS'Y

Model 1667 (1) (2) Serial Number 0100101-0299999-Model 2350

(3) Serial Number 0300101 and later-Model 2355

Model 1467 (3) Serial Number 0100101 and later-Model 2355

ANGLE GEAR BOX ASS'Y-MODEL 3488-P91

ORDER PARTS FROM TECUMSEH, LAUSON-POWER PRODUCTS

MODELS 1467 and 1667

REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D
PEERLESS TRANSAXLE ASSEMBLY			
2	792016	Ring, Snap	
3	792001	Ring, Quad	
4	792049	Pin, Drive	
5	794093	Housing, Shift Lever	
6	784094	Keeper, Shift Lever	
7	784297	Lever, Shift	
8	784054	Rod Ass'y., Shift (Incl. Nos. 9 thru 12 & 24)	
9	792003	Spring	
10	792004	Ball, Steel	
11	784004	Fork, Shifter	
12	784055	Rod, Shifter (3rd & 4th)	
13	784056	Rod Ass'y., Shift (Incl. Nos. 9 thru 11 & 14)	
14	784057	Rod, Shifter (Low)	
15	774380	Axle (1) (2)	
15	774498	Axle (3)	
16	780042	Washer, Thrust	
17	792056	Screw, Hex. Hd. Cap, 1/4-20 x 3-1/4	
18	792006	Lockwasher, 1/4	
19	778080	Gear, Ring	
21	786052	Core, Body	
22	778078	Gear, Pinion	
23	776029A	Shaft & Gear, Brake	
24	792017	Ring, Snap	
25	776189A	Shaft & Bearing Ass'y., Pinion (Incl. No.26)	
26	780018	Bearing	
27	778034	Gear Cluster Ass'y., (Incl. No. 28)	
28	780053	Bushing	
29	784075	Stop, Shifter (1) (2)	
29	784074	Stop, Shifter (3)	
30	788023	Gasket, Case & Cover	
31	788022	Gasket, Shift Lever Housing	
32	778050	Gear, Shifting (3rd & 4th)	
33	778020	Gear, Shifting (1st & 2nd & Rev.)	
34	778079	Gear, Side	
35	778037	Gear, Idler	
36	778049	Gear Cluster Ass'y., (Incl. No. 28)	
37	786024	Spacer	
38	792018	Ring, Snap	
39	776015A	Shaft, Input	
40	778024A	Spur Gear, Input Shaft	
41	790052	Washer, Thrust	
42	788021	Seal & Retainer Ass'y., Oil (Incl. No. 45)	
43	778036	Gear, Output	
44	776028	Pinion, Output	
45	788008	Seal, Oil	
46	782062	Housing, Axle	
47	772076	Cover Ass'y., Transaxle (Incl. Nos. 54, 55, 57, 59 & 63)	
48	770068	Case Ass'y., Transaxle (Incl. Nos. 54, 55, 57 & 63)	

REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D
49	792007	Screw, Socket Hd. Cap, 1/4-20 x 3/4	
50	786026	Pin, Dowel	
51	790237	Screw, Hex Hd., 5/16-18 x 7/8	
52	792019	Plug, Magnetic Drain	
54	780049	Bearing, Needle	
55	530105	Bearing, Needle	
56	780024	Bearing, Ball	
57	780047	Bearing, Needle	
58	780050	Bearing, Ball	
59	780046	Bearing, Needle	
60	788025	Seal, Oil	
61	780001	Washer	
62	776031	Shaft & Pinion	
63	780048	Bearing, Needle	
64	776030	Shaft, Reverse Idler	
65	786025	Spacer, Reverse Idler	
66	778051	Idler, Reverse	
67	778038	Spur, Gear (22 Teeth)	
68	780039	Bearing, Thrust	
69	774141	Carrier Ass'y., Differential (Incl. No. 71)	
70	774142	Carrier Ass'y., Differential (Incl. No. 71)	
71	780041	Bushing	
72	788024	"O" Ring	
73	780007	Washer, Thrust	
74	780051	Washer, Thrust	
75	792010	Plug, Pipe	
76	780075	Race, Thrust	

Model 1667 (1) (2) Serial Number 0100101-0299999-Model 2350
 (3) Serial Number 0300101 and later-Model 2355
 Model 1467 (3) Serial Number 0100101 and later-Model 2355

RIGHT ANGLE GEAR BOX		Model 3488-P91
1	794251	Head Ass'y., Left Hand (Incl. Nos. 2 thru 16)
2	792025	Screw, Rd. Hd. Self-Tap 10-24 x 1/2
3	772035	Cover
4	788028	Gasket, Cover
5	788018	Ring, Snap
6	778046	Gear, Miter
7	780034	Bearing, Ball
8	776186	Shaft, Output
9	770026	Housing, Right Angle Drive
10	788019	Ring, Snap
11	788029	Seal, Oil
12	776194	Shaft, Input
13	788030	Gasket, Cap
14	786029	Cap & Seal Ass'y., Retainer (Incl. Nos. (92 & 93)
15	788031	Seal, Oil
16	792026	Screw, Hex Hd., 1/4-20 x 7/8
17	780024	Bearing, Ball