Bolens®

Suburban Tractor

Model 3112G (ST120)

Serial Number
0100101 thru
0199999

Model 3212G (ST120)

Serial Number
0100101 thru
0399999

Parts List

FORM 4152-4 (4/90)
SUPERSEDES 4152-3

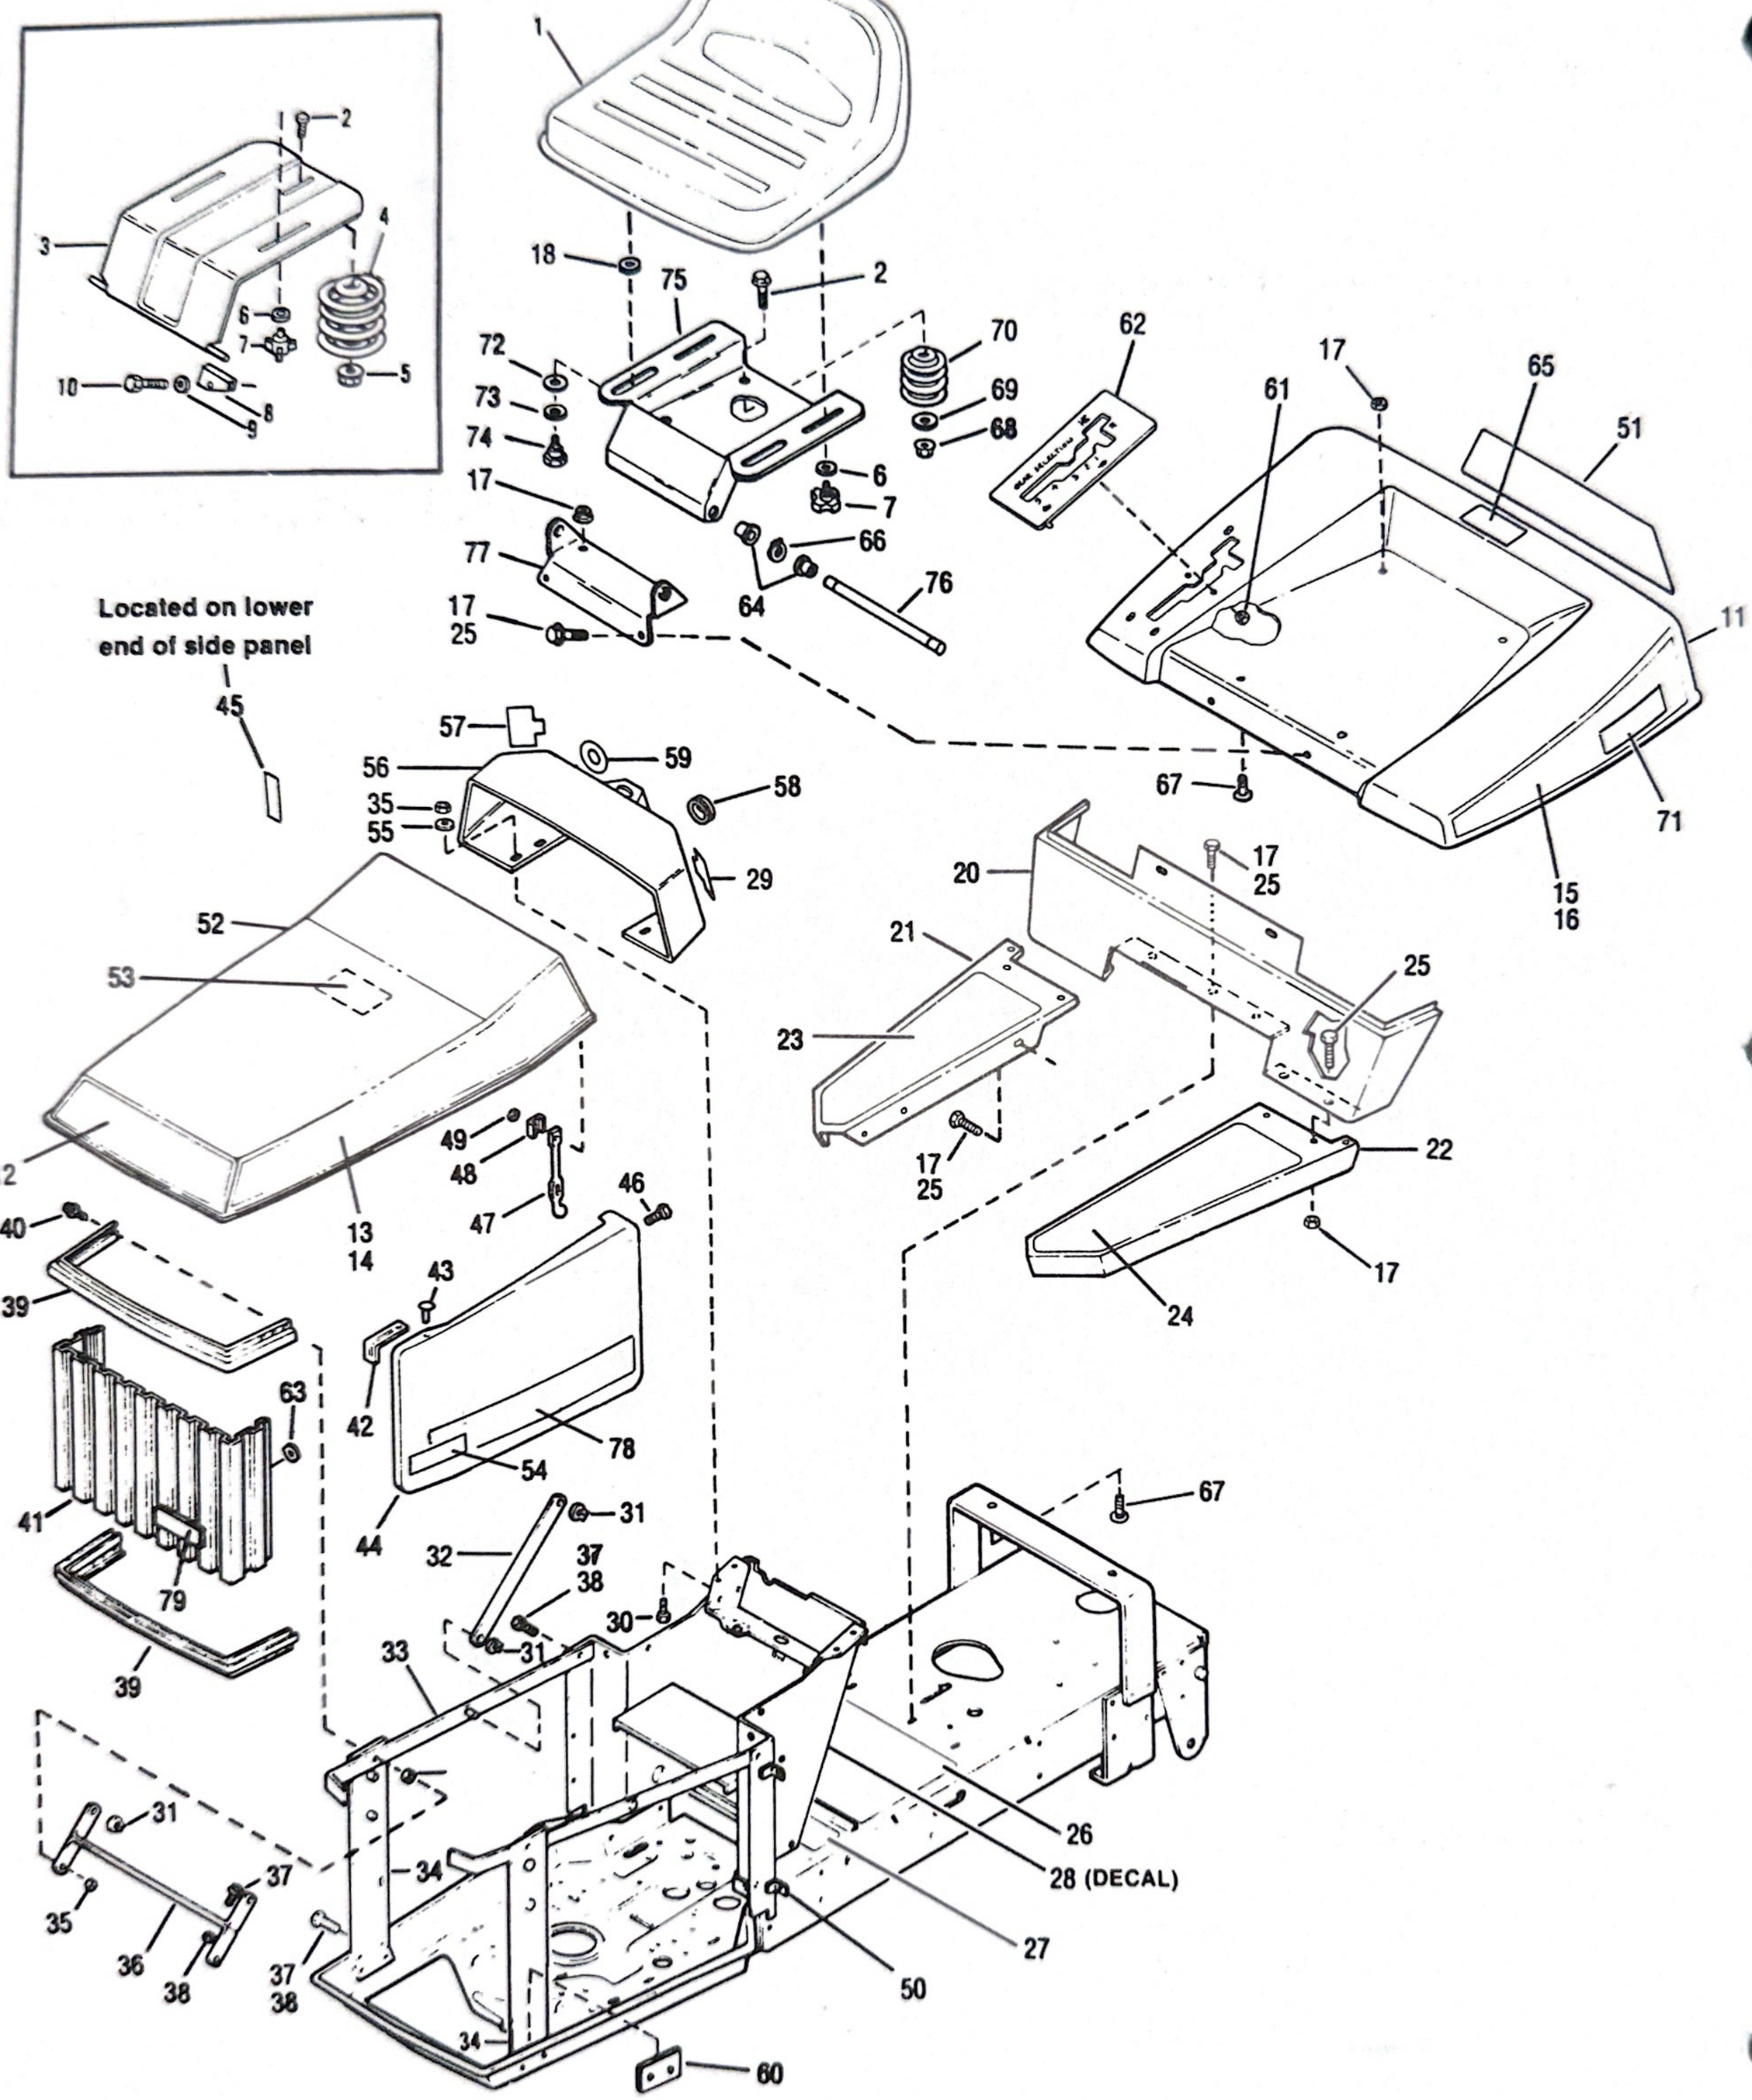

BODY WORK AND TRIM ASSEMBLY

1757659

REF. NO.		PART NO.	DESCRIPTION	QTY. REQ.
1		1747835	Seat (1) (2)	1
		1752915	Seat (3)	1
2	•	1186130	Rd. Hd. Sq. Neck Screw 3/8-16 x 1-1/4 (1) (2)	1
	•	1186347	Fl. Screw 3/8-16 x 1 (3)	2
3		1743434STB	Seat Support Assembly (1) (2)	1
4		1733960	Compression Spring (1) (2)	1
5		1735125	Nut & Washer Assembly (1) (2)	1
6	•	1107383	Flat Washer 3/8	2
7		1734269	Knob	2
8		1735265	Pivot Block (1) (2)	2
9	•	1100255	Flat Washer 5/16 (1) (2)	2
10	•	1107382	Hex Screw 5/16-18 x 1-1/2 (1) (2)	2
11		1742810	Rear Fender (1)	1
		1750543	Rear Fender (2)	1
		1756154BOW	Rear Fender (3)	1
12		1747663	Hood Decal (1) (2)	1
		1756038	Hood Decal (3)	1
13		1747670	Hood Decal R.H. (1) (2)	1
		1756037	Hood Decal R.H. (3)	1
14		1747671	Hood Decal L.H. (1) (2)	1
		1756036	Hood Decal L.H. (3)	1
15		1752907	Fender Decal R.H. (1) (2)	1
		1754624	Fender Decal R.H. (3)	1
16		1752906	Fender Decal L.H. (1) (2)	1
		1756176	Fender Decal L.H. (3)	1
17	•	1186391	Flange Nut 5/16-18	13
18		1893445	Washer (3)	2
19		1756043	Logo Plate (3)	1
20		1743987BOW	Running Board Support	1
21		1751805BOW	R.H. Running Board	1
22		1751803BOW	L.H. Running Board	1
23		1742665	R.H. Foot Pad	1
24		1742664	L.H. Foot Pad (1) (2)	1
		1755729	L.H. Foot Pad (3)	1
25	•	1186330	Fl. Lock Screw 5/16-18 x 7/8	11
26		1742666	Center Foot Pad (1) (2)	1
		1755944	Center Foot Pad (3)	1
27		1750326	Instruction Decal (1) (2)	1
		1755942	Instruction Decal (3)	1
28		1750937	Operating Instru. Decal (1)(2)	1
29		1752794	Decal, Choke (1) (2)	1
		1754854	Decal, Choke (3)	1
30	•	1111599	Hex Hd. Screw 1/4-20 x 5/8	4
31		1747836	Retaining Ring	6
32		1742459BDG	Hinge Link	2
33		1758587BDG	Hinge Strap Assembly	2
34		1752914BDG	Grille Support Assembly	2
35	•	1734398	Lock Nut 1/4-20	8
36		1742458BDG	Hinge Link	2
37	•	1186309	Flange Lock Screw 1/4-20 x 5/8	12
38	•	1186389	Flange Lock Nut 1/4-20	12
39		1742493BDG	Grille Cap	2
40	•	1100069	Hex Hd. Screw 1/4-20 x 1	2
41		1742494	Grille (1) (2)	1
		1755948BDG	Grille (3)	1
42		1743566	Side Cover Guide (1) (2)	4
		1753912	Side Cover Guide (3)	4
43	•	1186059	Pop Rivet 1/8 x 1/4 (1) (2)	8
	•	1756629	Pop Rivet 1/8 x 1/4 (3)	8
44		1743554BDG	L.H. Side Cover	1
		1743553BDG	R.H. Side Cover	1
45		1744013	Lift Decal (1) (2)	1
46	•	1115815	Phil. Hd. Machine Screw #10-24 x 5/8	4
47		1727127	Rubber Latch	2
48		1727126	Clip	2
49	•	1185985	Keps Nut #10-24	2
50		1742934	Angle Bracket Speed Nut	4
51		1747672	Fender Decal (3212) (1) (2)	1
		1751874	Fender Decal (3112)	1
52		1744051BOW	Hood Assembly	1
53		1744570	Service Instru. Decal (1) (2)	1
		1755934	Service Instru. Decal (3)	1
54		1747662	Side Cover Decal (1) (2)	2
55	•	1107381	Flat Washer 1/4	4
56		1750686	Instrument Panel	1
57		1750669	Throttle Decal (1) (2)	1
		1753413	Throttle Decal (3)	1
58		1747144	Cap	1
59		1750779	Decal, Ignition (1) (2)	1
		1754521	Decal, Ignition (3)	1
60		1754415BDG	Spacer Plate (2) (3)	2
61		1750532	Nut-Self Thd (2) (3)	6
62		1750873	Quadrant (2) (3)	1
63		1754126	Retainer, Push On (3)	2
64		1755779	Fl. Bearing (3)	4
65		1754519	Decal, Fuel (3)	1
66		1185257	Retaining Ring (3)	2
67		1736098	Carr. Bolt 5/16-18 x 5/8 (3)	4
68		1186393	Fl. Nut 3/8-16 (3)	2
69		1701055	Washer (3)	2
70		1755449	Comp. Spring (3)	2
71		1756033	Decal, Model (3)	2
72		1726782	Washer Wave (3)	2
73		1705793	Washer, Nylon (3)	2
74		1754125	Shoulder Bolt (3)	2
75		1755620STB	Seat Support Ass'y (3)	1
76		1755622	Rod (3)	1
77		1756466STB	Pivot Bracket (3)	1
78		1756041	Decal, Side Cover L.H. (3)	1
		1756042	Decal, Side Cover R.H. (3)	1

• Common Hardware - Purchase Locally (Grade 5 where applicable)

(1) Serial Number 0100101 thru 0199999
(2) Serial Number 0200101 thru 0299999
(3) Serial Number 0300101 thru 0399999

MODEL
3212
Serial Number
0100101 thru
0299999

MODEL
3112
EARLY
MODELS

MODEL
3112 &
3212
Serial Number
0300101 thru
0399999

MODEL 3112 & 3212
Serial Number
0300101 thru
0399999

FRAME, LIFT AND
STEERING ASSEMBLY

REF. NO.		PART NO.	DESCRIPTION	QTY. REQ.
1		1724491	Thd Form Screw 5/16-18 x 3/4	4
2		1727284	Steering Wheel	1
3	•	1185279	Roll Pin 1/4 x 2-1/4	1
4		1185632	Flange Bearing	1
5		1752363	Steering Shaft Support (1) (2)	1
		1756608	Steering Shaft Support (3)	1
6	•	1186389	Flange Nut 1/4-20	9
7	•	1186309	Flange Screw 1/4-20 x 5/8	13
8		1752881	Instr Panel Supp. (1)	1
		1752880	Instr Panel Supp. (2)	1
		1758724BDG	Instr Panel Supp. (3)	1
9		1185456	U Type Speed Nut 1/4-20	4
10		1742172	Battery Support (1) (2)	1
		1756073BDG	Battery Support (3)	1
11	•	1100350	Cotter Pin 1/8 x 1	1
12		1736931	Handle Grip (1) (2)	1
		1703539	Handle Grip (3)	1
13		1759450	Lift Lever Ass'y	1
14	•	1186330	Fl Lock Screw 5/16-18 x 7/8	31
15		1750957	Lock Nut 1/2-20	2
16		1750495	Steering Arm	1
17		1805368	Washer	1
18		1185427	Retaining Ring	2
19		1747189	Pin	1
20		1752412	Push Link (1) (2)	1
		1754179	Push Link (3)	1
21		1757661	Lift Guide	1
22	•	1107385	Flat Washer 1/2	2
23	•	1186391	Flange Lock Nut 5/16-18	41
24	•	1100350	Cotter Pin 1/8 x 1	2
25		1751070	Lift Rod	1
26		1751781	Lift Shaft Ass'y	1
27		1752414	Lift Shaft Ass'y (1) (2)	1
		1754950	Lift Shaft Ass'y (3)	1
28		1743430	Fender Support Assembly (1) (2)	1
		1754944BDG	Fender Support Assembly (3)	1
29		1749801	Rear Panel Ass'y	1
30		1740984BDG	Axle Support	2
31		1757659	Sliding Guide	1
32	•	1700401	Ext. Spring	1
33		1177567	Retaining Ring	1
34		1751802	Rear Frame (1) (2)	1
		1755847BDG	Rear Frame (3)	1
35		1742934	Angle Bracket Speed Nut	4
36		1751284	Steering Shaft (1) (2)	1
		1758726	Steering Shaft (3)	1
37		1730375	Shim Washer	A/R
38		1747303	Flange Bearing	1
39		1750594	Steering Support Assembly	1
40		1715301	Thrust Washer	1
41		1750501	Sector Gear Assembly	1
42		1185386	Flange Bearing	2
43		1113527	Retaining Ring	1
44	•	1107382	Flat Washer 5/16	2
45		1750581	Steering Arm	1
46	•	1100049	Hex Head Screw 3/8-16 x 2-1/4	2
47	•	1733398	Hex Lock Nut 3/8-16	4
48	•	1708755	Flat Washer 3/8	4
49	•	1110150	Lock Nut 3/8-24	2
50		1716180	Ball Joint	2
51	•	1186247	Jam Hex Nut 1/2-20	2
52		1750499	Steering Rod	1
53		1185803	Grease Fitting	1
54		1750811BDG	Attachment Bracket	1
55	•	1186345	Flange Hex Screw 3/8-16 x 3/4	4
56	•	1186393	Flange Hex Nut 3/18-16	4
57		1758231	Lock Hex Nut 5/8-11	1
58		1758232	Hex Hd. Screw 5/8-11 x 2-1/2	1
59		1750486	L.H. Spindle Ass'y	1
60		1750490	R.H. Spindle Ass'y	1
61		1750341	Bushing	4
62		1718086	Valve Stem	2
63		1185976	Grease Fitting	4
64		1750924	Wheel (Inc. Ref. No. 61 & 63)	2
65		1750354	Tire 15 x 6.00-6	2
66		1742133	Flange Bearing	4
67		1185388	Retaining Ring	4
68		1701447	Washer	A/R
69		1750494	Front Axle Ass'y	1
70		1750841	Tie Rod	1
71		1742343BOW	Front Frame	1
72		1744013	Lift Decal	1
73		1744444	Wheel Cap	2
74		1185830	Special Washer	A/R
75		1747320	Cable Guide	2
76	•	1100043	Hex Screw 3/8-16 x 1-1/4	2
77		1862273	Pulley (1) (2)	2
		1756177	Pulley (3)	2
78		1747322	Spacer	2
79		1747316BDG	Bracket	1
80		1747315BDG	Bracket	1
81	•	1177567	Retaining Ring	2
82		1185388	Retaining Ring (3)	2
83		1751715BDG	Bracket (2) (3)	2
84		1705093	Flat Washer	5
85		1751798	Flange Bearing	2
86	•	1732198	Hook	1
87		1751787	Lift Handle Ass'y	1
88		1751795	Handle	1
89		1751796	Bearing	1
90		1751797	Thrust Bearing	1
91		1751791	Arm Ass'y	1
92		1750957	Lock Nut 1/2-20	1
93	•	1107383	Flat Washer 3/8	1
94		1751794	Lift Link Ass'y	1
95	•	1100359	Cotter Pin 1/8 x 5/8	1
96		1745635	Bracket	2
97		1747030	Lift Link	2
98		1745643	Lift Rod	1

•Common Hardware - Purchase Locally

(1) Serial Number 0100101 thru 0199999
(2) Serial Number 0200101 thru 0299999
(3) Serial Number 0300101 thru 0399999

MODEL 3112 & 3212
S/N 0100101 thru 0199999

MODEL 3212 S/N
0200101 thru 0399999

BRAKE AND CLUTCH ASSEMBLY

SEE BREAKDOWN PAGE 16 & 18

USED ON BOTH SIDES

(AS REQ'D)

REF. NO.		PART NO.	DESCRIPTION	QTY. REQ.
1		1744269	Knob (1) (2)	1
		1724231	Knob (3)	1
2		1752864	Shift Lever (1)	1
3		1716295	Nylon Bushing (1)	2
4	•	1111609	Hex Hd. Screw 5/16-18 x 2-3/4	4
5	•	1107383	Flat Washer 3/8	9
6		1747186	Push On Cap	1
7		1747188	V-Belt (96.88)	1
8		1752798	Belt Guide	1
9		1749904	Eye Bolt	1
10		1185596	Set Screw	2
11		1743640	Transmission Sheave	1
12		*	5-Speed Transmission Model	1
13		1104335	Sq. Key 3/16 x 2	2
14	•	1100255	Flat Washer 5/16	9
15	•	1732499	Lock Nut 5/16-18	4
16		1742103BDG	Transmission Support	1
17	•	1186330	Fl. Lock Screw 5/16-18 x 7/8	3
18	•	1186391	Flange Nut 5/16-18	7
19		1724491	Thd. Form Screw 5/16-18 x 3/4	2
20		1746943	Brake Rod	1
21		1743605	Clevis Pin (1)	1
22		1750526	Torsion Spring (2) (3)	1
23		1743606	Transmission Arm (1)	1
		1754661	Transmission Arm (2) (3)	1
24	•	1107381	Flat Washer 1/4	1
25	•	1100241	Lock Washer 1/4	1
26	•	1111683	Hex Screw 1/4-28 x 1/2	1
27		1744263	Shift Link (1)	1
28	•	1186396	Lock Nut 7/16-20 (1)	2
29		1752810	Shift Rod (B) (1)	1
		1744252	Shift Rod (A) (1)	1
30		1104436	Woodruff Key 3/16 x 3/4	1
31		1751808	Idler Support Assembly	1
32		1743696	Comp Spring (1)	1
33		1750542	Shift Lever (2)	1
		1756047	Shift Lever (3)	1
34		1120210	Roll Pin 3/16 x 1.00	4
35	•	1186389	Flange Lock Nut 1/4-20	4
36		1744320	Belt Guide	1
37		1757291	Belt Guide	2
38	•	1733398	Lock Nut 3/8-16	3
39		1748491	Pivot	1
40		1751880	Arm Assembly	2
41		1729482	Spring Ext. (3)	1
42		1713783	Spacer	1
43	•	1107385	Flat Washer 1/2 (1)	1
44		1728908	Compression Spring	1
45	•	1107386	Flat Washer 5/8	2
46		1715538	Nylon Bushing	2
47		1751809	Torsion Spring	1
48		1746941BDG	Idler Arm Assembly	1
49		1726660	Idler	1
50		1725555	Belt Guide	2
51	•	1100049	Hex Hd. Screw 3/8-16 x 2-1/4	1
52	•	1100243	Lock Washer 3/8	1
53		1749764	Idler (1) (2)	1
		1756151	Idler (3)	1
54		1742054	Spacer (3112)	2
55		1750352	Tire 20 x 8.-00-10	2
56		1718086	Valve Stem	2
57		1750351	Wheel Disc	2
58		1747998	Washer 3/4	A/R
59		1185388	Retaining Ring	2
60		1728694	Foot Rest	1
61		1751882	Brake Pedal Ass'y (1) (2)	1
		1756049	Brake Pedal Ass'y (3)	1
62	•	1100350	Cotter Pin 1/8 x 1	3
63		1714233	Nylon Bushing	4
64		1747873	Wheel Cap	2
65		1751063	Brake Lock Rod	1
66	•	1100359	Cotter pin 1/8 x 5/8	7
67		1746942	Clutch Rod	1
68		1893445	Washer, Flat 3/8	1
69	•	1100086	Screw Hex Hd. 3/8-16 x 1-3/4	1
70		1752863	Lever Ass'y (1)	1
71		1705092	Flat Washer	2
72	•	1107382	Flat Washer 5/16 (2) (3)	1
73		1750297	Belt Guide (2) (3)	1
74		1186244	Jam Nut 5/16-24 (2) (3)	1
75		1754660	Shift Rod (2) (3)	1
76		1752524	Ball Joint (2) (3)	1
77		1110149	Lock Nut 5/16-24 (2) (3)	1
78		1754663	Shift Arm Ass'y (2) (3)	1
79		1750539	Shaft Ass'y (2) (3)	1
80		1705093	Washer (2) (3)	A/R
81		1750946	Pin (2) (3)	1
82		1177567	Retaining Ring (3)	1
83		1755584BDG	Interlock Bracket (3)	1

• Common Hardware - Purchase Locally

* Order parts from your local Tecumseh Power Products Engine Dealer

(1) Serial Number 0100101 thru 0199999
(2) Serial Number 0200202 thru 0299999
(3) Serial Number 0300101 thru 0399999

(A) Used on Model 3212 S/N 0100101 thru 0100367
(B) Used on Model 3212 S/N 0100368 thru 0199999

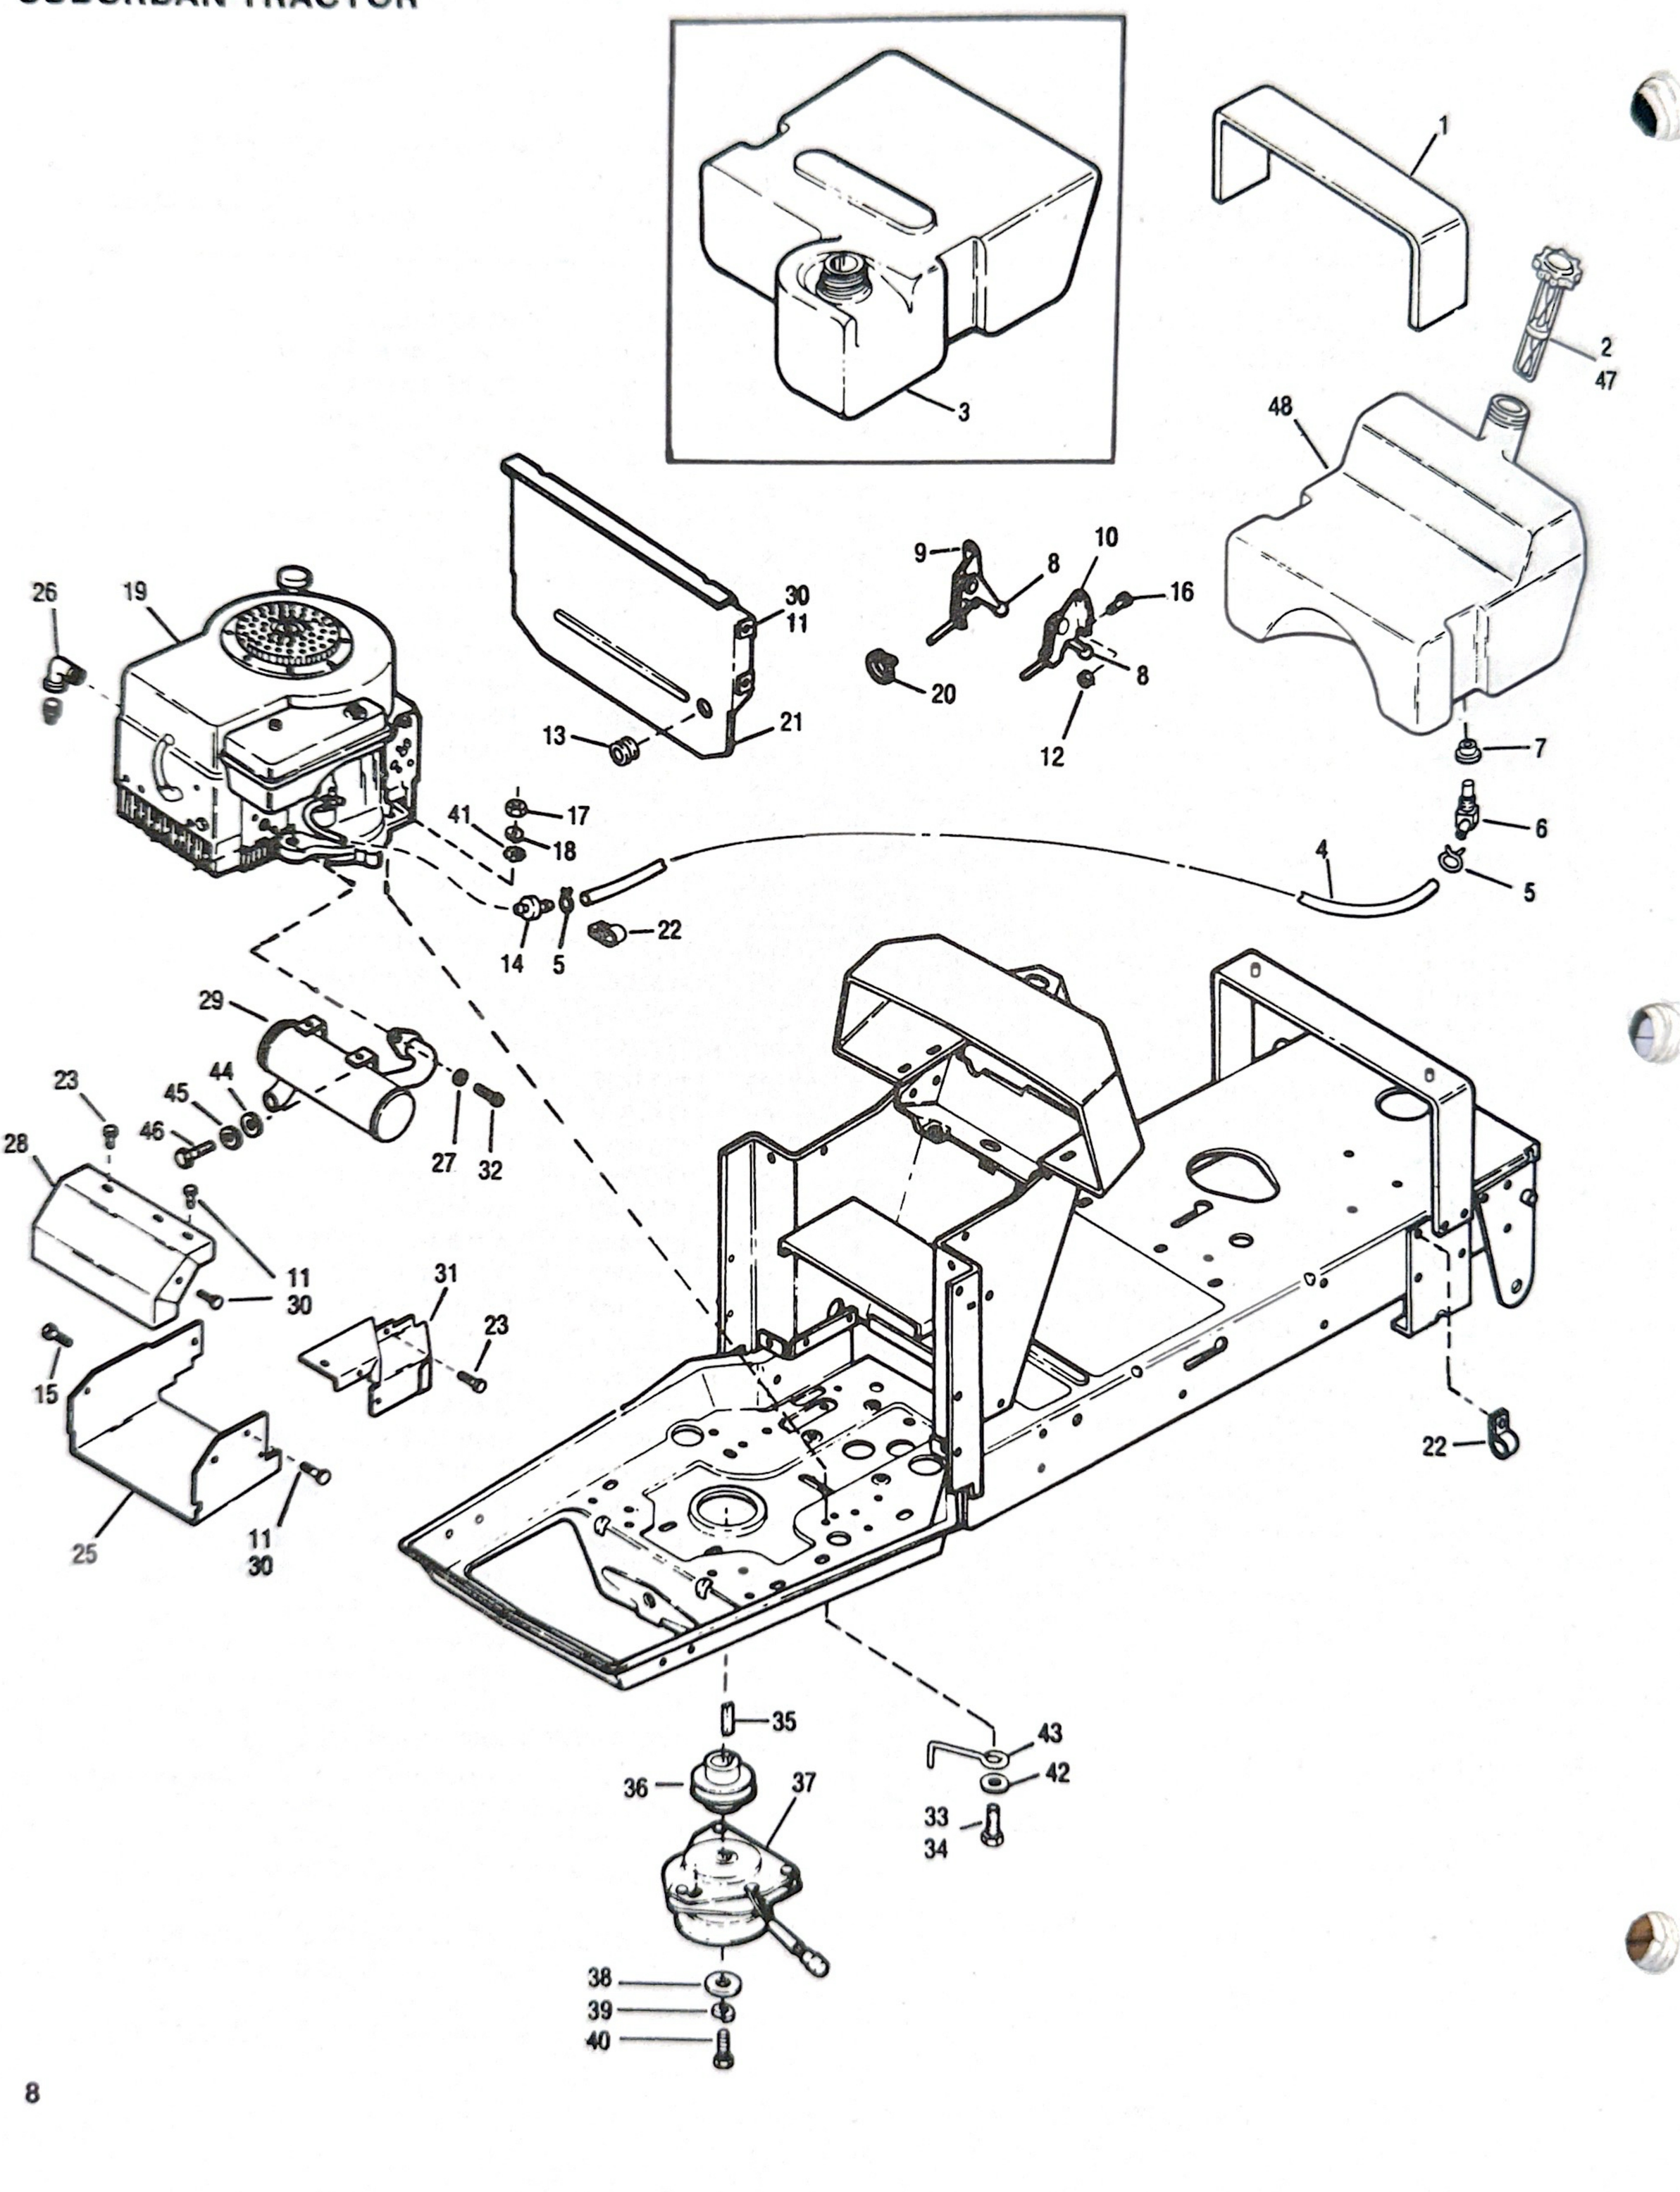
1
2
47
48
3
30
11
21
13
9
8
10
16
20
12
7
6
5
4
26
19
41
17
18
14
22
29
44
45
46
27
32
23
28
15
25
31
43
42
33
34
35
36
37
38
39
40

REF. NO.		PART NO.	DESCRIPTION	QTY. REQ.
1		1744390	Fuel Tank Pad	1
2		1747733	Fuel Tank Gauge (1) (2)	1
3		1747537	Fuel Tank (Incl. Ref. 2) (1) (2)	1
4		1752795	Fuel Line	1
5		1750687	Hose Clamp	2
6		1751477	Fuel Shut Off Valve	1
7		1738433	Bushing	1
8		1736314	Knob (1) (2)	2
		1737118	Knob (3)	2
9		1744070	Throttle Control (1) (2)	1
		1755926	Throttle Control (3)	1
10		1744071	Choke Control (1) (2)	1
		1755927	Choke Control (3)	1
11	•	1115815	Phil. Hd. Screw #10-24 x 5/8	9
12	•	1185985	Keps Nut #10-24	4
13		1748014	Grommet	1
14		1727491	Fuel Filter	1
15	•	1186330	Fl. Screw 5/16-18 x 7/8	1
16		1750962	Screw #10-24 x 5/8	4
17	•	1186230	Hex Nut 5/16-18	4
18	•	1100242	Lock Washer 5/16	4
19		*	Engine, B&S 12 H.P. Model 281707-0127	1
20		1735531	Wire Tie	3
21		1752883BDG	Heat Shield	1
22		1747738	J-Clip	3
23		1186309	Fl. Screw 1/4-20 x 5/8	3
25		1752909BDG	Heat Shield	1
26		1752912	Elbow, 90°	1
27		1185140	Lock Washer, Special	2
28		1752911BDG	Heat Shield	1
29		1752890	Muffler	1
30		1185986	Speed Nut #10-24	9
31		1752910BDG	Heat Shield	1
32		1747993	Socket Hd. Screw 5/16-18 x 3/4	2
33	•	1111606	Screw, Hex Hd. 5/16-18 x 2	1
34	•	1100799	Hex Hd. Screw 5/16-18 x 1-1/2	3
35		1748146	Sq. Key 1/4 x 1-1/2	1
36		1747148	Sheave	1
37		1742518	Electric Clutch (1)	1
		1755341	Electric Clutch (2) (3)	1
38		1744455	Special Washer	1
39	•	1100244	Lock Washer 7/16	1
40		1744454	Hex Hd. Screw 7/16-20 x 3	1
41	•	1110645	Lock Washer 5/16 (L.H. Rear)	1
42	•	1100255	Flat Washer 5/16	4
43		1754787	Clutch Retainer	1
44		1755340	Spacer	1
45	•	1100241	Washer, Lock 1/4	1
46	•	1100069	Hex Screw 1/4-20 x 1	1
47		1756044	Fuel Tank Gauge (3)	1
48		1756460	Fuel Tank (Incl. Ref. 47) (3)	1

•Common Hardware - Purchase Locally (Grade 5 where applicable)

(1) Serial Number 0100101 thru 0199999
(2) Serial Number 0200101 thru 0299999
(3) Serial Number 0300101 thru 0399999

WIRING DIAGRAM

Models 3112 and 3212 Serial Number 0100101 thru 0299999

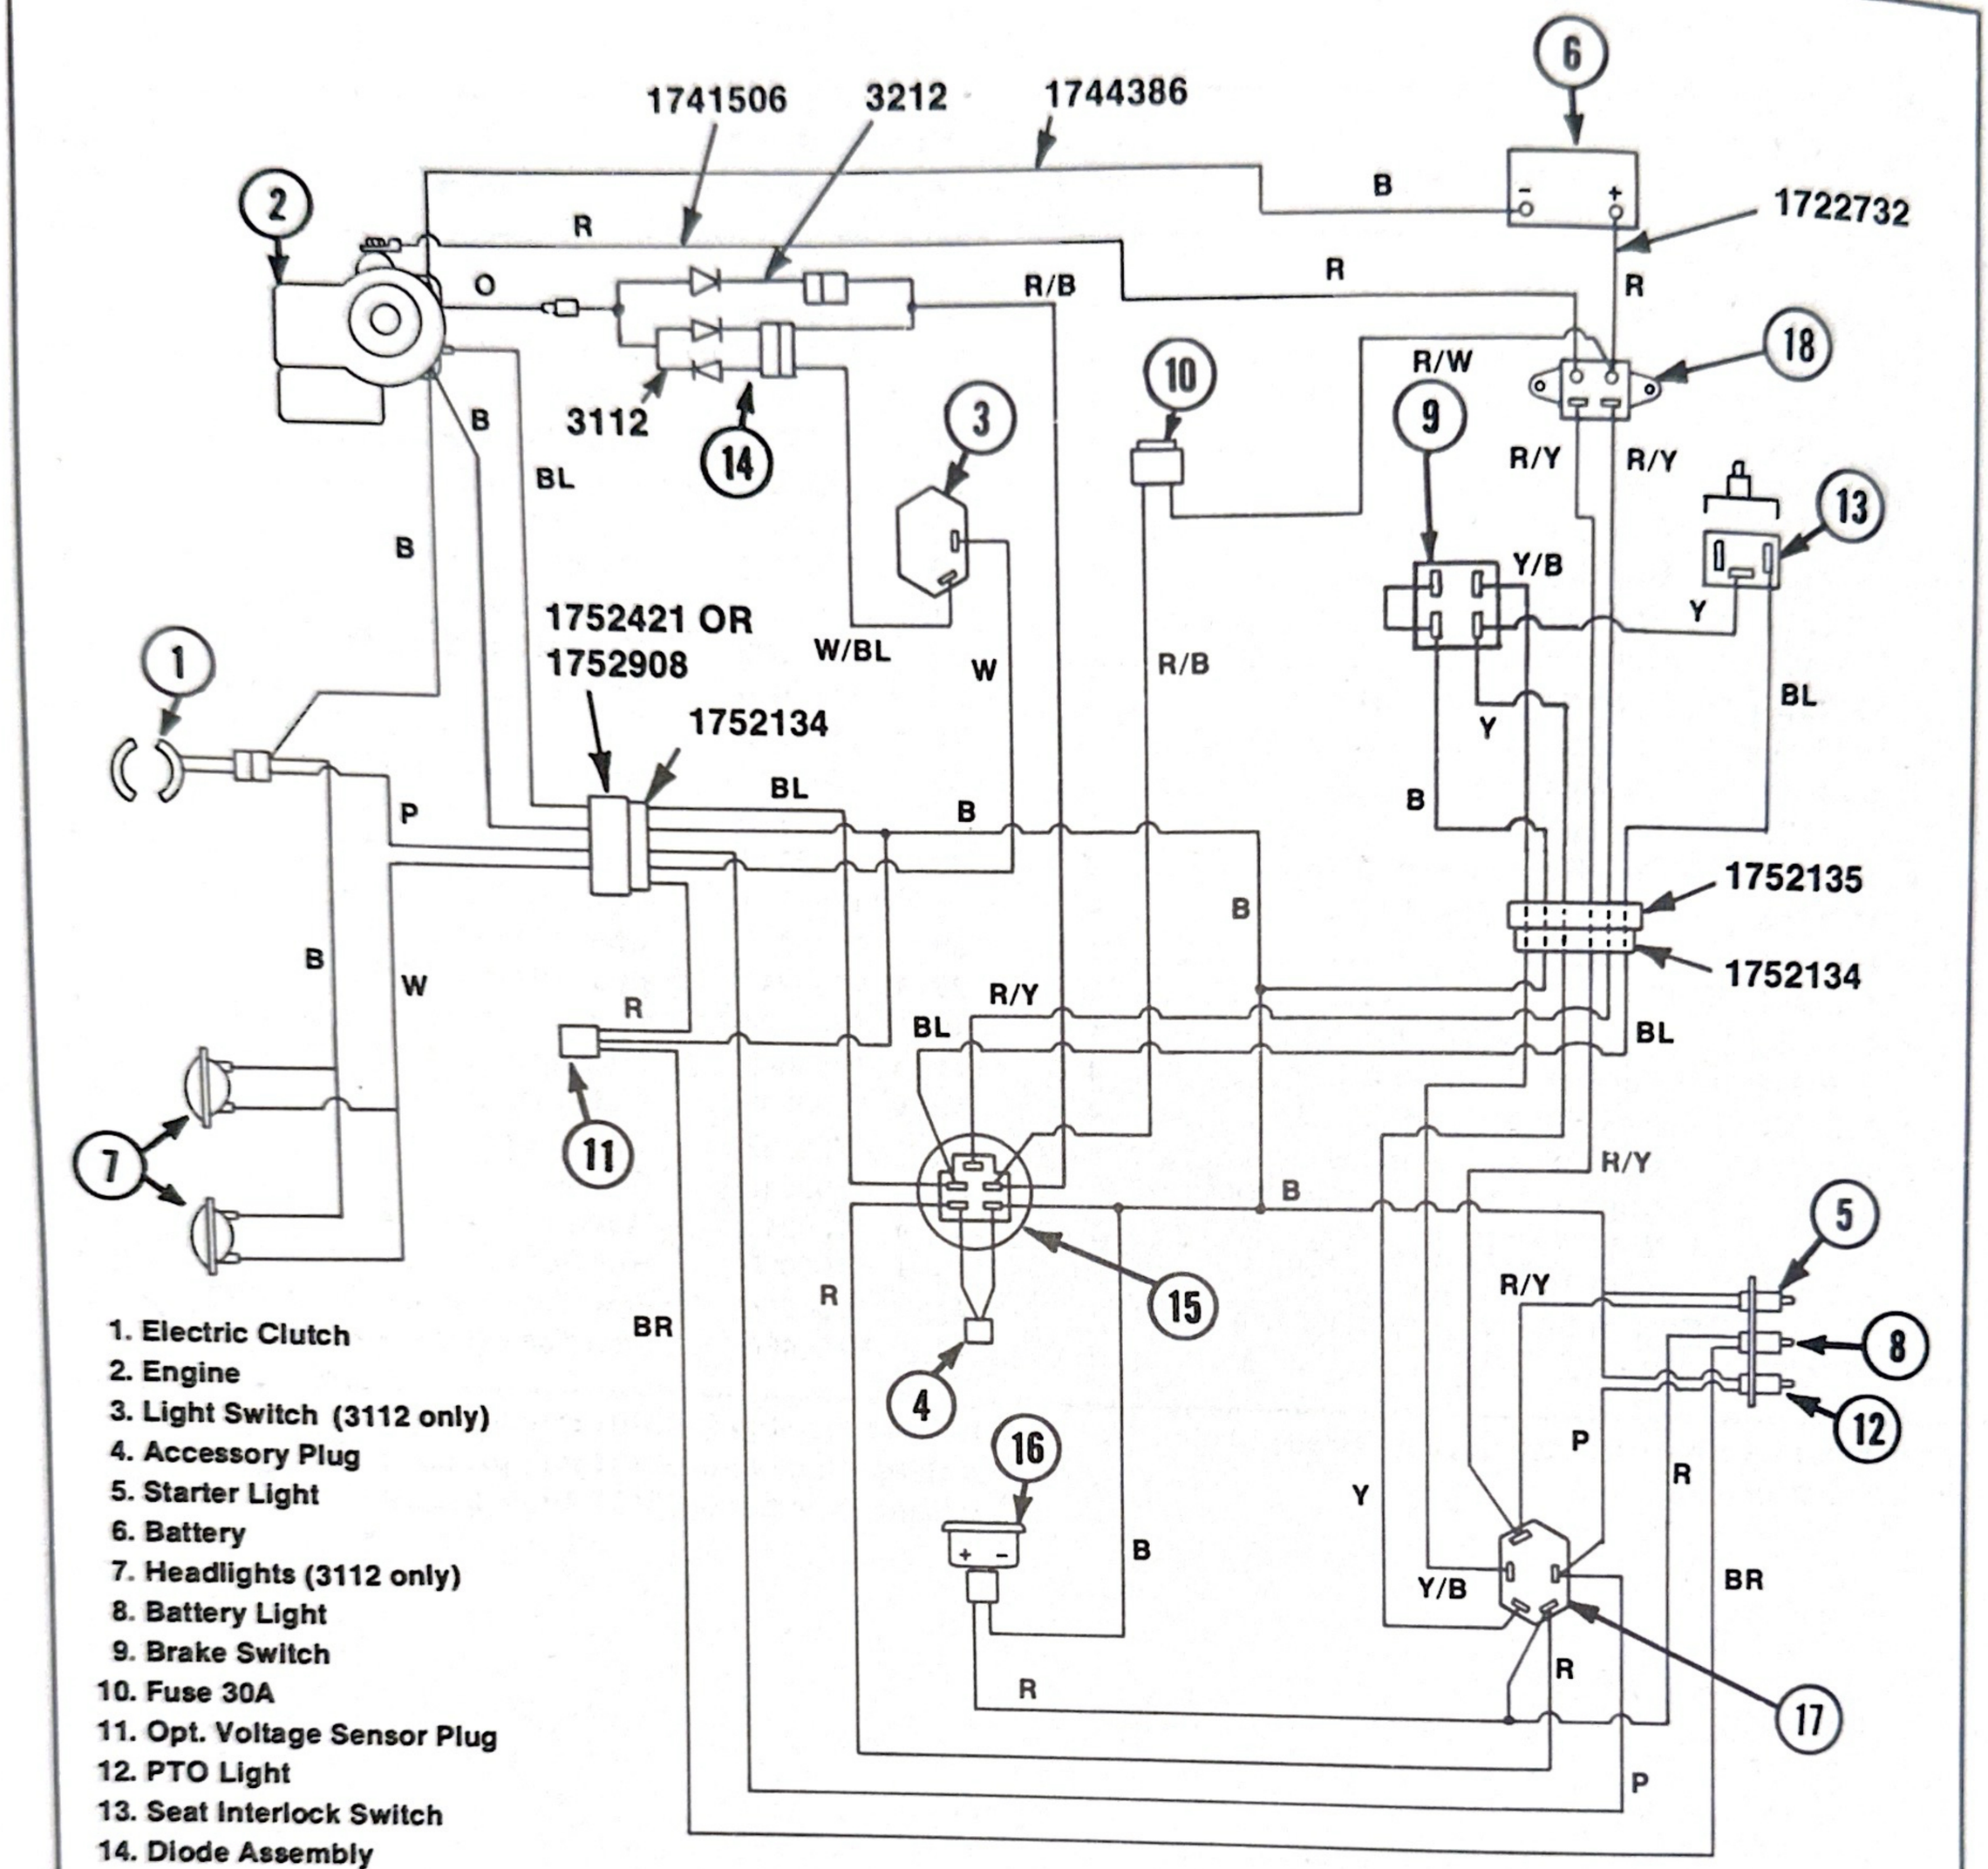

1. Electric Clutch
2. Engine
3. Light Switch (3112 only)
4. Accessory Plug
5. Starter Light
6. Battery
7. Headlights (3112 only)
8. Battery Light
9. Brake Switch
10. Fuse 30A
11. Opt. Voltage Sensor Plug
12. PTO Light
13. Seat Interlock Switch
14. Diode Assembly
15. Ignition Switch
16. Hour Meter
17. PTO Switch
18. Solenoid

WIRE COLOR CODE	
R-RED	R/W—RED/WHITE
B-BLACK	Y/B-YELLOW/BLACK
W-WHITE	R/B-RED/BLACK
O-ORANGE	W/BL-WHITE/BLUE
Y-YELLOW	R/Y—RED/YELLOW
P-PURPLE	BR-BROWN
BL-BLUE	

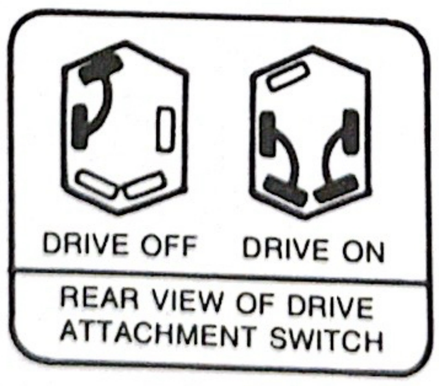

REAR VIEW OF DRIVE ATTACHMENT SWITCH

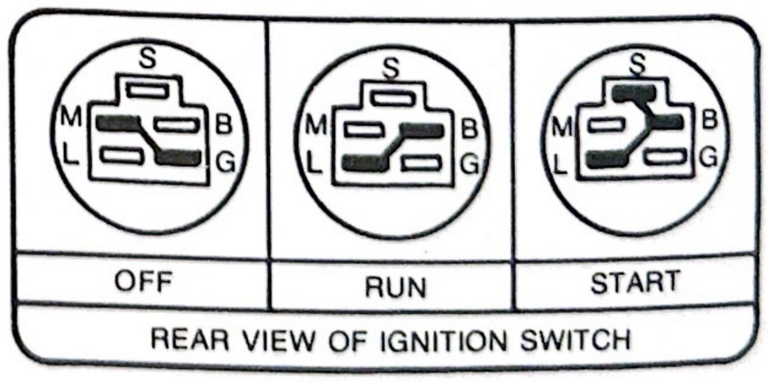

REAR VIEW OF IGNITION SWITCH

WIRING DIAGRAM

Model 3212 Serial Number 0300101 thru 0399999

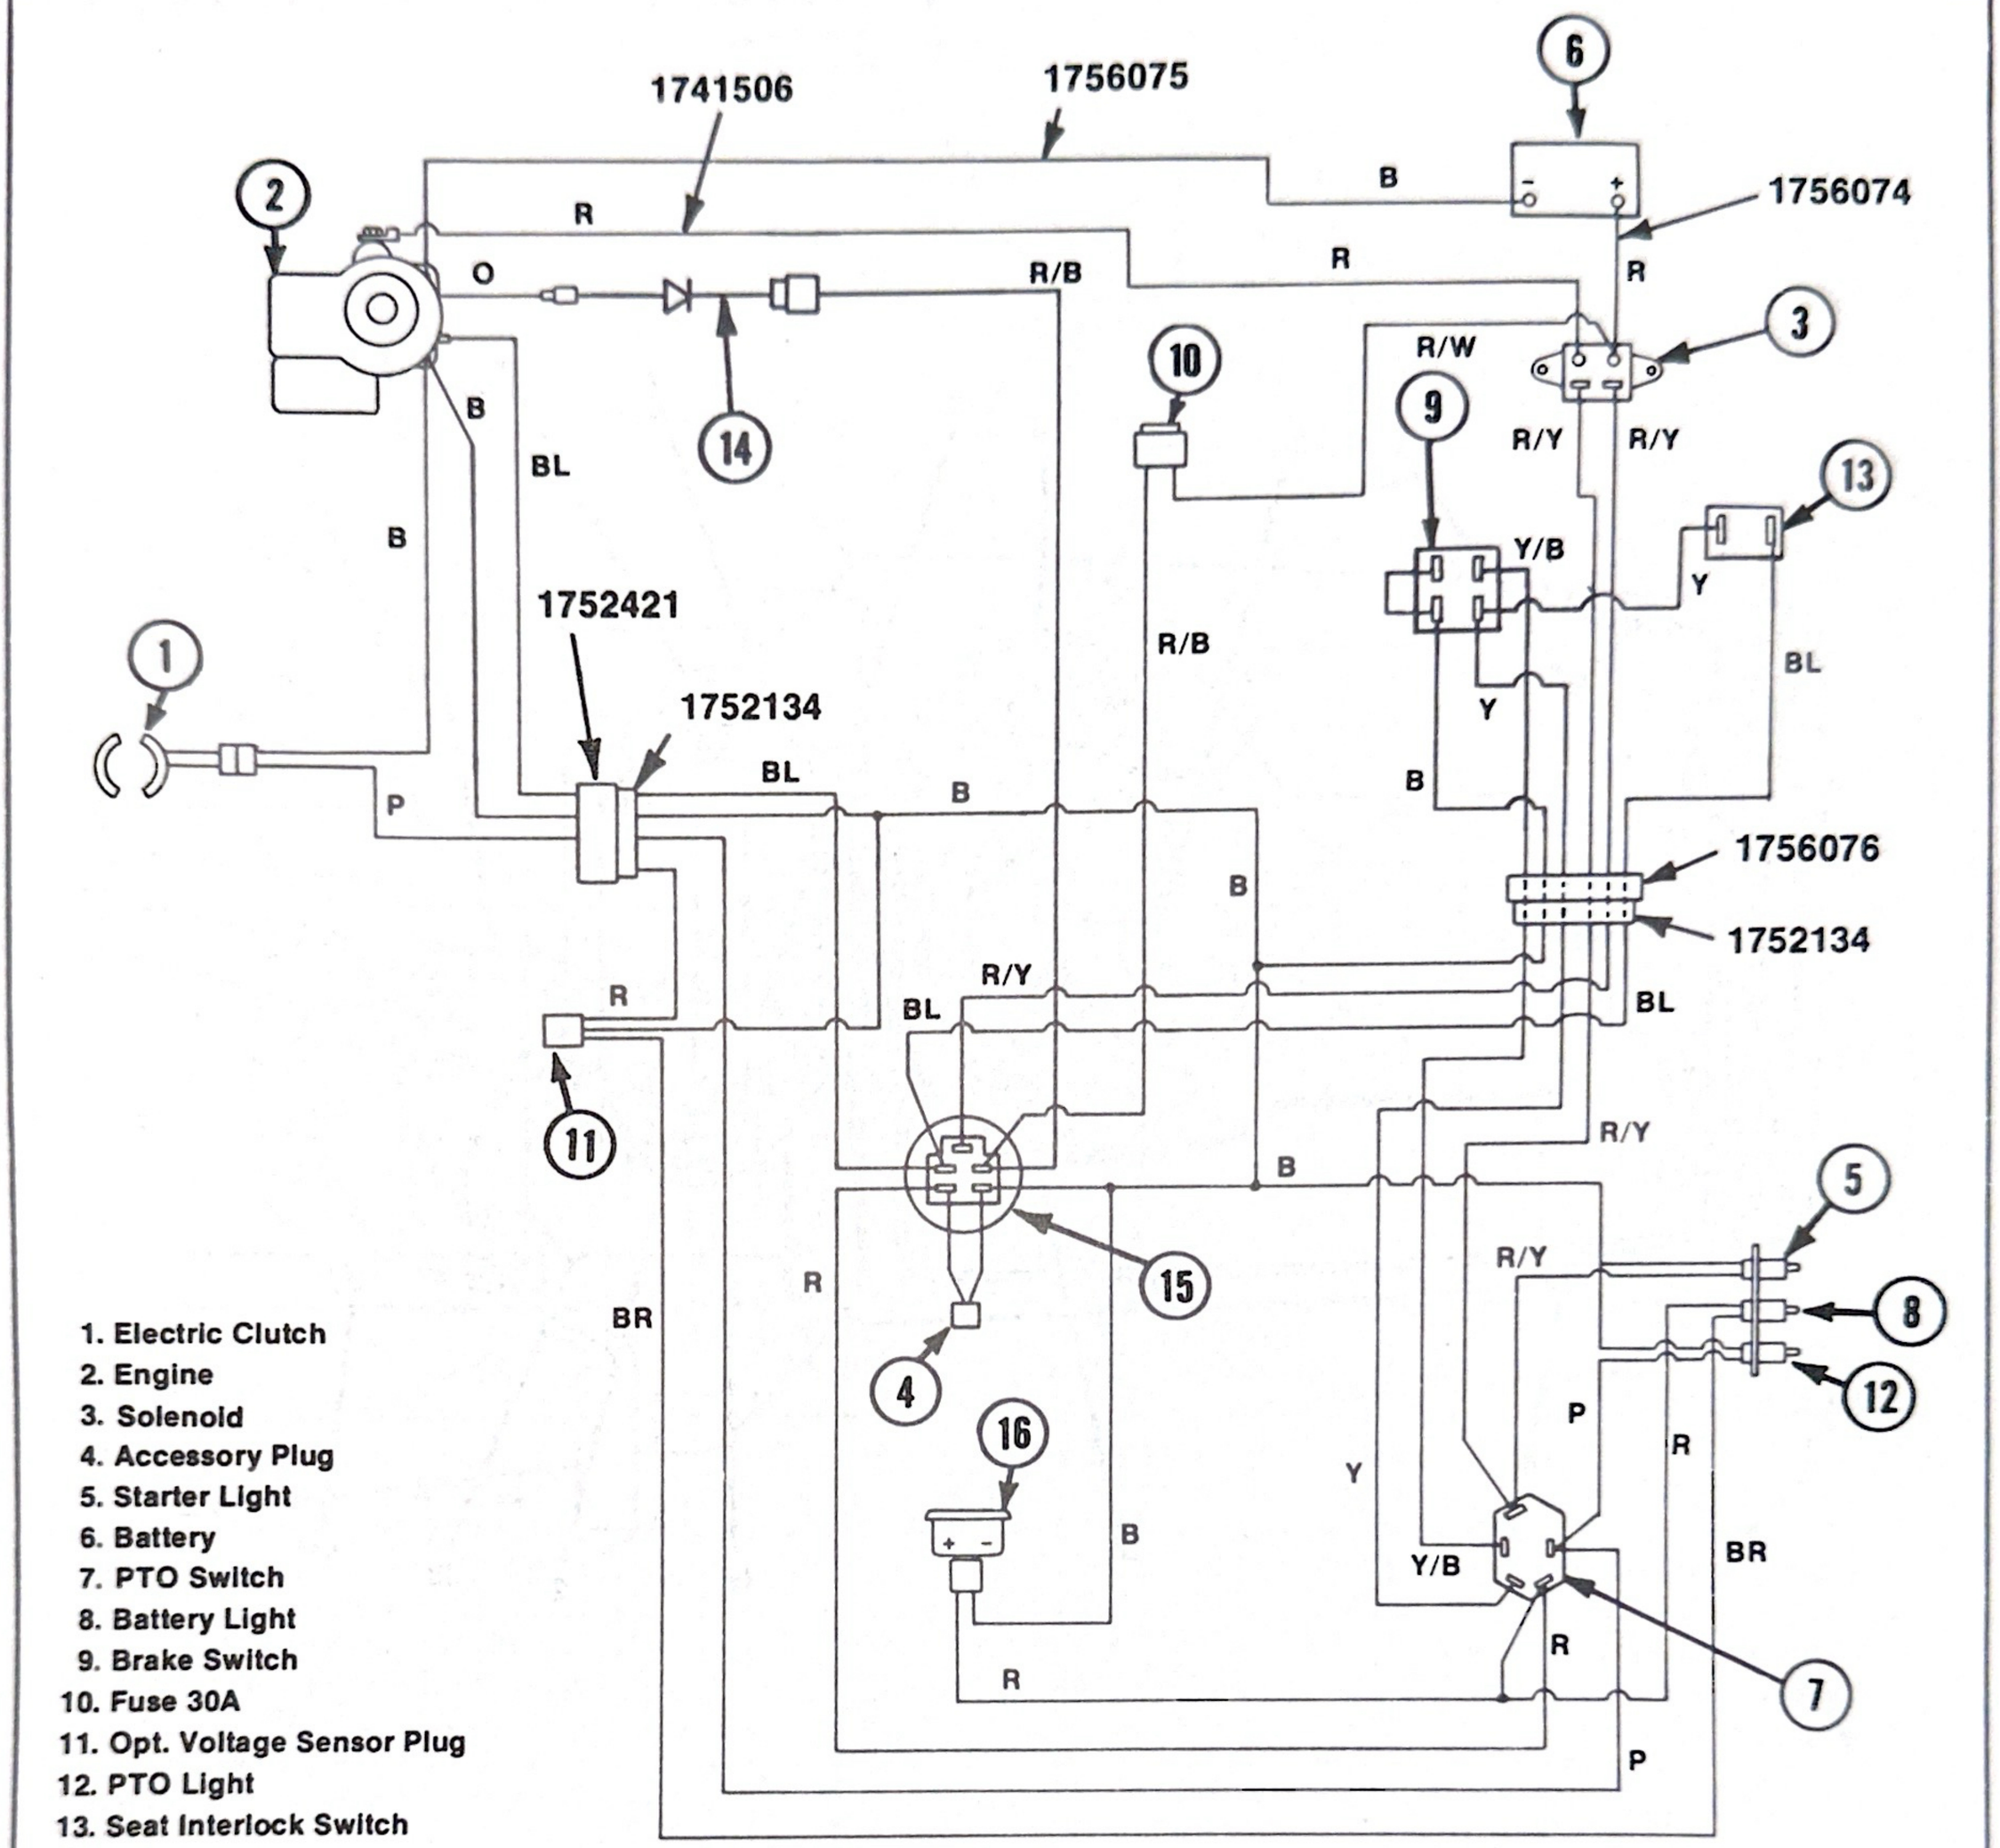

1. Electric Clutch
2. Engine
3. Solenoid
4. Accessory Plug
5. Starter Light
6. Battery
7. PTO Switch
8. Battery Light
9. Brake Switch
10. Fuse 30A
11. Opt. Voltage Sensor Plug
12. PTO Light
13. Seat Interlock Switch
14. Diode Assembly
15. Ignition Switch
16. Hour Meter

WIRE COLOR CODE	
R-RED	R/W—RED/WHITE
B-BLACK	Y/B-YELLOW/BLACK
W-WHITE	R/B-RED/BLACK
O-ORANGE	W/BL-WHITE/BLUE
Y-YELLOW	R/Y—RED/YELLOW
P-PURPLE	BR-BROWN
BL-BLUE	

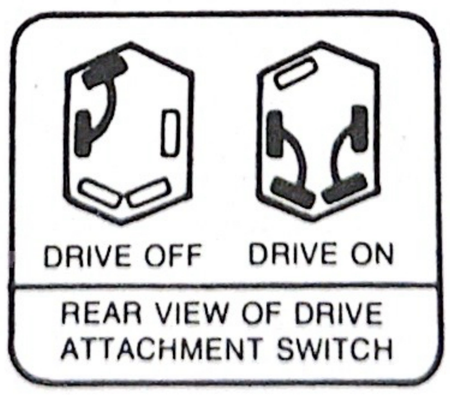

REAR VIEW OF DRIVE ATTACHMENT SWITCH

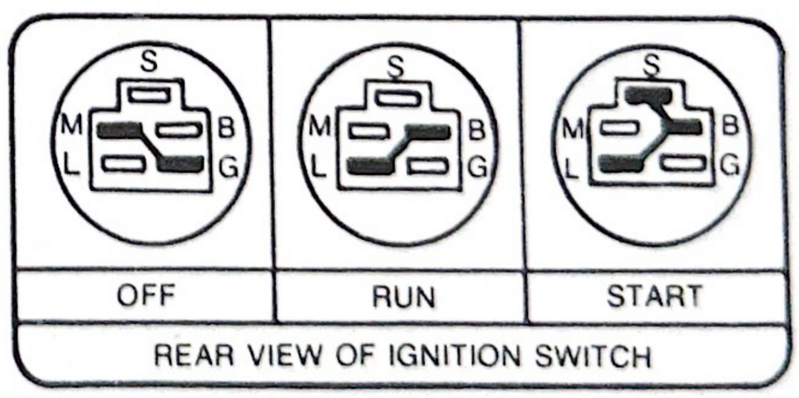

REAR VIEW OF IGNITION SWITCH

SUBURBAN TRACTOR

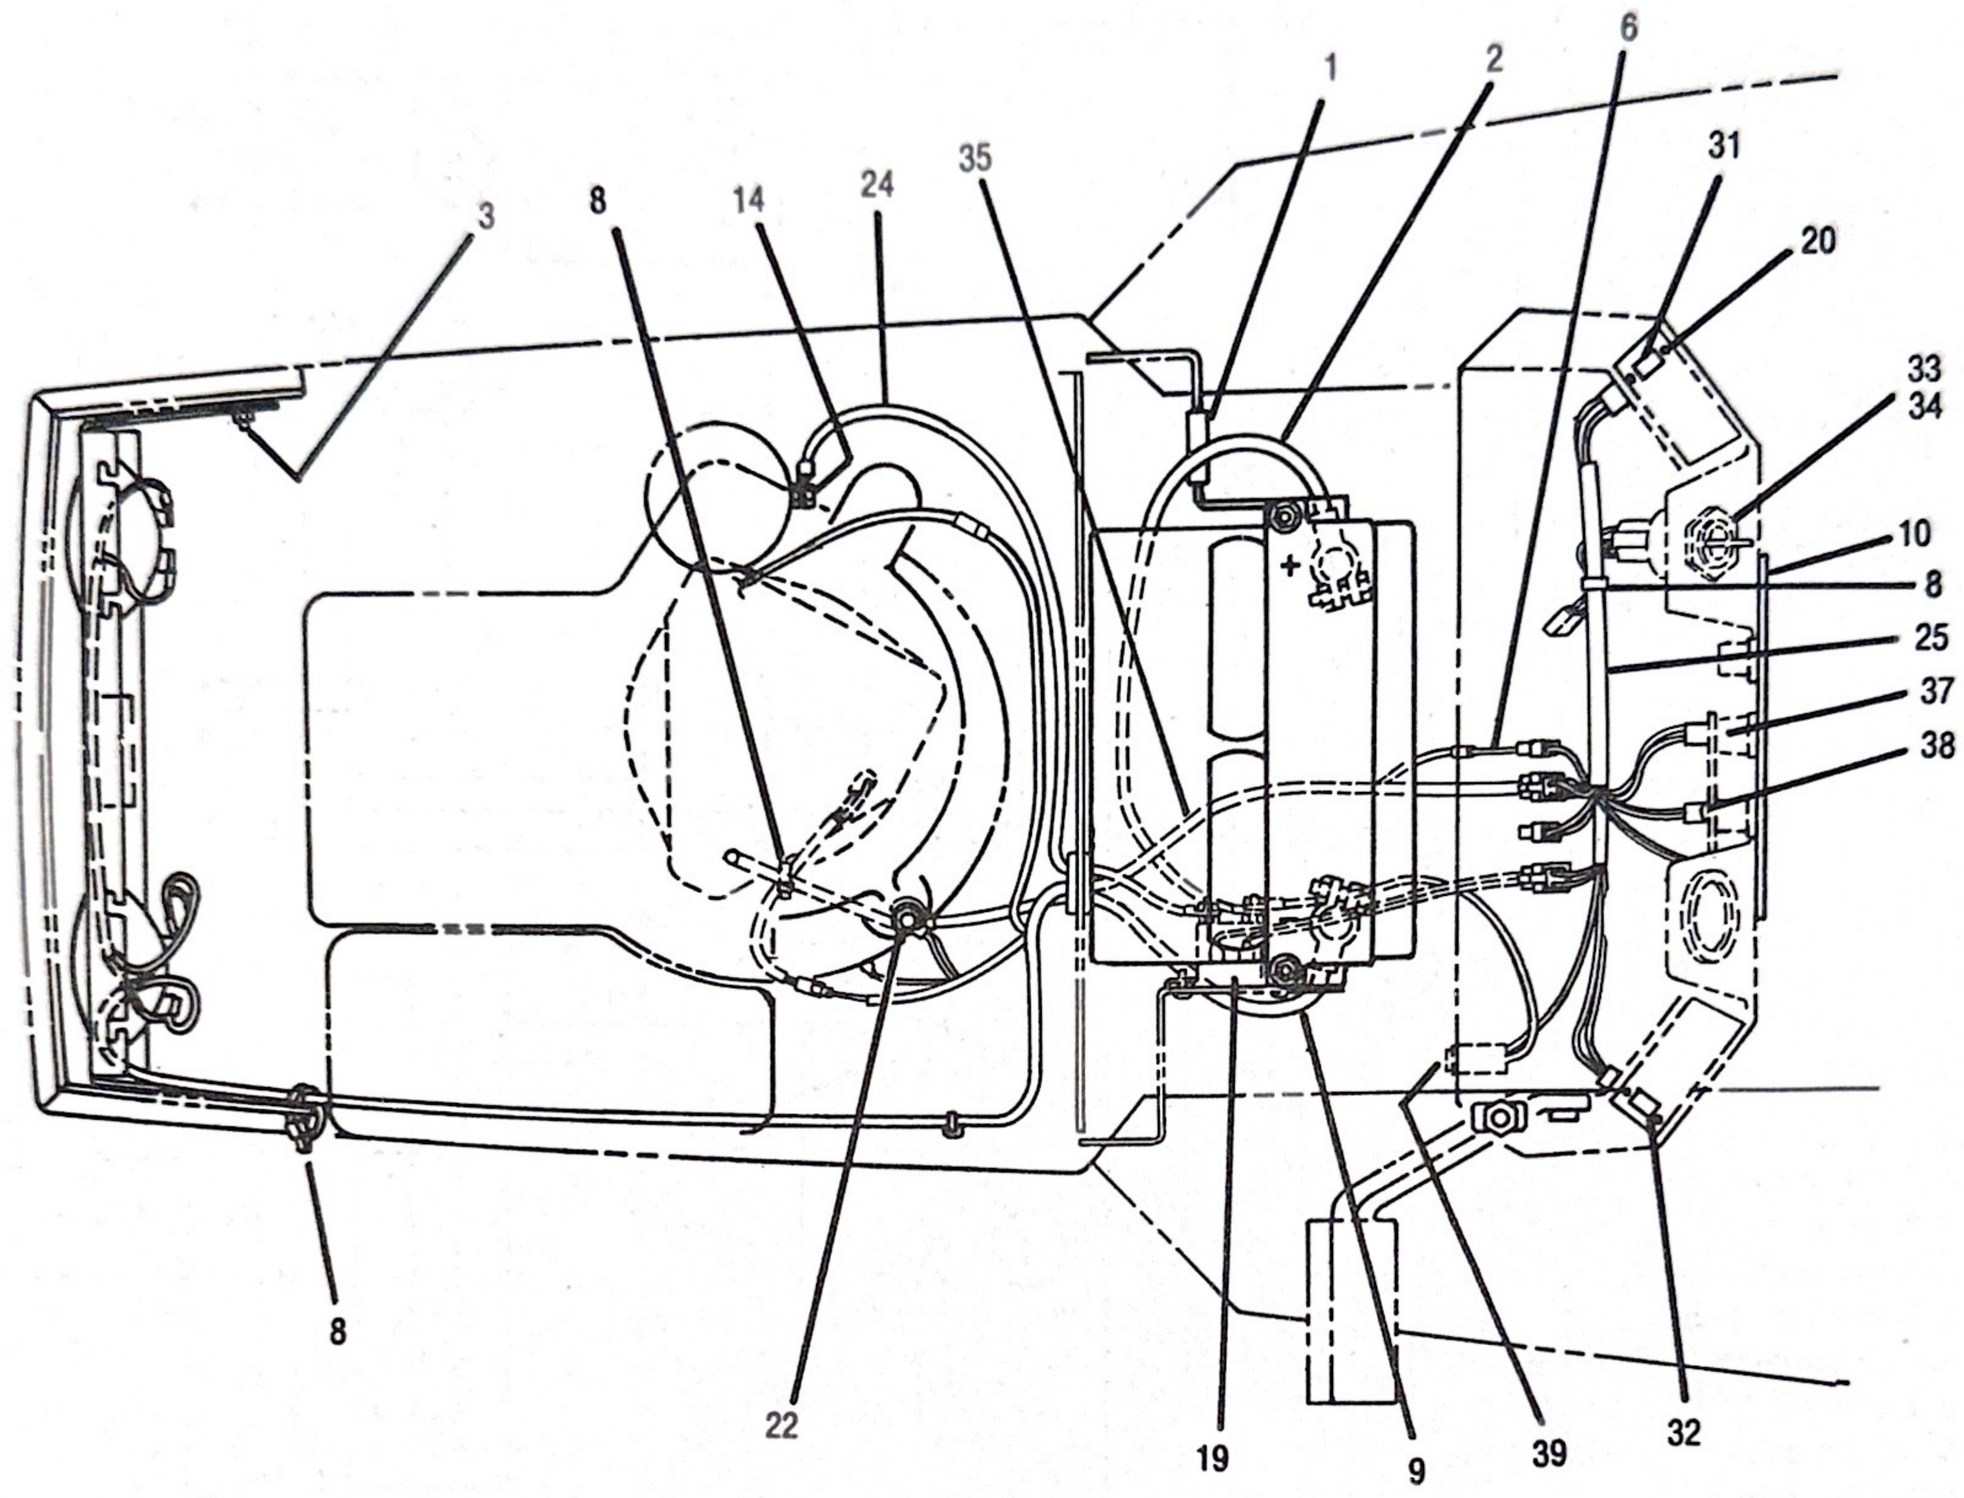

Models 3112 and 3212 S/N 0100101 thru 0299999

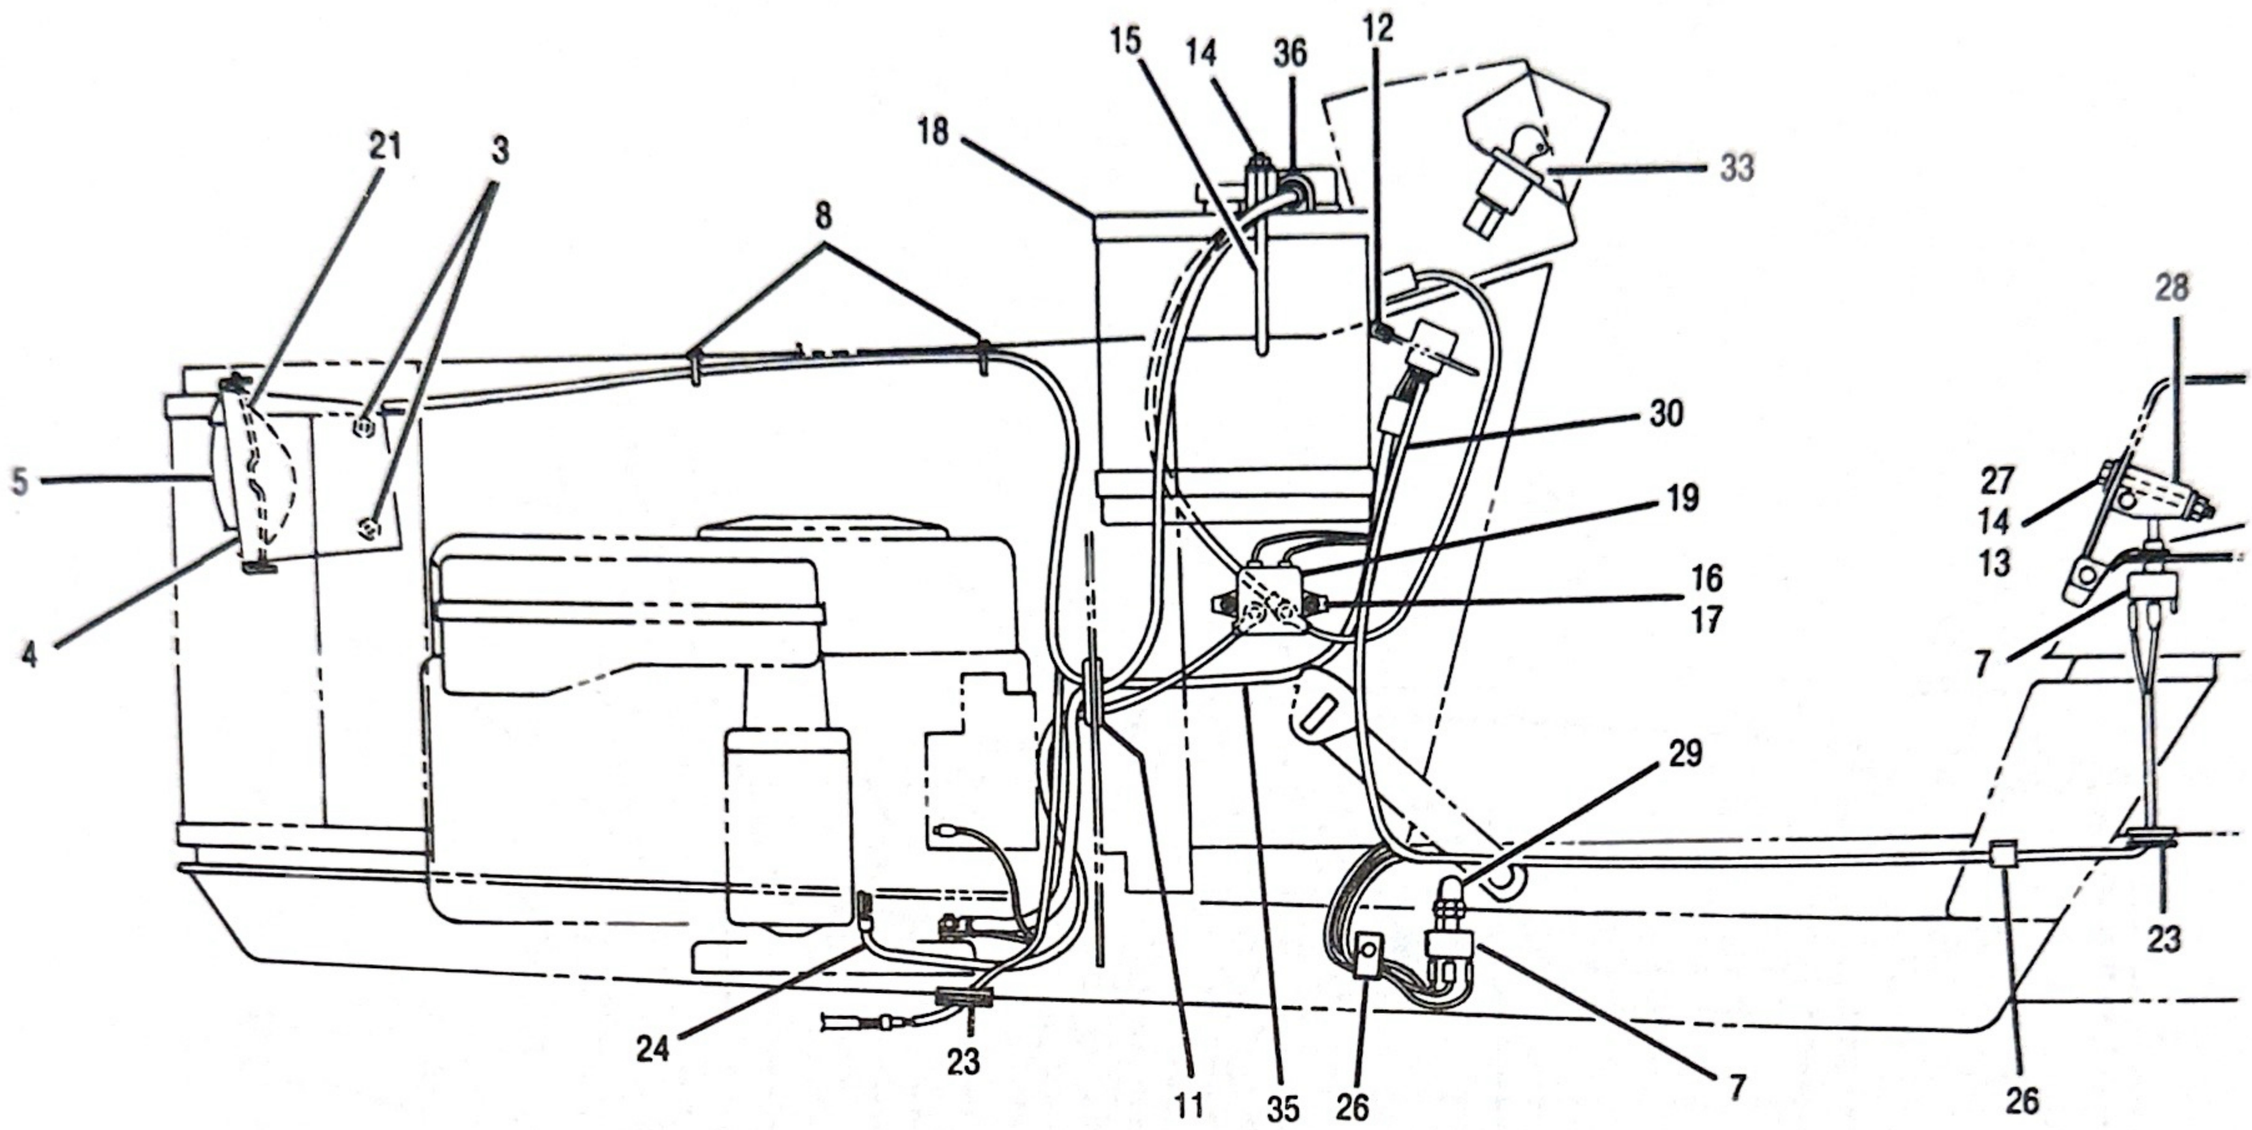

REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D
1	1737454	Wear Strip (1)	1
2	1722732	Battery Cable (Pos.)	1
3 •	1186389	Flange Lock Nut 1/4-20 (3112)	4
4	1744021	Light Support (3112)	1
5	1726435	Headlight (3112)	2
6	1744489	Diode Ass'y (3112)	1
	1752420	Diode Ass'y (3212)	1
7	1742658	Switch	2
8	1735531	Wire Tie	3
9	1744386	Battery Cable (Neg.)	1
10	1752515	Lense (1)	1
	1752516	Lense (2)	1
11	1752809	Grommet	1
12	1744580	Seal Strip	1
13 •	1107381	Flat Washer 1/4	2
14	1734398	Hex Lock Nut 1/4-20	5
15	1742173	J-Bolt	1
16	1115815	Phil. Hd. Screw #10-24 x 5/8	2
17	1185985	Nut #10-24	2
18	1751498	Battery	1
19	1752137	Solenoid	1
20	1750963	Screw 6-32 x 1/2	4
21	1744022	Retainer (3112)	2

REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D
22 •	1186230	Hex Nut 5/16-18	1
23	1748014	Grommet	2
24	1741506	Starter Cable	1
25	1752134	Console Wiring Harness	1
26	1747738	J-Clip	2
27 •	1100089	Hex Screw 1/4-20 x 2-1/2	1
28	1735265	Pivot Block	1
29	1733576	Switch Seal	1
30	1752135	Interlock Harness	1
31	1750976	PTO Switch	1
32	1751496	Light Switch (3112)	1
33	1750979	Ignition Switch (Incl. Ref. 34) (1)	1
	1754250	Ignition Switch (2)	1
34	1718266	Ignition Key (1)	1
	1753986	Ignition Key (2)	1
35	1752421	Harness, Engine (3212)	1
	1752908	Harness, Engine (3112)	1
36	1739631	Cover	1
37	1751572	Bulb	3
38	1186020	Thd Cut Screw 6-32 x 3/8	1
39	1743516	Replacement Fuse, 30A	1

• Common Hardware - Purchase Locally

(1) Serial Number 0100101 thru 0199999
(2) Serial Number 0200101 thru 0299999

SUBURBAN TRACTOR

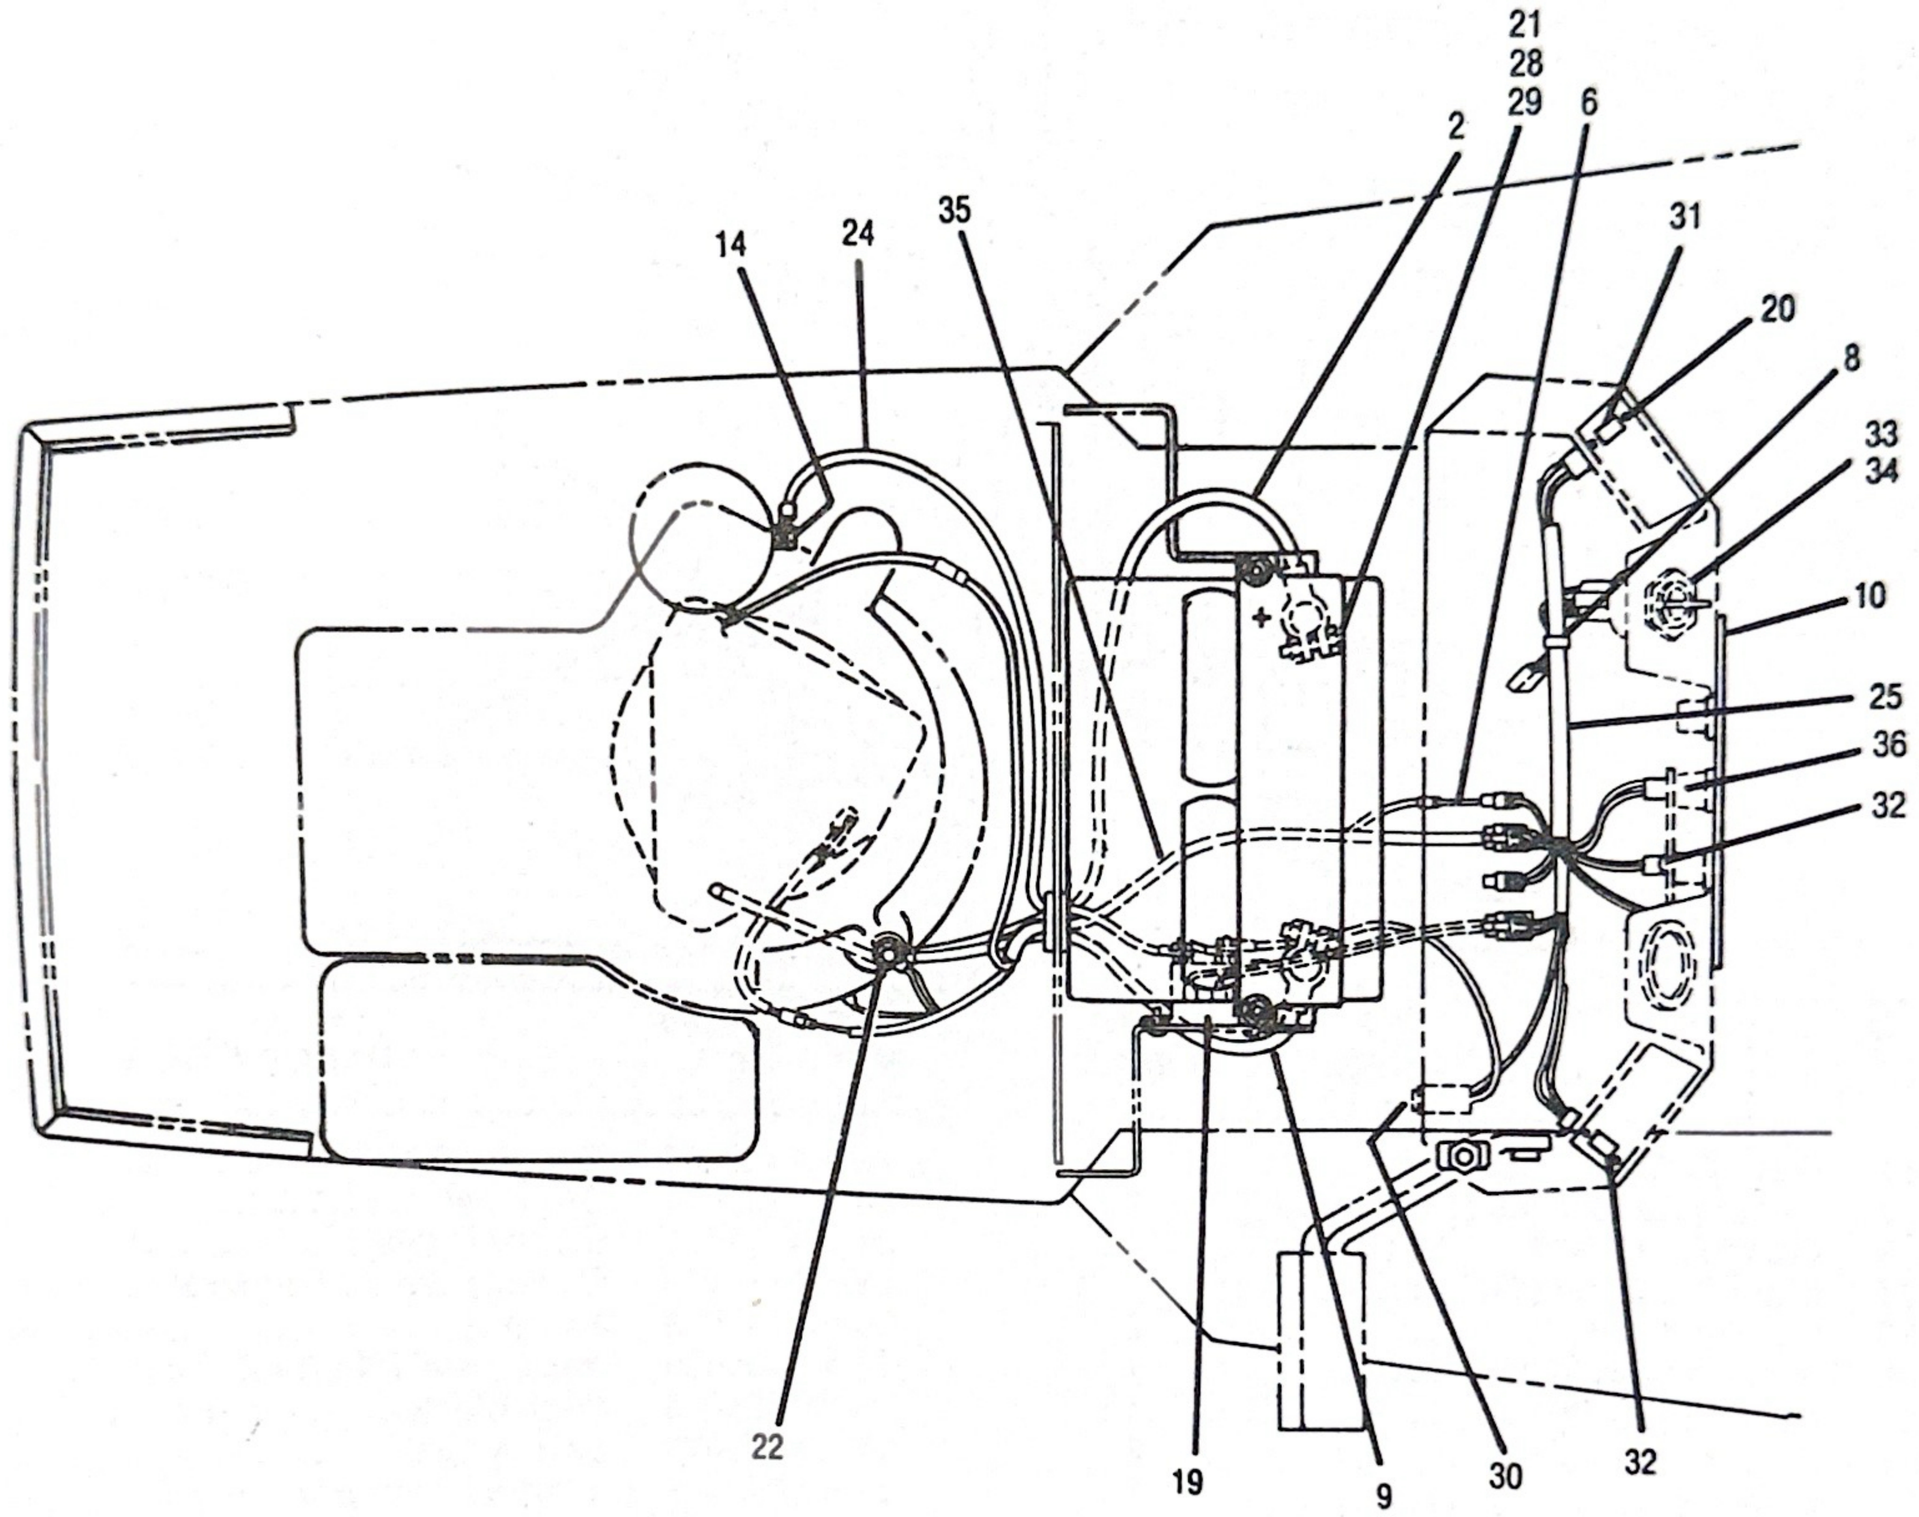

Models 3212 S/N 0300101 thru 0399999

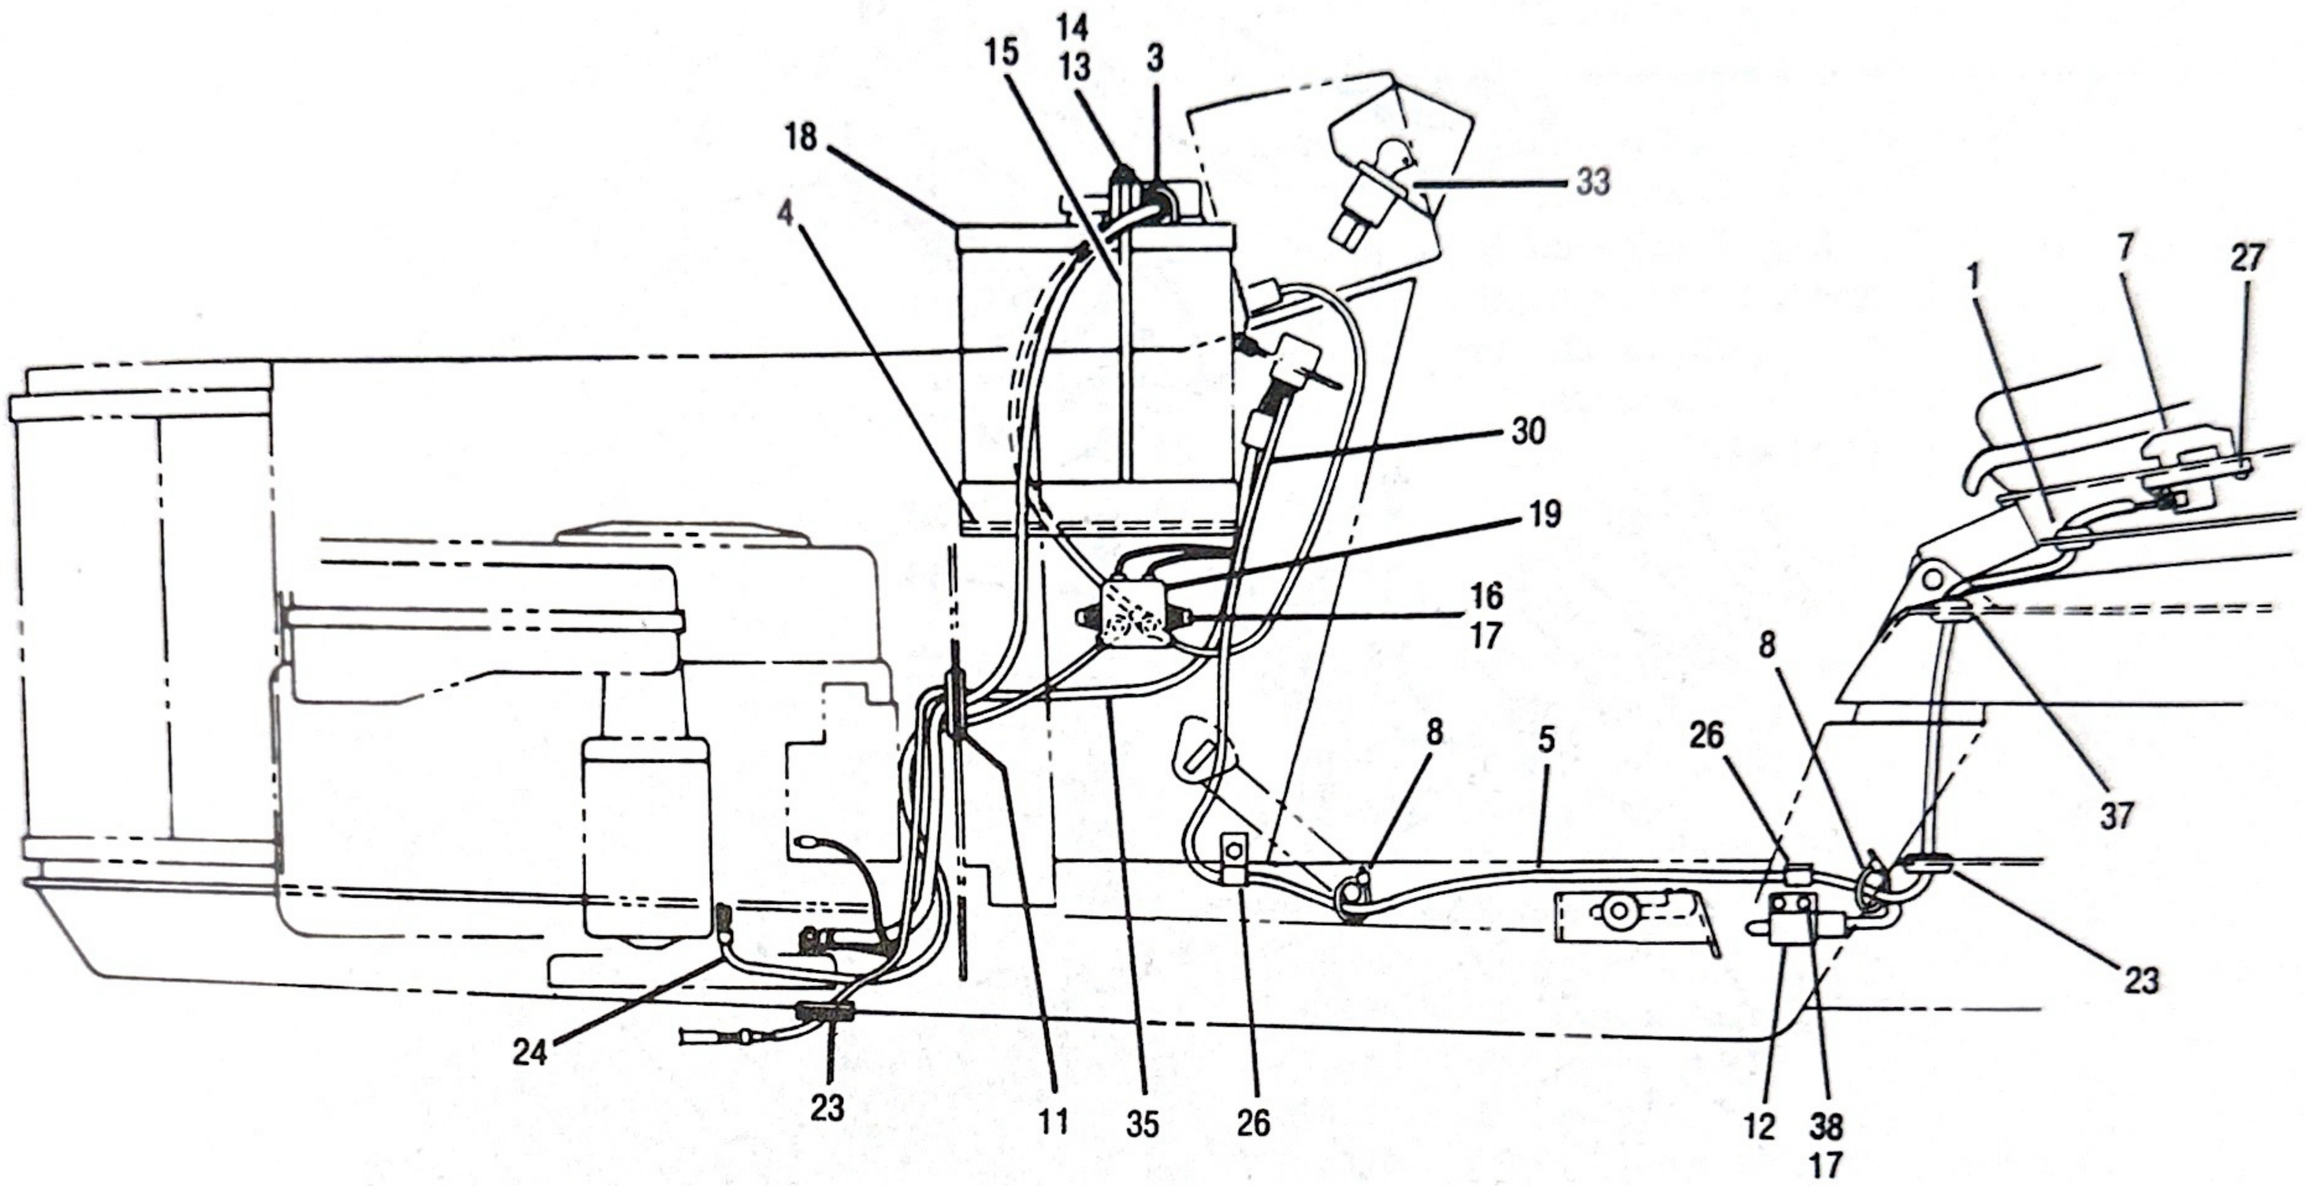

REF. NO.	PART NO.	DESCRIPTION	QTY. REQ.
1	1737454	Wear Strip	1
2	1722732	Battery Cable (Pos.)	1
	1756075	Battery Cable (Neg.) (2)	1
3 •	1186389	Flange Lock Nut 1/4-20 (3112)	4
4	1744021BDG	Light Support (3112)	1
5	1726435	Headlight (3112)	2
6	1744489	Diode Ass'y (3112)	1
	1752420	Diode Ass'y (3212)	1
7	1742658	Switch	2
8	1735531	Wire Tie	3
9	1744386	Battery Cable (Neg.)	1
	1756074	Battery Cable (Pos.) (2)	1
10	1752515	Lense (1)	1
	1752516	Lense (2)	1
11	1752809	Grommet	1
12	1744580	Seal Strip	1
13 •	1107381	Flat Washer 1/4	2
14	1734398	Hex Lock Nut 1/4-20	5
15	1742173	J-Bolt	1
16	1115815	Phil. Hd. Screw #10-24 x 5/8	2
17	1185985	Nut #10-24	2
18	1751498	Battery	1
19	1752137	Solenoid	1
20	1750963	Screw 6-32 x 1/2	4
21	1744022	Retainer (3112)	2
22 •	1186230	Hex Nut 5/16-18	1
23	1748014	Grommet	2
24	1741506	Starter Cable	1
25	1752134	Console Wiring Harness	1
26	1747738	J-Clip	2
27 •	1100089	Hex Screw 1/4-20 x 2-1/2	1
28	1735265	Pivot Block	1
29	1733576	Switch Seal	1
30	1752135	Interlock Harness	1
31	1750976	PTO Switch	1
32	1751496	Light Switch (3112)	1
33	1750979	Ignition Switch (Incl. Ref. 34) (1)	1
	1754250	Ignition Switch (2)	1
34	1718266	Ignition Key (1)	1
	1753986	Ignition Key (2)	1
35	1752421	Harness, Engine (3212)	1
	1752908	Harness, Engine (3112)	1
36	1739631	Cover	1
37	1751572	Bulb	3
38	1186020	Thd Cut Screw 6-32 x 3/8	1
39	1743516	Replacement Fuse, 30A	1

(1) Serial Number 0100101 thru 0199999
(2) Serial Number 0200101 thru 0399999

• Common Hardware - Purchase Locally

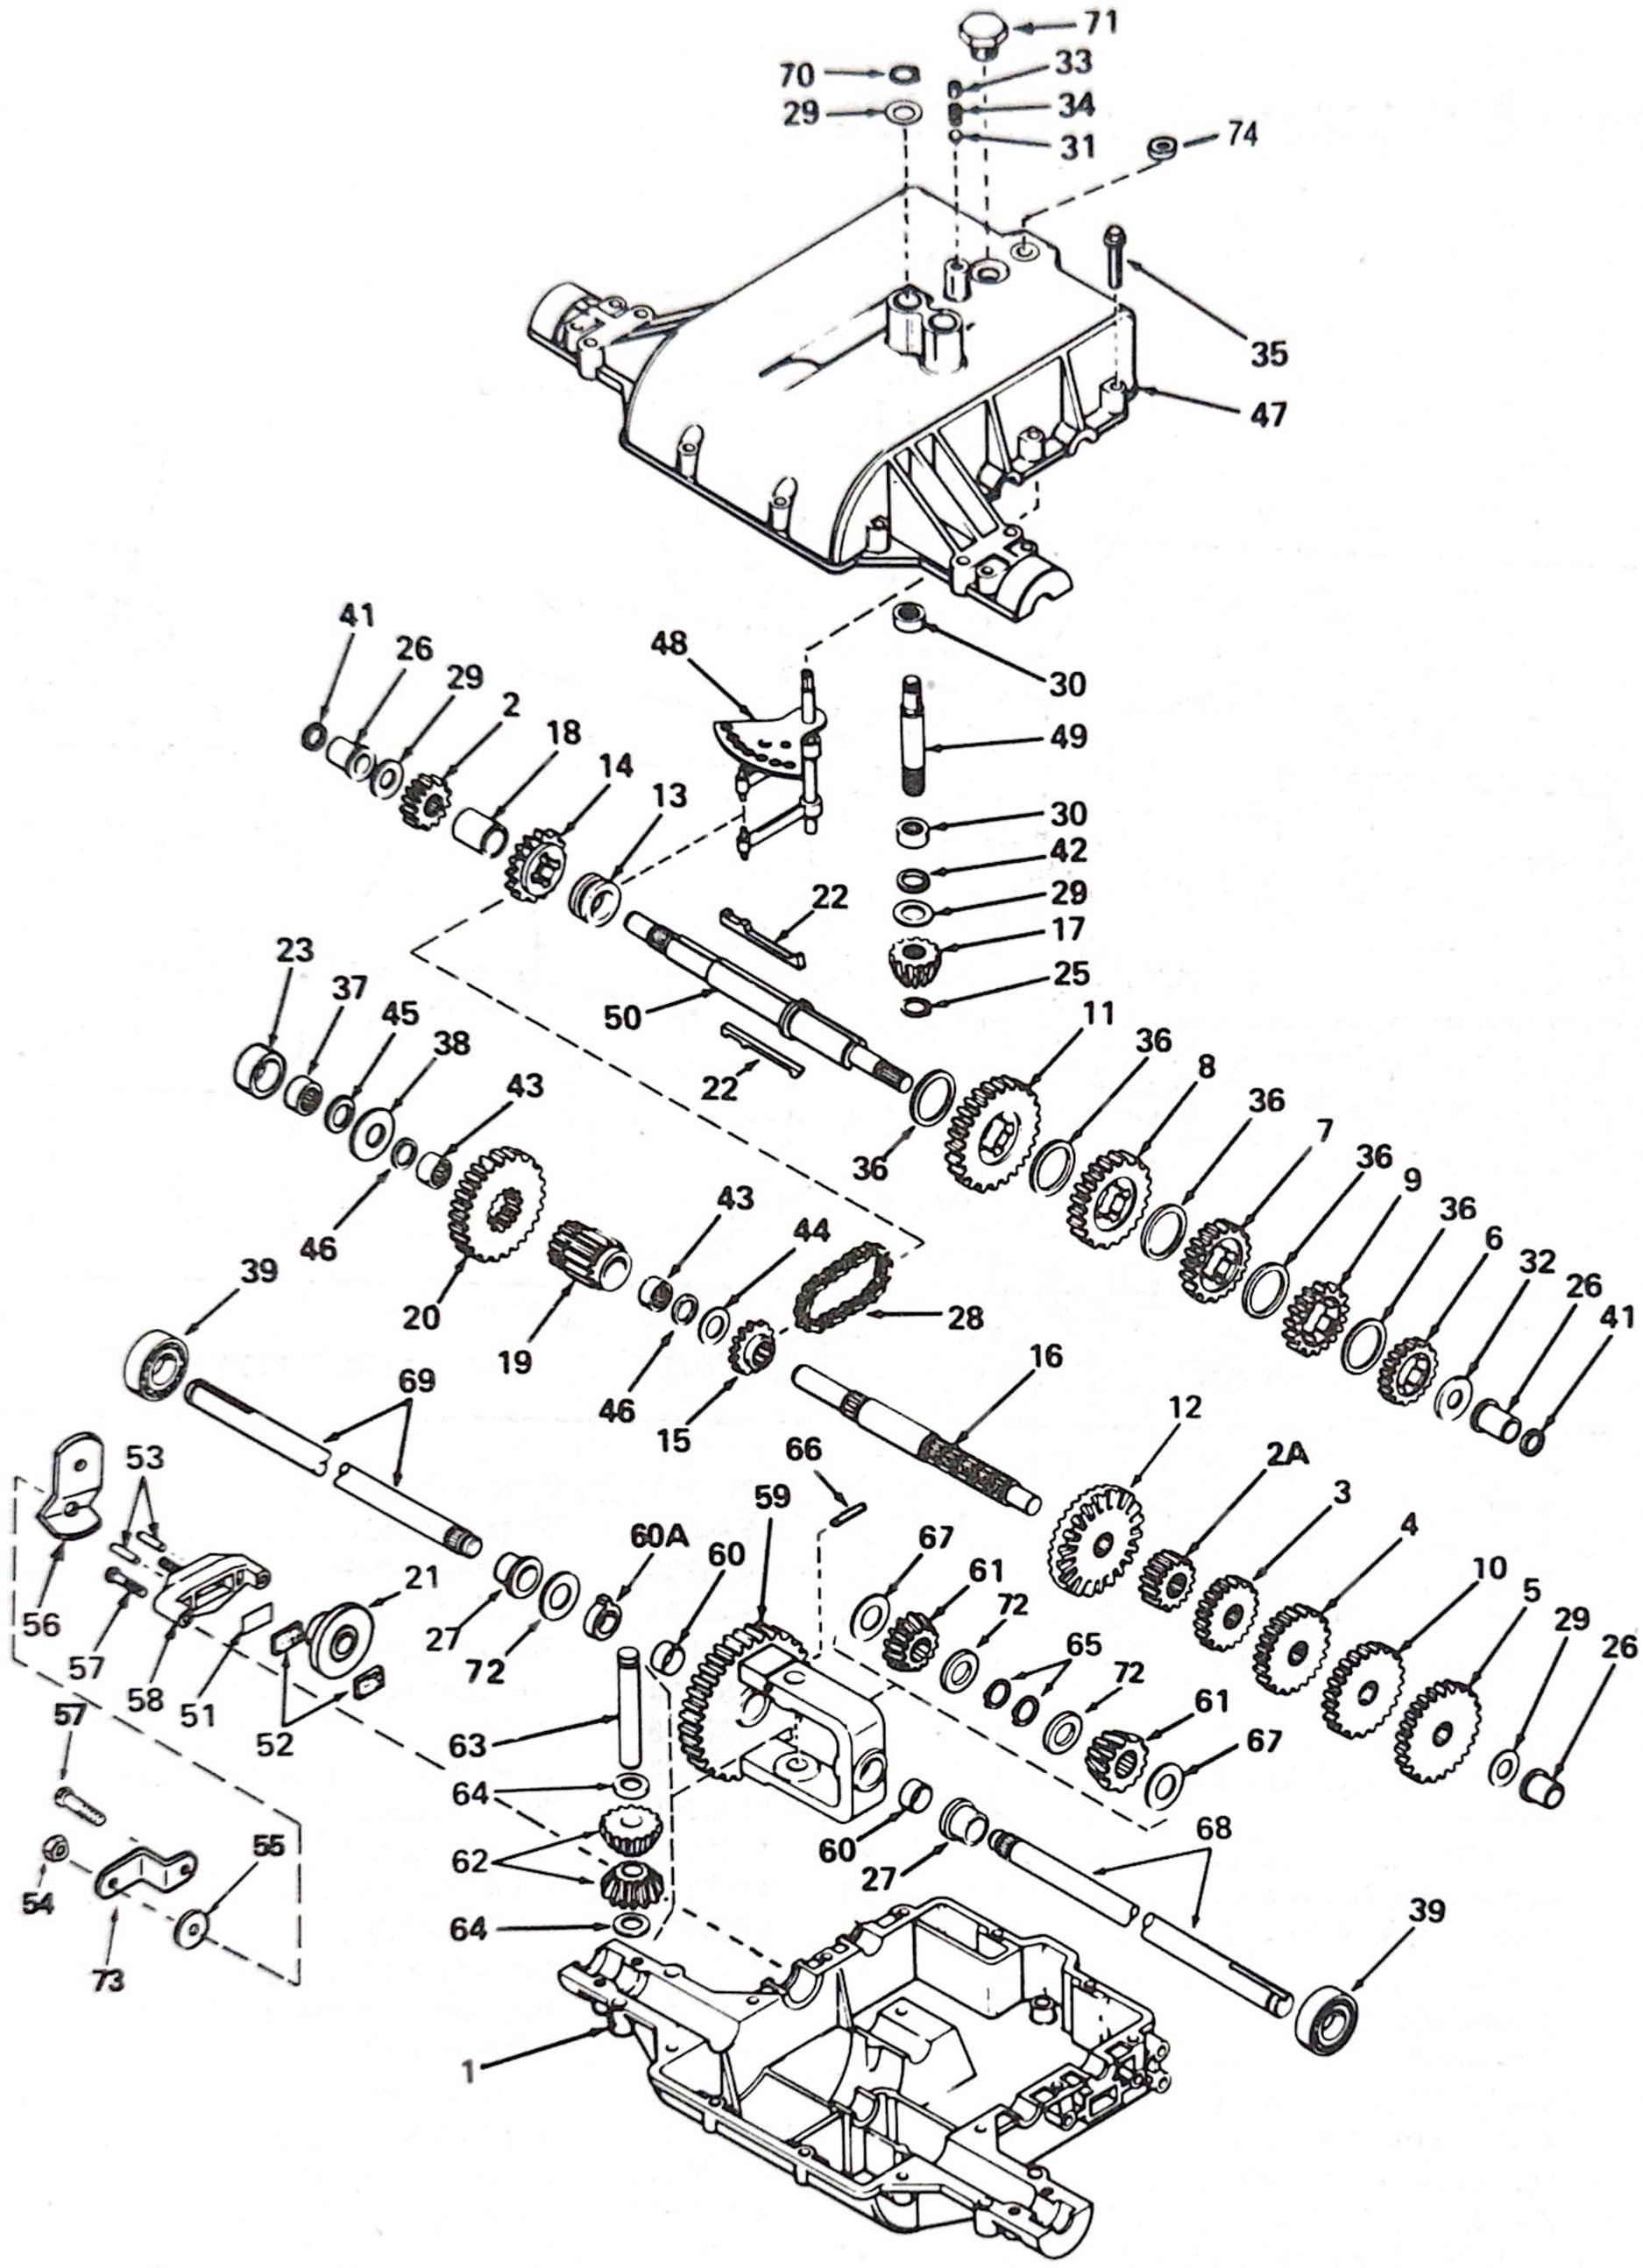

PEERLESS TRANSAXLE MODELS: 801-046 (3112)
842 (3212 S/N 0100101 - 0100367)

ORDER ALL PEERLESS PARTS FROM YOUR NEAREST POWER PRODUCTS TECUMSEH ENGINE DEALER

REF. NO.	PART NO.	DESCRIPTION
1	770071A	Transaxle Case
2	778136	Spur Gear (15 Teeth)
2A	778145	Spur Gear (12 Teeth)
3	778126A	Spur Gear (20 Teeth)
4	778127A	Spur Gear (25 Teeth)
5	778163	Spur Gear (31 Teeth)
6	778162	Spur Gear (19 Teeth)
7	778123A	Spur Gear (25 Teeth)
8	778124A	Spur Gear (30 Teeth)
9	778122A	Spur Gear (22 Teeth)
10	778128A	Spur Gear (28 Teeth)
11	778146A	Spur Gear (37 Teeth)
12	778154	Bevel Gear (42 Teeth) (801)
	778137A	Bevel Gear (42 Teeth) (842)
13	784266	Shift Collar
14	786060	Sprocket (14 Teeth)
15	786061	Sprocket (10 Teeth)
16	776204	Counter Shaft (801)
	776181	Counter Shaft (842)
17	778153	Input Bevel Pinion (801)
	778113A	Input Bevel Pinion (842)
18	786074	Spacer
19	778138	Output Pinion
20	778139	Output Gear
21	790003	Brake Disk
22	792089A	Key
23	786075	Spacer (842)
25	788040	Retaining Ring
26	780105A	Flanged Bushing
27	780118A	Flanged Bushing
28	786062A	Roller Chain (No. 41 Chain, 22 Links)
29	780072	Thrust Washer
30	780122	Needle Bearing (801)
	780086	Needle Bearing (842)
31	792077	Steel Ball
32	780109	Thrust Washer
33	792078	Set Screw 3/8-16 x 3/8
34	792079	Spring
35	792073	Hex Hd. Thread Forming Screw, 1/4-20 x 1-1/4
36	780108	Thrust Washer
37	780121	Ball Bearing (801)
	780111	Needle Bearing (842)
38	780113	Flat Washer
39	780119	Ball Bearing
41	788051	Square Cut Ring
42	788057	Square Cut Ring (801)
	792001	Square Cut Ring (842)
43	780112	Needle Bearing
44	780114	Flat Washer
45	788052	Square Cut Seal (842)
46	788053	Square Cut Ring
47	772082	Transaxle Cover (801)
	772077B	Transaxle Cover (842)
48	784290	Shift Rod & Fork Assembly
49	776226	Input Shaft (801)
	776135	Input Shaft (842)
50	776183A	Brake Shaft
51	790007	Brake Pad Plate
52	790006	Brake Pad
53	786026	Dowel Pin
54	792075	Locknut 5/16-24
55	792076	Flat Washer
56	790031	Brake Lever
57	792073	Hex Hd. Thread Forming Screw, 1/4-20 x 1-1/4
58	790025	Brake Pad Holder
59	778053A	Differential Gear Assembly (Incl. 1 of No. 60)
60	780064	Bushing
60A	780120	Bushing
61	778166	Bevel Gear (801)
	778221	Bevel Gear (842)
62	778131	Bevel Pinion (801)
	778068	Bevel Pinion (842)
63	786034	Drive Pin
64	780065	Thrust Washer
65	792109	Retaining Ring (842)
	792018	Retaining Ring (801)
66	792040	Roll Pin
67	780001	Thrust Washer
68	774670	Axle (15-1/18" Long)
69	774669	Axle (13-3/16" Long)
70	792035	Retaining Ring
71	792074	Hex Hd. Plug 9/16-18 Thread
72	780014	Thrust Washer
73	786086	Bracket

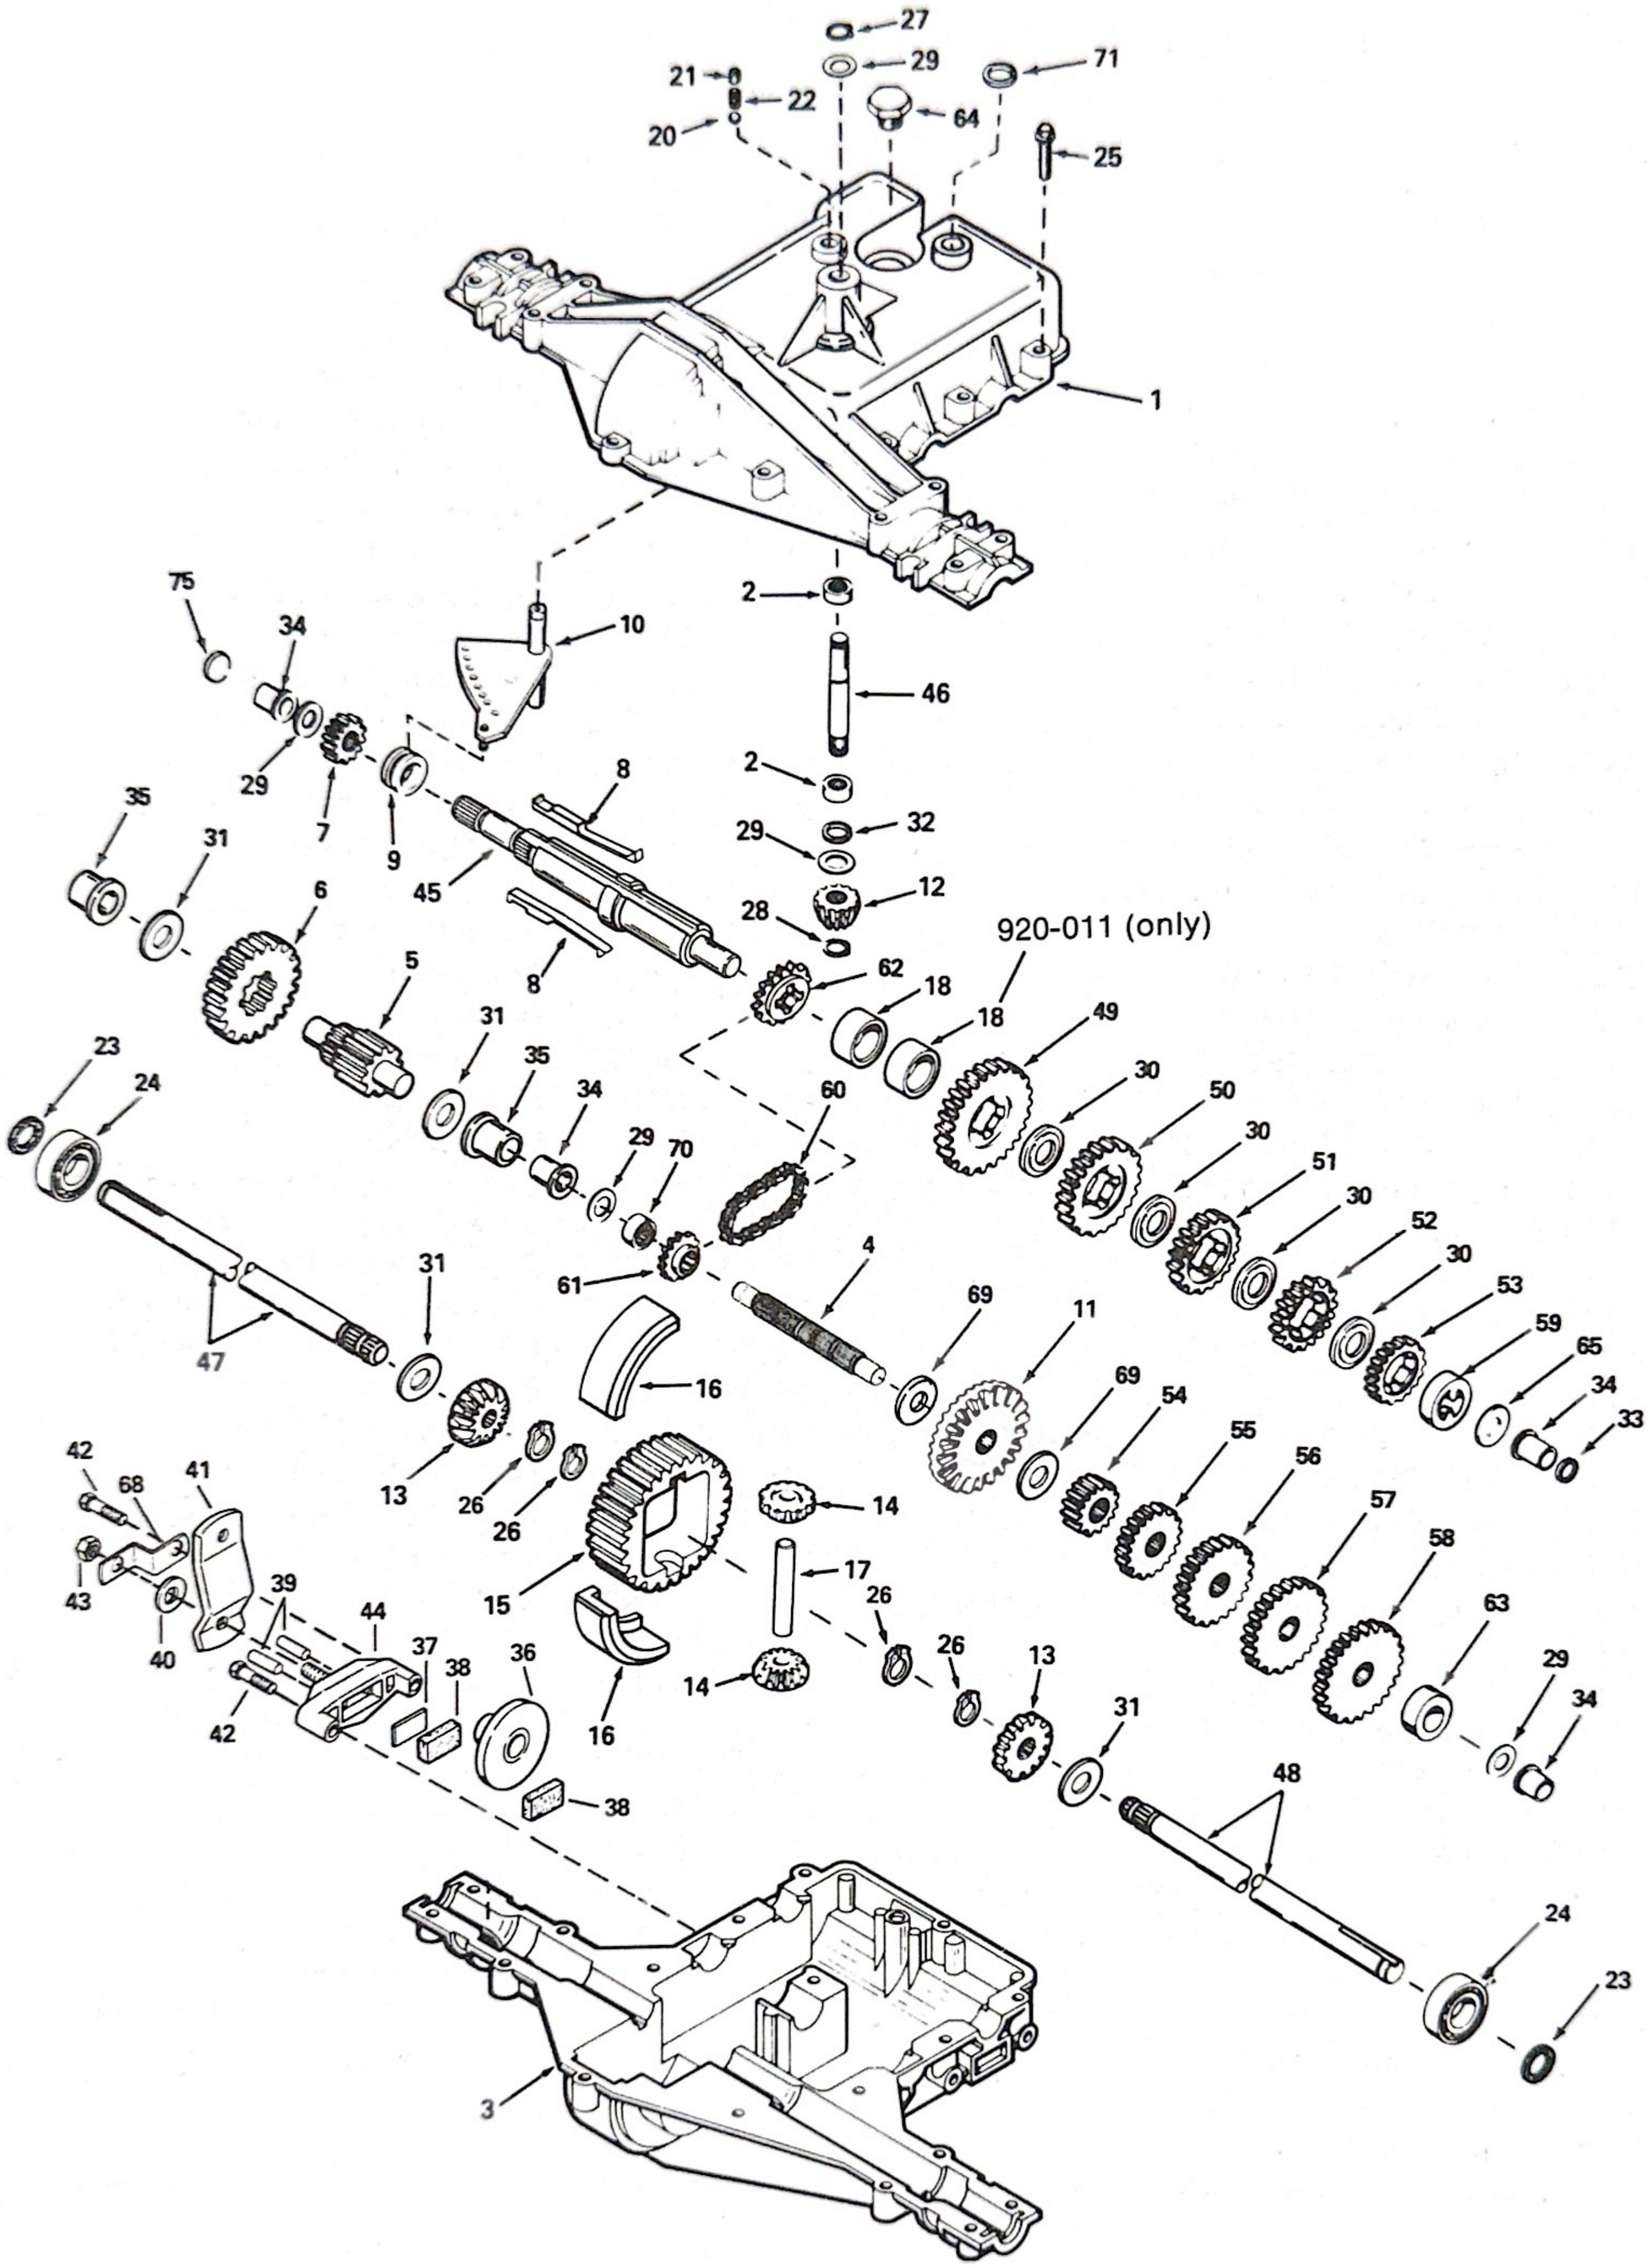

PEERLESS TRANSAXLE MODEL: 920-011 (3212 S/N 0100368 - 0299999)
(920-11A (3212 S/N 0300101 and later)

ORDER ALL PEERLESS PARTS FROM YOUR NEAREST POWER PRODUCTS TECUMSEH ENGINE DEALER

REF. NO.	PART NO.	DESCRIPTION
1	772094	Cover, Transaxle
2	780086	Bearing, Needle
3	1100821	Case, Transaxle (A)
	770082	Case, Transaxle (B)
4	776260	Shaft, Counter
5	776219	Shaft & Pinion Ass'y, Output
6	778139	Gear, Output
7	778136	Gear, Spur (15 teeth)
8	792123A	Key
9	784216	Collar, Shifter
10	784337A	Rod & Fork Ass'y, Shift
11	778229	Gear, Bevel (42 teeth)
12	778113A	Bevel, Pinion, Input
13	778221	Gear, Bevel
14	778068	Gear, Bevel Pinion
15	778165	Gear, Ring
16	786101	Block, Bearing
17	786040	Pin, Drive
18	786121	Spacer (2) (A)
	786102	Spacer (B)
20	792077	Ball, Steel (5/16" dia.)
21	792078	Set Screw, 3/8-16 x 3/8
22	792079	Spring
23	788061	Ring, Felt
24	780119	Bearing, Ball
25	792073	Screw, Flanged Hex Hd. Thread Forming, 1/4-20 x 1-1/4
26	792125	Ring, Retainer (Pkg. of 2) (4 Required)
27	792035	Ring, Retainer
28	788040	Ring, Retainer
29	780072	Washer, Thrust
30	780108	Washer, Thrust
31	780001	Washer
32	792001	"O" Ring
33	788051	Seal, Square Cut (A)
34	780105A	Bushing, Flanged
35	780118A	Bushing, Flanged
36	790003	Disk, Brake
37	790007	Plate, Brake Pad
38	790006	Pad, Brake
39	786026	Pin, Dowel
40	792076	Washer, Flat
41	790031	Lever, Brake
42	792073	Screw, Flanged Hex Hd. Thread Forming, 1/4-20 x 1-1/4
43	792075	Nut, Lock, 5/16-24
44	790025	Holder, Brake Pad
45	776267	Shaft, Brake
46	776226	Shaft, Input
47	774697	Axle (11-13/16" Long)
48	774738	Axle (16-7/16" Long)
49	778191	Gear, Spur (37 teeth)
50	778124A	Gear, Spur (30 teeth)
51	778123A	Gear, Spur (25 teeth)
52	778122A	Gear, Spur (22 teeth)
53	778162	Gear, Spur (19 teeth) (A)
	778209	Gear, Spur (19 teeth) (B)
54	778230	Gear, Spur (12 teeth)
55	778126A	Gear, Spur (20 teeth)
56	778127A	Gear, Spur (25 teeth)
57	778128A	Gear, Spur (28 teeth)
58	778163	Gear, Spur (31 teeth)
59	786072	Spacer
60	786062A	Chain, Roller (No. 41 Chain, 22 Links)
61	786061	Sprocket (10 teeth)
62	786124	Sprocket (14 teeth)
63	786071	Spacer
64	792074	Plug, Hex Hd. 9/16-18 Thread
65	780109	Washer, Thrust
68	786086	Bracket, Brake Lever
69	780051	Washer, Thrust
70	786118	Spacer
71	788069	Seal, Square Cut
75	786116	Disk

(A) 920-011
(B) 920-011A