

Bolens®

Leaf Bag Adapter Kit

1739685
(Model 6887)

Installation Instructions With Parts List

1. Position one support brackets (A) Figure 1 with the leg up and to the rear on the outside of each handle just below the console. Secure each support bracket with two 1/4-20 x 1-1/4 hex capscrews and two 1/4-20 hex locknuts supplied.

NOTE: Install the capscrews with the heads to the outside of the handles.



2. Insert the straight end of bag rod hanger (B) into support rod coupling (C).

Align holes in coupling and hanger (B) and secure with 1/8 x 1-1/4 cotter pin (D).

3. Install the above assembly into support brackets (A) from the right side. Secure with two spring cotters (E) on each side of left support bracket.

4. Open the mower discharge door and install the chute over the discharge opening. Secure with the lock pins on the deck.

5. Position the end of extension rod (F) Figure 2 with the 90° bend, through the lower or smaller diameter hole of upright leg of the bag hanger assembly (G). Insert the end of the extension rod through the hole in the bag hanger assembly and secure with 3/32 x 3/4 cotter pin (H).

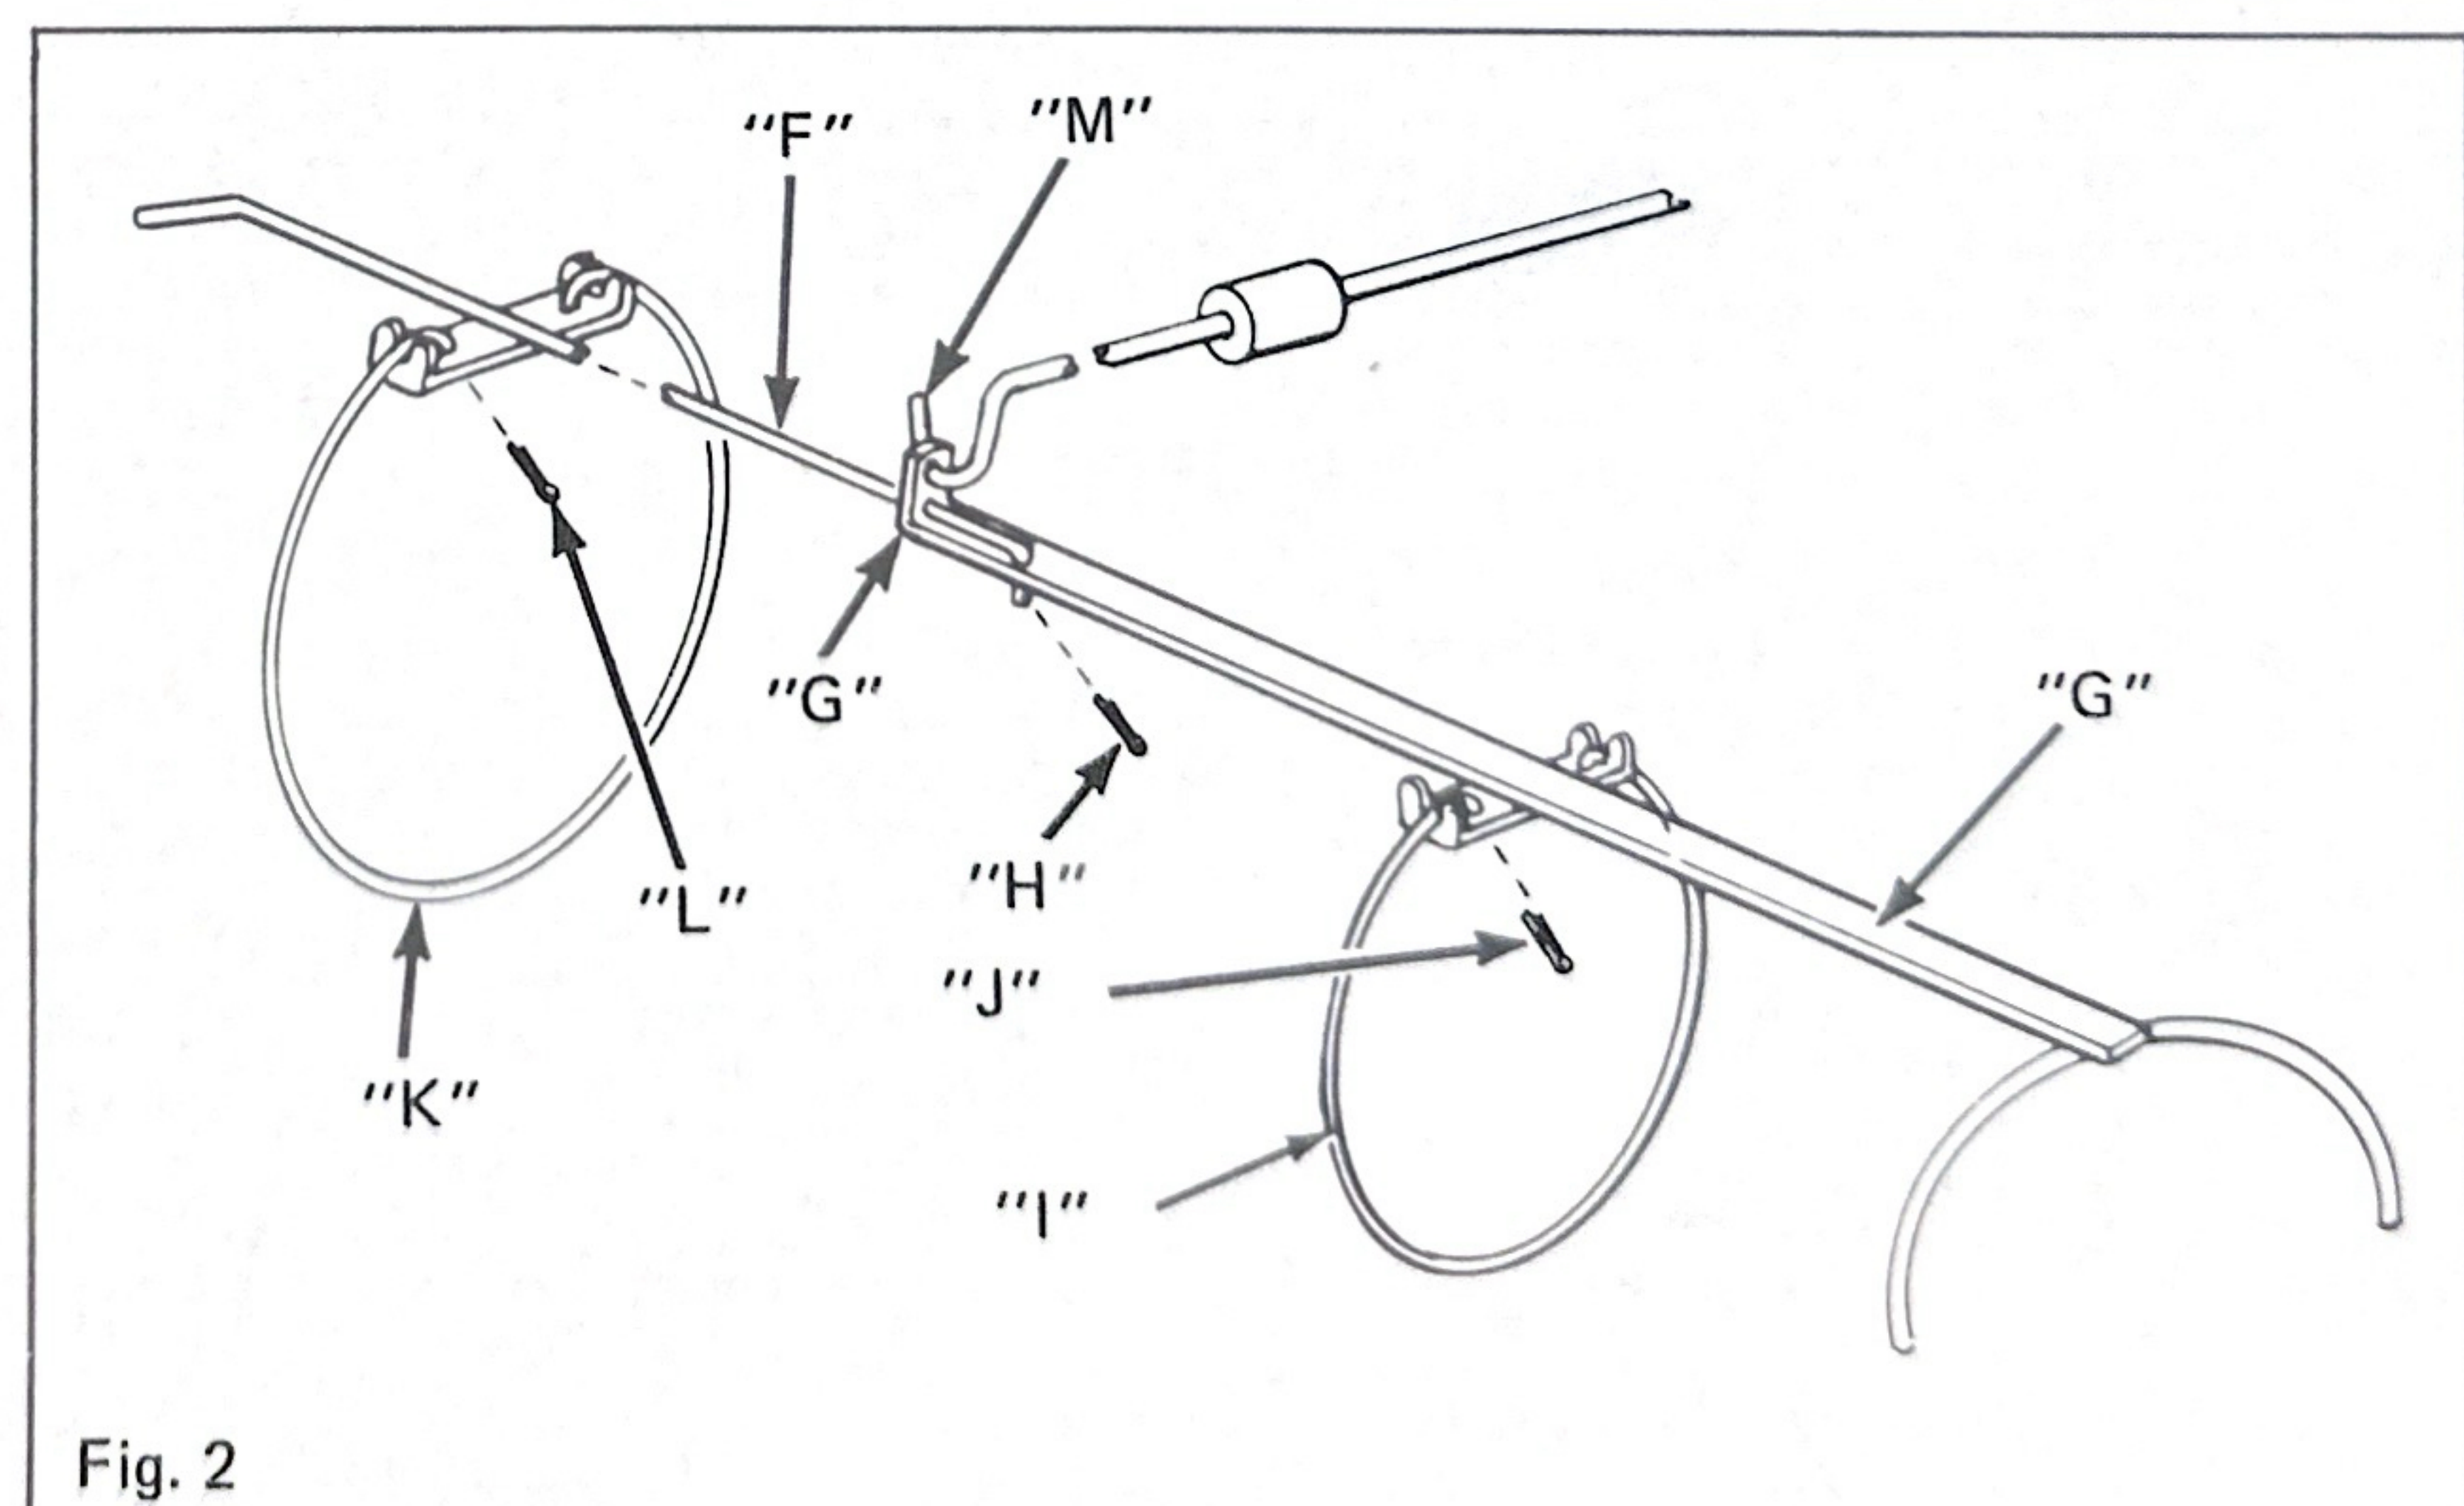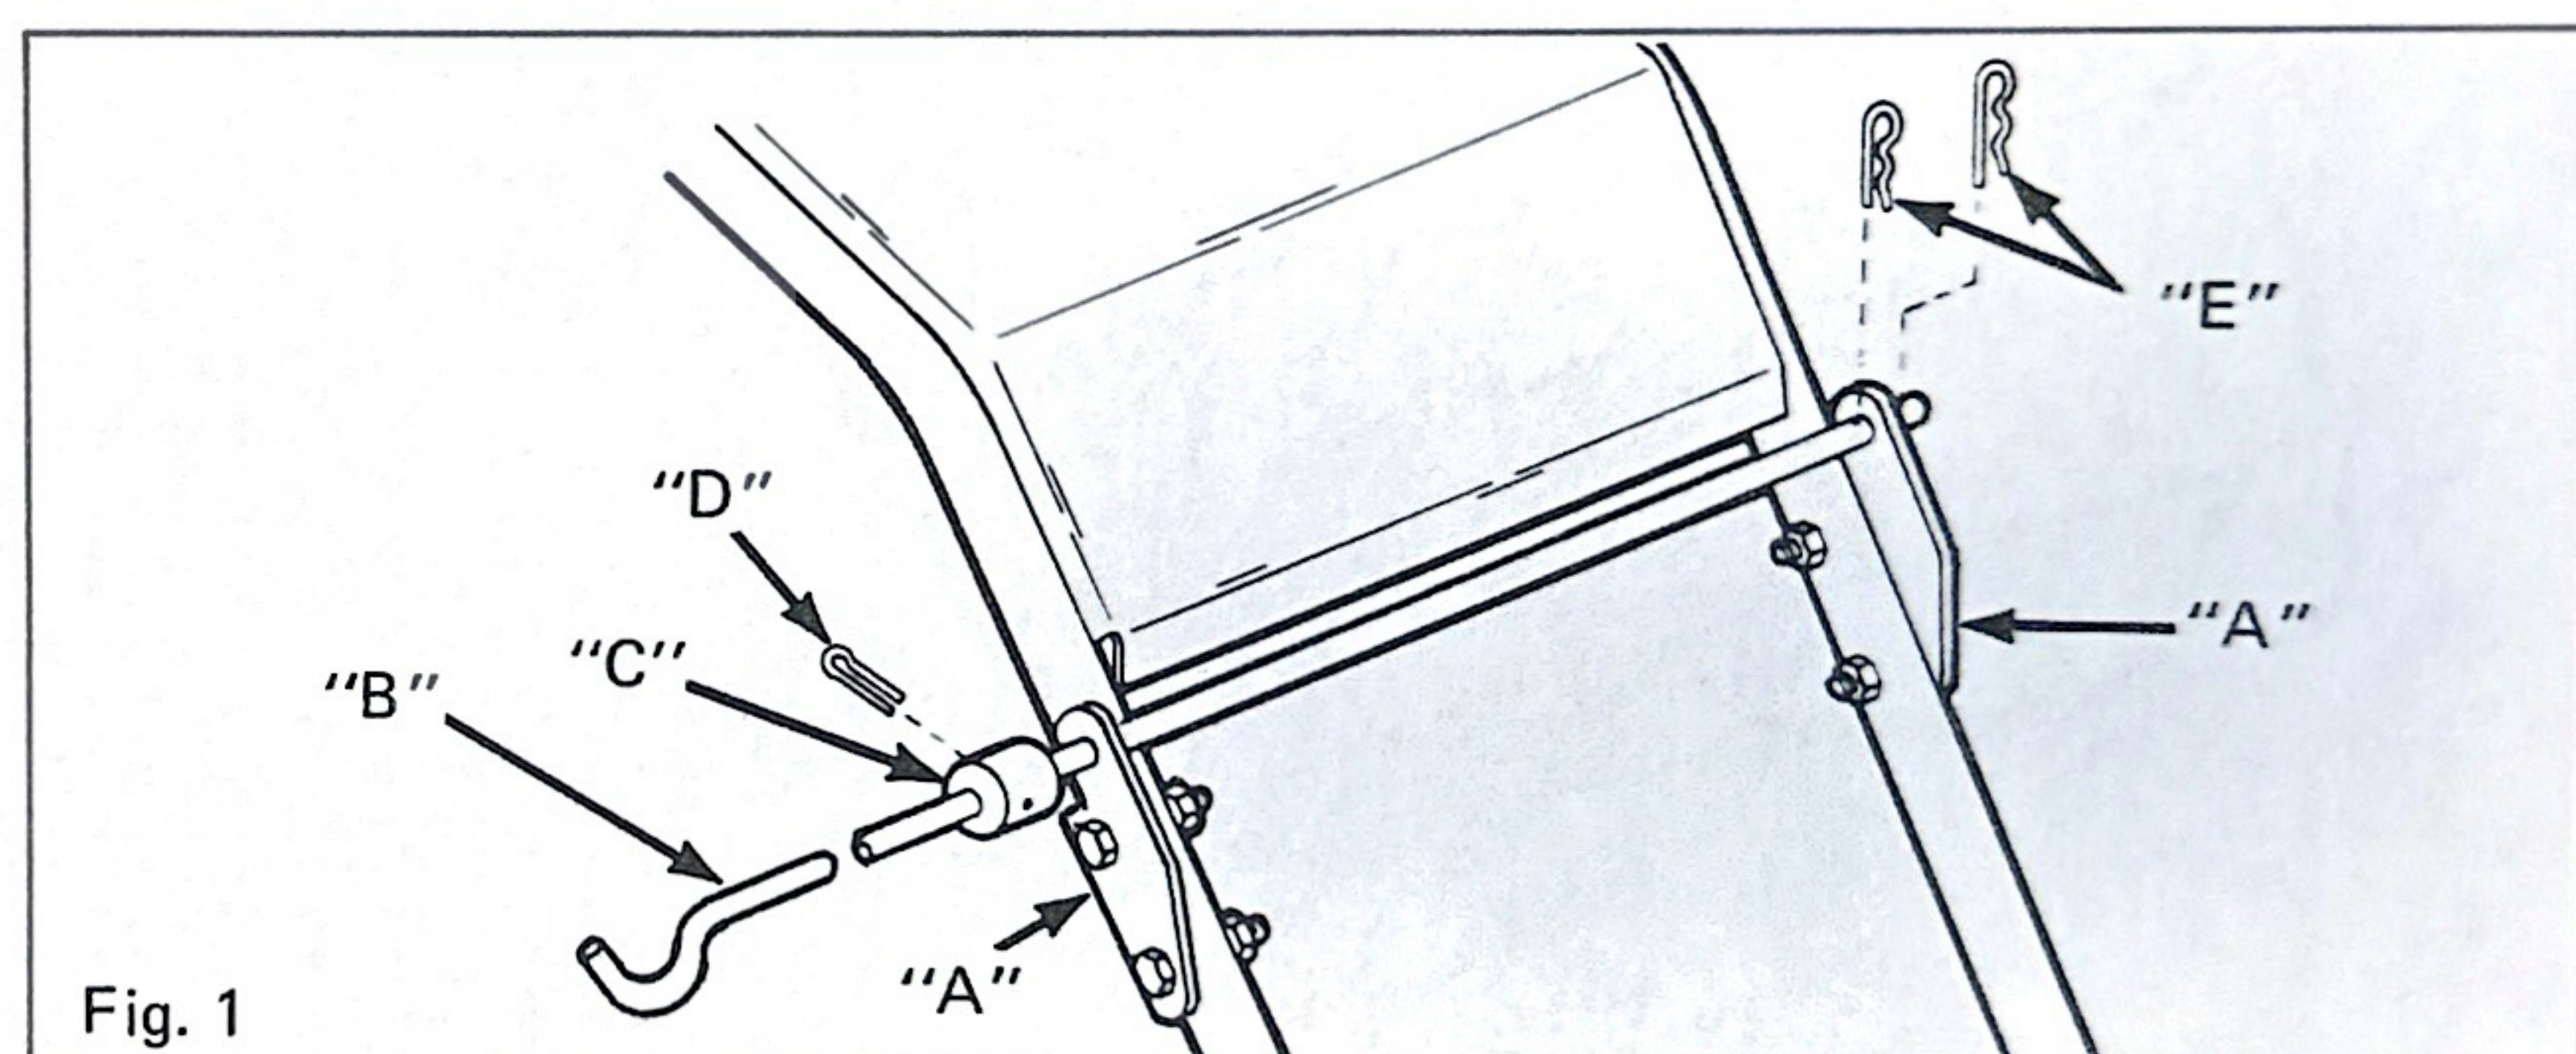

6. Place the hooks of the smaller diameter ring (I) Figure 2 into the holes of the ring support in the center of the bag hanger assembly. Be sure to position the ring into the slots of the ring support. Secure with 3/32 x 3/4 cotter pins (J).

7. Place the hooks of the larger diameter ring (K) into the holes of the ring support




on the end of the assembly. Position the ring into the slots of the ring support. Secure with 3/32 x 3/4 cotter pins (L).

8. Insert the bag hanger assembly into the leaf bag through the zippered end. The half ring should be inserted first.

9. The 90° leg of the bag support

assembly must extend through the opening in the top middle of the bag. The large hole in this leg should be placed over hook (M) of the bag hanger.

10. Install the bag onto the discharge chute. The half ring should seat on top of the discharge chute just forward of the flange.

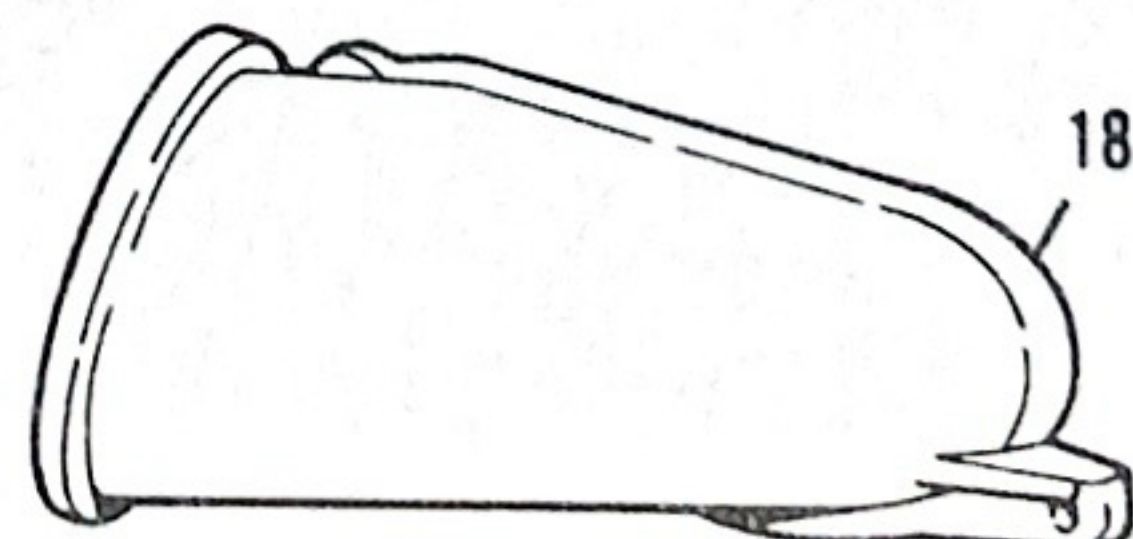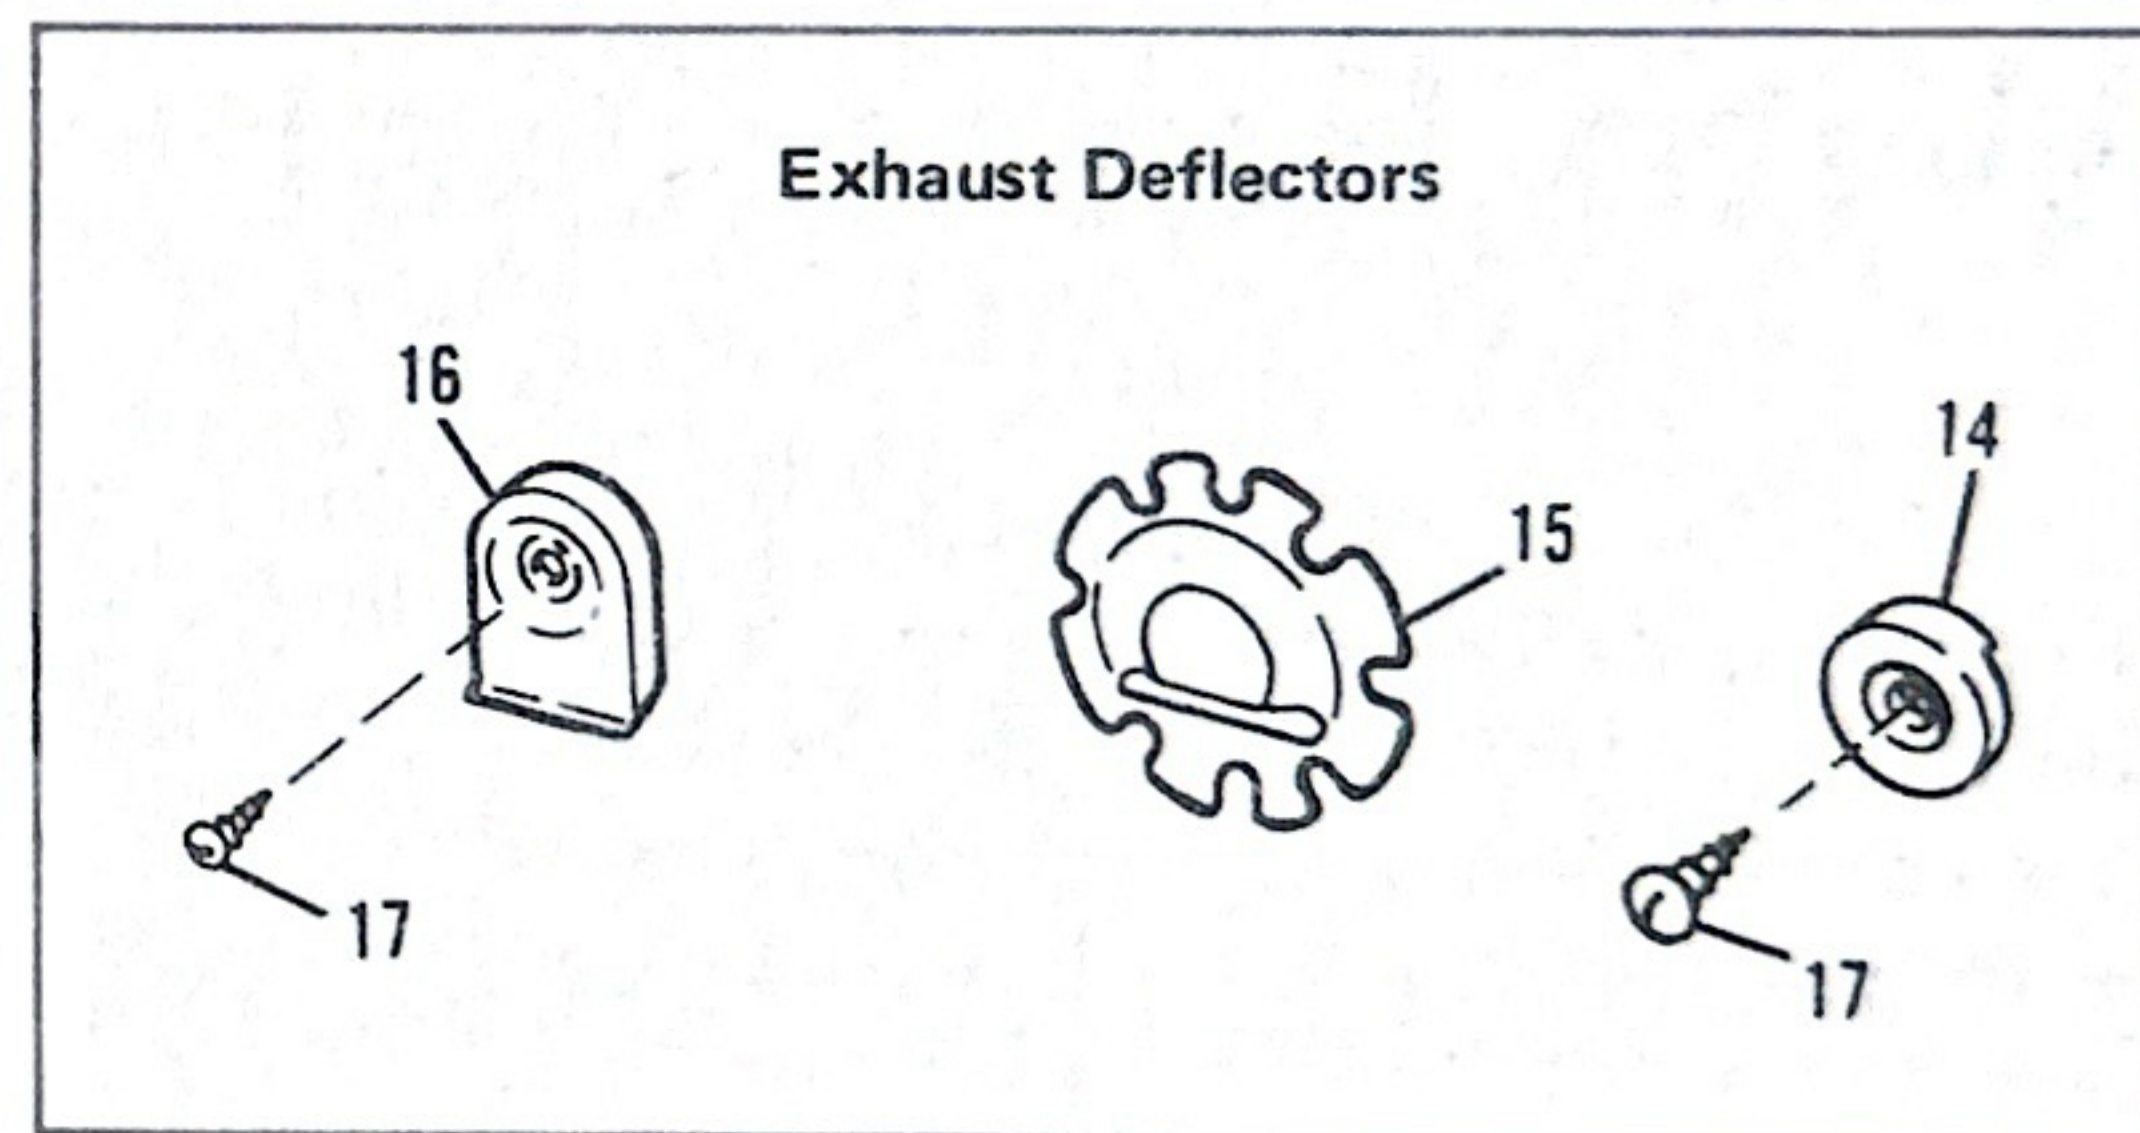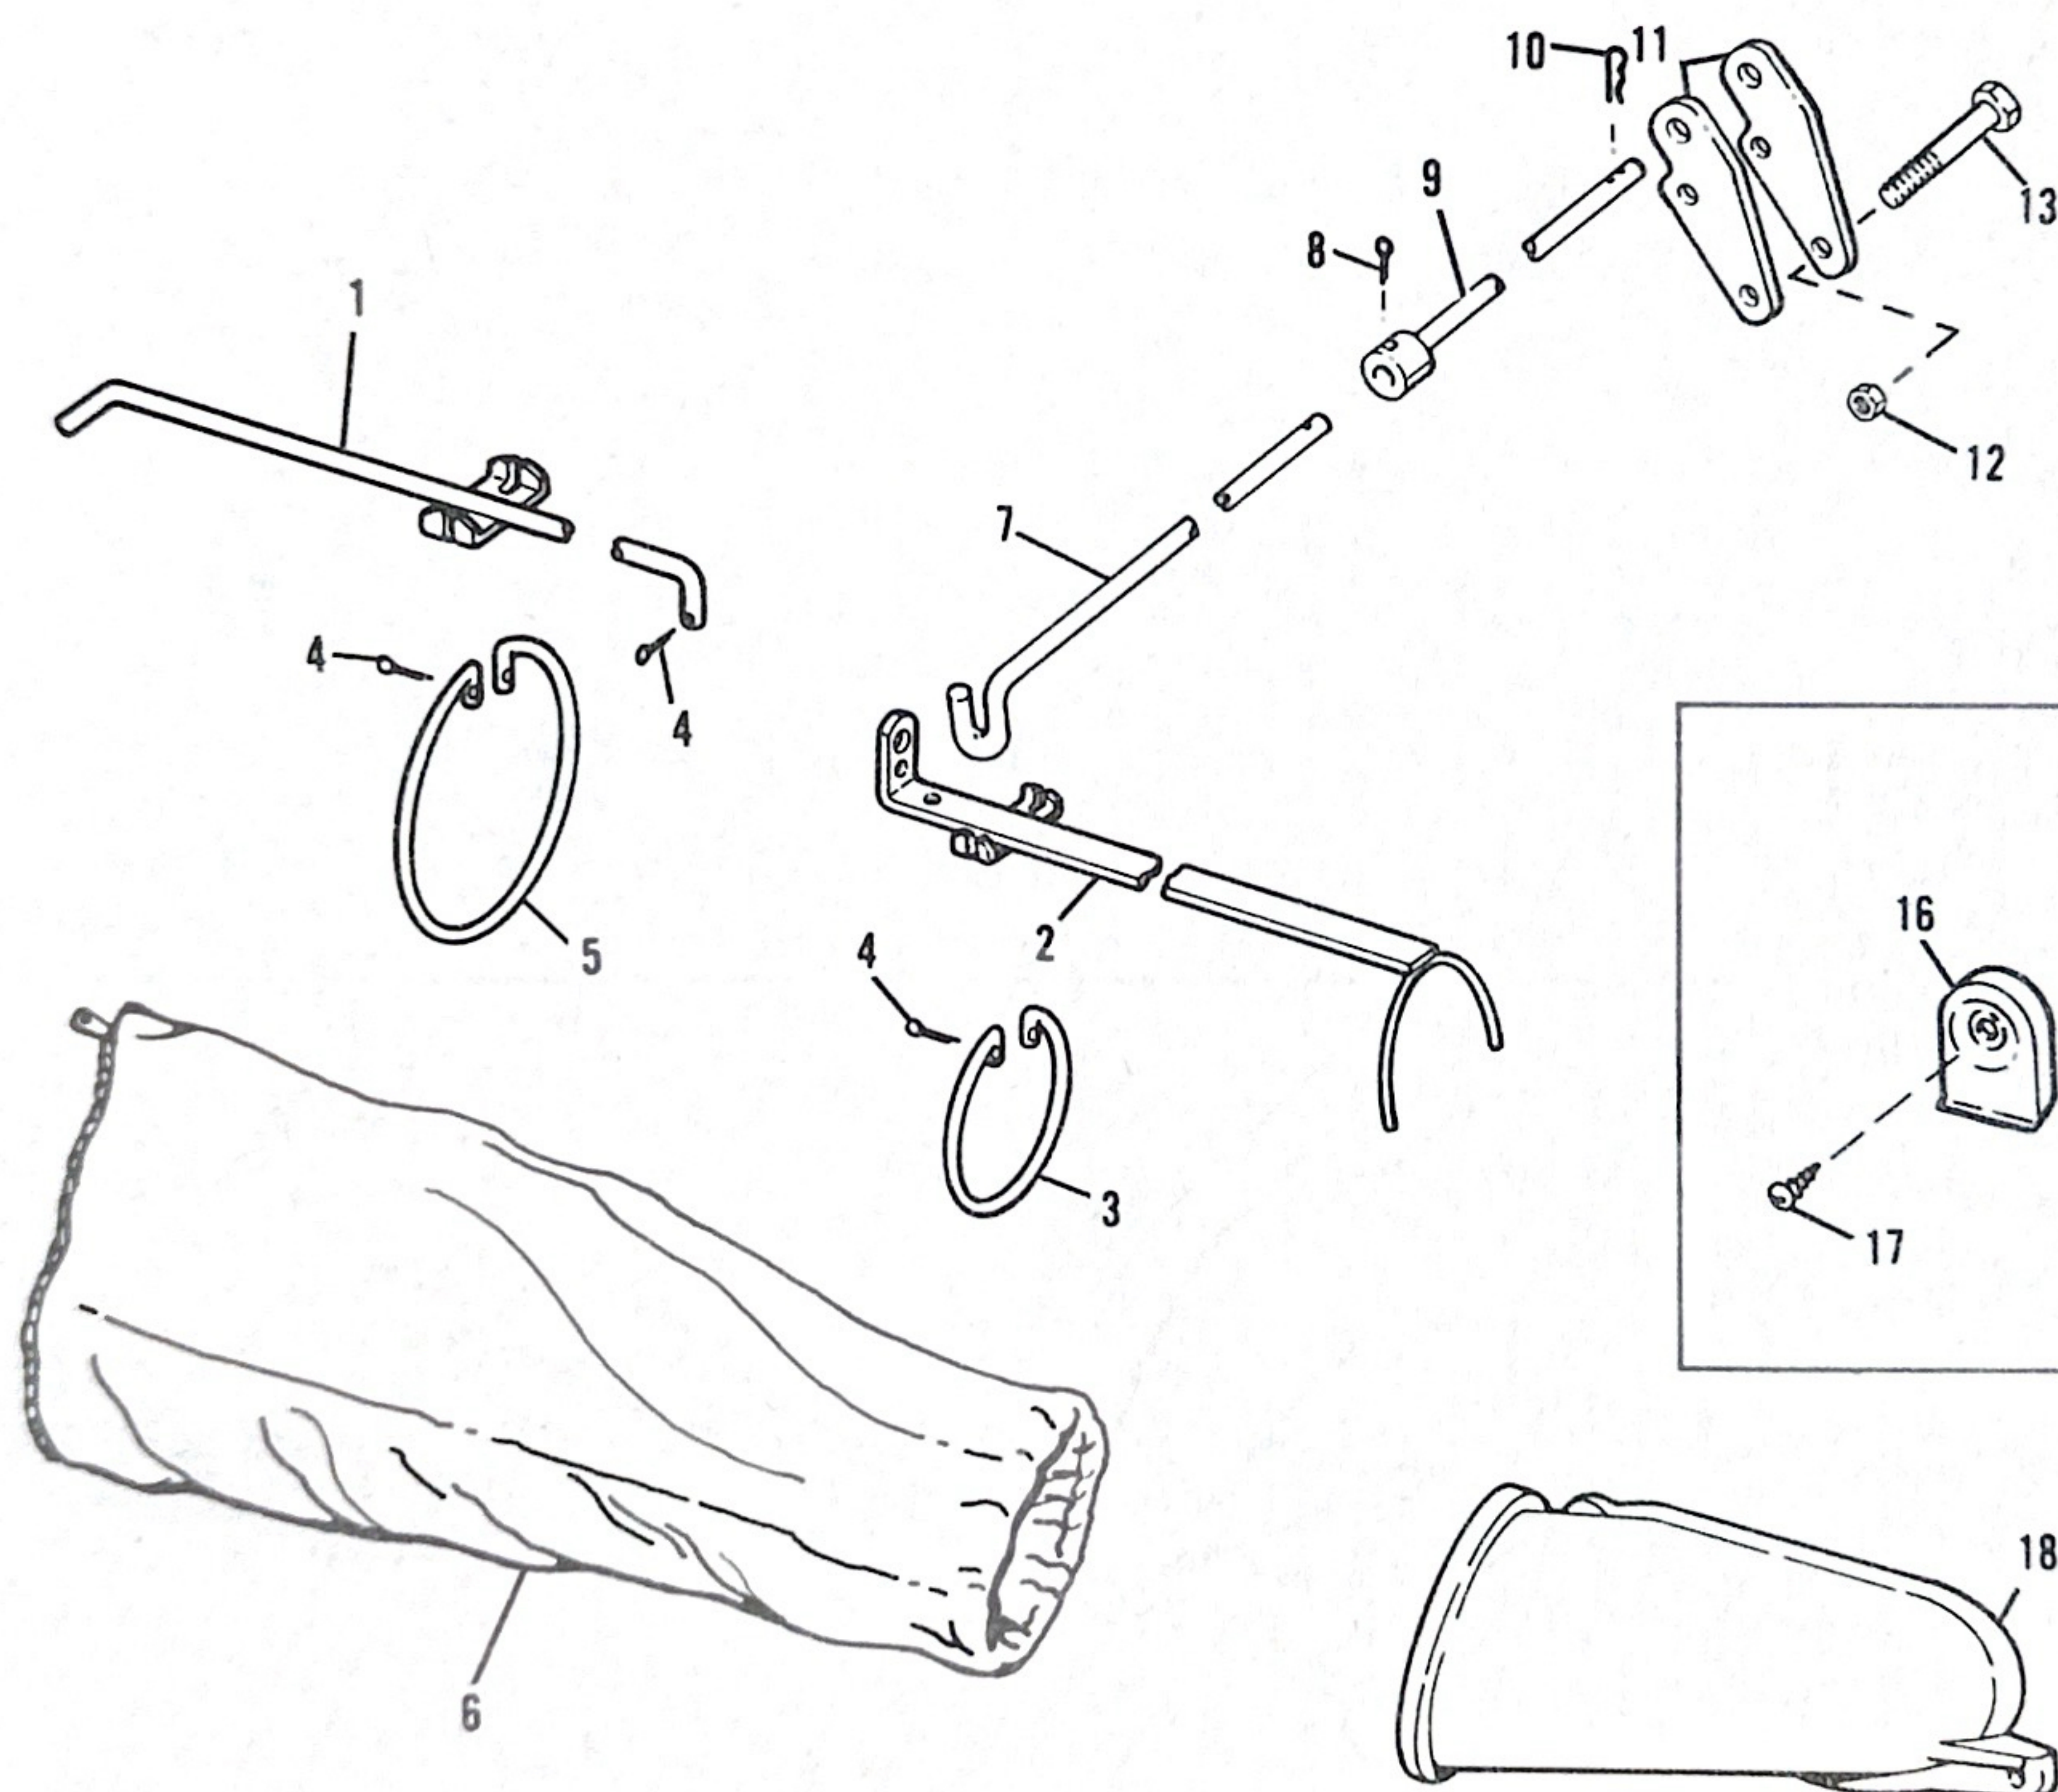

REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D,
1	1726793	Extension Rod	1
2	1726790	Bag Hanger.	1
3	1726795	Ring	1
4 ●	1100346	Cotter Pin, 3/32 x 3/4	5
5	1726794	Ring	1
6	1731985	Leaf Bag	1
7	1731424	Bag Hanger.	1
8 ●	1100351	Cotter Pin, 1/8 x 1-1/4	1
9	1731983	Support Rod	1
10	1703011	Spring Cotter	2
11	1731423	Support Bracket	2

REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D,
12 ●	1110106	Lock Nut, 1/4-20	4
13 ●	1100806	Capscrew, 1/4-20 x 1-1/4 . .	4
14	1731455	Exhaust Deflector, 1-5/8" Dia. (Model 6880) .	1
15	1732215	Exhaust Deflector (Model 6882 B & S 4 H.P.)	1
16	1732216	Exhaust Deflector (Model 6882 B & S 3-1/2 H.P.) . . .	1
17	1731453	Screw	1
18	1894112	Chute	1

● Common Hardware - Purchase Locally (Grade 5 where applicable).